

Solar 140/160W-V

Shop Manual

023-00065E

Serial Number 1001 and Up

Daewoo reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Solar 140/160W-V

Serial Number 1001 and Up

Pub.No. 023-00065E



Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

TABLE OF CONTENTS

Safety

Wheel Excavator Safety	S0102025K
------------------------------	-----------

Specifications

Specifications for S140W-V / 160W-V	S0202055K
---	-----------

General Maintenance

General Maintenance Procedures	S0302000
Standard Torques	S0309000

Upper Structure

Cab	S0402040K
Counterweight.....	S0403015K
Fuel Tank.....	S0405045K
Fuel Transfer Pump	S0405500
Swing Bearing.....	S0407010
Swing Reduction Gearbox.....	S0408025K

Lower Structure and Chassis

Ram Lock Valve Operation.....	S0503000
-------------------------------	----------

Engine and Drive Train

Front Axle (Dana)	S0602055K
Rear Axle (Dana)	S0602056K
Air-Conditioner	S0605060K
Transmission (ZF 2HL-100).....	S0607055K
Drive Coupling (Main Pump).....	S0609000

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment	S0702065K
Accumulator.....	S0703010K
Center Joint (Swivel).....	S0704070
Cylinders.....	S0705000
Swing Motor.....	S0707260
Travel Motor.....	S0707350
Main Pump (Tongmyung)	S0708306K
Gear Pump (Steering Pump & Brake Pump).....	S0708435K
Brake Supply Valve	S0709220
Counterbalance Valve	S0709300
Main Control Valve	S0709416K
Pilot Control Valve (Work Lever / Joystick).....	S0709451K
Steering Valve	S0709710
Dozer Control Valve.....	S0709905K
Hydraulic Schematic (S140W-V / 160W-V)	S0792145K

Electrical System

Electrical System	S0802125K
Electrical Schematic (S140W-V / 160W-V).....	S0892075K

Attachments

Boom and Arm.....	S0902060
Bucket.....	S0904000

Publication Request for Proposed Revision

SAFETY



WHEEL EXCAVATOR SAFETY



CAUTION!

Follow all safety recommendations and safe shop practices outlined in the front of this manual or those contained within this section.

Always use tools and equipment that is in good working order.

Use lifting and hoisting equipment capable of safely handling load.

Remember, that ultimately safety is your own personal responsibility.

MODEL	SERIAL NUMBER RANGE
Solar 140W-V	1001 and Up
Solar 160W-V	1001 and Up
Solar 180W-V	1001 and Up
Solar 210W-V	1001 and Up

TABLE OF CONTENTS

- To the Operator of a Daewoo Excavator 3
- General Safety Essentials 6
- Location of Safety Labels 6
- Summary of Safety Precautions for Lifting in Digging Mode 7
- Unauthorized Modifications 8
- General Hazard Information 8
- Before Starting Engine 17
- Machine Operation 20
- Maintenance 25
- Battery 33
- Towing 35
- Shipping and Transportation 36
- Lifting With Sling..... 36

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com