

Solar 180W-V

Shop Manual

023-00068E

Serial Number 1001 and Up

February 2003

Daewoo reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Solar 180W-V

Serial Number 1001 and Up

Pub.No. 023-00068E



Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

TABLE OF CONTENTS

Safety

Wheel Excavator Safety	S0102025K
------------------------------	-----------

Specifications

Specifications for Solar 180W-V	S0202065K
---------------------------------------	-----------

General Maintenance

General Maintenance Procedures	S0302000
Standard Torques	S0309000

Upper Structure

Cab	S0402040K
Counterweight.....	S0403015K
Fuel Tank.....	S0405105K
Fuel Transfer Pump	S0405500
Swing Bearing.....	S0407010
Swing Reduction Gearbox.....	S0408050

Lower Structure and Chassis

Ram Lock Valve Operation.....	S0503000
-------------------------------	----------

Engine and Drive Train

Front Axle (ZF-Axle)	S0602120
Rear Axle (ZF-Axle).....	S0602130
Air-Conditioner.....	S0605060K
Transmission (ZF 2HL-100).....	S0607050
Drive Coupling (Main Pump).....	S0609010K

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment	S0702155K
--	-----------

Accumulator.....	S0703010K
Center Joint (Swivel).....	S0704070
Cylinders.....	S0705000
Swing Motor.....	S0707260
Travel Motor.....	S0707351K
Main Pump.....	S0708307K
Brake Supply Valve	S0709220
Counterbalance Valve	S0709300
Main Control Valve (Toshiba DX28)	S0709440
Pilot Control Valve (Work Lever / Joystick).....	S0709451K
Steering Valve	S0709710
Dozer Control Valve.....	S0709905K
Hydraulic Schematic (SOLAR 180W-V)	S0792142K

Electrical System

Electrical System	S0802125K
Electrical Schematic (Solar 180W-V).....	S0892145K

Attachments

Boom and Arm.....	S0902120
Bucket.....	S0904000

Publication Request for Proposed Revision

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com