

PARTS MANUAL

**ELECTRIC
E25-30-35XM,
E40XMS**


**LAST USED ON S/N D114V-3841,
EXCLUDING 3719, 3837**

(D114)

CUSTOMER EDITION

HYSTER

ILLUSTRATED CONTENTS

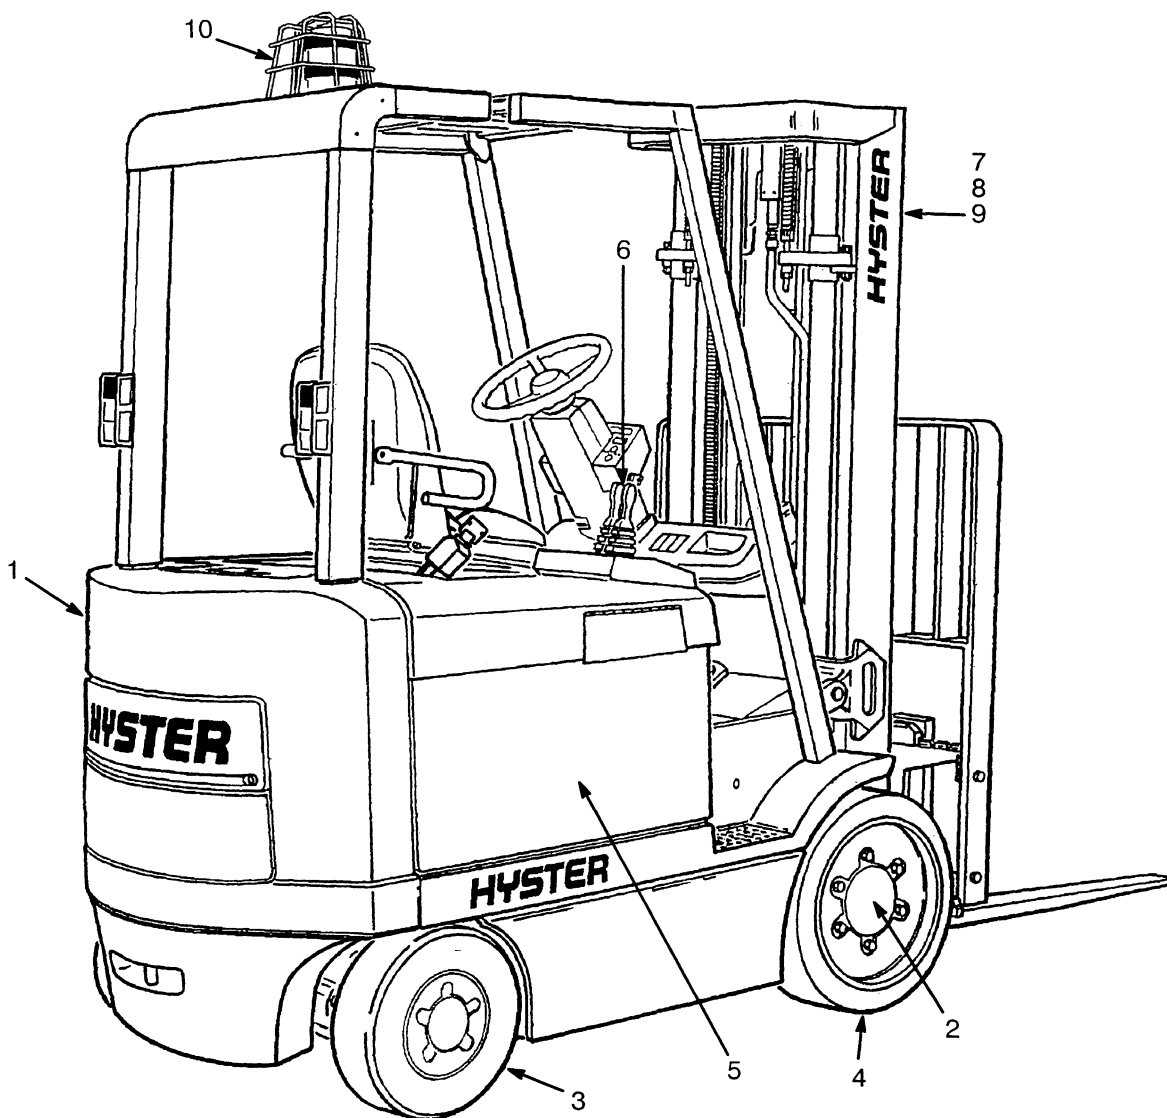

REF	DIVISION	PAGE
1	FRAME	5
2	DRIVE AXLE	23
3	STEERING	31
4	BRAKE/ACCELERATOR	53
5	ELECTRICAL	67
6	HYDRAULIC	109
7	MAST (TWO-STAGE LIMITED FREE-LIFT-A551)	141
8	MAST (THREE-STAGE FULL FREE-LIFT-A555)	161
9	MAST (TWO-STAGE FULL FREE-LIFT-A559)	187
10	OPTIONAL	211
11	NUMERICAL INDEX	227

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCELERATOR (Figure 39)	Page 65
ACCELERATOR PEDAL (Figure 40)	Page 66
B	
BACKUP ALARM (Figure 134)	Page 225
BARK BRAKE (Figure 38) SEAT ACTUATED	Page 64
BATTERY CONNECTOR ASSY (Figure 57)	Page 96
BATTERY SLIDE AND ROLLER TRAY (Figure 129)	Page 218
BRAKE (Figure 34) LAST USED ON S/N D114V-2285, EXCEPT 2282,2285, INCLUDING 2287	Page 56
BRAKE (Figure 35) FIRST USED ON S/N D114V-2286, INCLUDING 2282,2285, EXCEPT 2287	Page 58
BRAKE AND BACKUP LIGHT (12V) (Figure 130)	Page 220
BRAKE PEDAL LINKAGE (Figure 32)	Page 54
C	
CARRIAGE (Figure 107) THREE-STAGE FULL FREE-LIFT MAST	Page 178
CARRIAGE (Figure 120) TWO-STAGE FULL FREE-LIFT MAST	Page 202
CARRIAGE (Figure 93) TWO-STAGE LIMITED FREE-LIFT MAST	Page 152
CONTACTOR (Figure 51) 1A AND REGENERATIVE BRAKING	Page 89
CONTACTOR (Figure 52) 1A AND PUMP	Page 90

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
C (Continued)	
CONTACTOR PANEL (Figure 46) CONTACTOR HYDRAULIC	Page 80
CONTACTOR PANEL (Figure 47) SCR HYDRAULIC	Page 82
CONTROL PANEL (Figure 43) CONTACTOR HYDRAULIC	Page 74
CONTROL PANEL (Figure 44) SCR HYDRAULIC	Page 76
CONTROL VALVE (Figure 85) THREE FUNCTION	Page 136
CONTROL VALVE (Figure 86) FOUR FUNCTION	Page 138
COUNTERWEIGHT (Figure 8)	Page 14
COVERS (Figure 5)	Page 10
COWL ELECTRICAL (Figure 54)	Page 92
D	
DIFFERENTIAL (Figure 14)	Page 28
DIRECTIONAL CONTACTOR (Figure 50)	Page 88
DOME LIGHT (Figure 133) LAST USED ON S/N D114V-2232, INCLUDING 2234,2243,2252	Page 224
DRIVE AND REAR LIGHTS (Figure 131)	Page 222
DRIVE AXLE (Figure 12)	Page 24
DRIVE MOTOR MOUNT (Figure 70)	Page 114

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
E	
ELECTRICAL (Figure 41) SCR HYDRAULIC	Page 70
ELECTRICAL (Figure 42) CONTACTOR HYDRAULIC	Page 72
F	
FORK (Figure 112) THREE-STAGE FULL FREE-LIFT MAST	Page 186
FORK (Figure 125) TWO-STAGE FULL FREE-LIFT MAST	Page 210
FORK (Figure 98) TWO-STAGE LIMITED FREE-LIFT MAST	Page 160
FRAME (Figure 4)	Page 8
FREE-LIFT CYLINDER (Figure 106) THREE-STAGE FULL FREE-LIFT MAST	Page 176
FREE-LIFT CYLINDER (Figure 119) TWO-STAGE FULL FREE-LIFT MAST	Page 200
FREE-LIFT (Figure 103) THREE-STAGE FULL FREE-LIFT MAST	Page 170
FREE-LIFT (Figure 116) TWO-STAGE FULL FREE-LIFT MAST	Page 194
H	
HANDLEVER (Figure 84)	Page 134
HEADER HOSE (Figure 110) (THREE FUNCTION) THREE-STAGE FULL FREE-LIFT MAST	Page 182
HEADER HOSE (Figure 111) (FOUR FUNCTION) THREE-STAGE FULL FREE-LIFT MAST	Page 184

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
H (Continued)	
HEADER HOSE (Figure 123) (THREE FUNCTION) TWO-STAGE FULL FREE-LIFT MAST	Page 206
HEADER HOSE (Figure 124) (FOUR FUNCTION) TWO-STAGE FULL FREE-LIFT MAST	Page 208
HEADER HOSE (Figure 97) (FOUR FUNCTION) TWO-STAGE LIMITED FREE-LIFT MAST	Page 158
HEADER HOSE (Figure 96) (THREE FUNCTION) TWO-STAGE LIMITED FREE-LIFT MAST	Page 156
HOOD (Figure 9)	Page 16
HYDRAULIC (Figure 69)	Page 112
HYDRAULIC MOTOR (Figure 75) ECONOMY TRUCK LAST USED ON S/N D114V-2087, EXCEPT 2039,2085	Page 120
HYDRAULIC MOTOR (Figure 76) ECONOMY TRUCK FIRST USED ON S/N D114V-2088, INCLUDING 2039,2085	Page 122
HYDRAULIC MOTOR (Figure 77) PREMIUM TRUCK LAST USED ON S/N D114V-2087, EXCEPT 2039,2085	Page 124
HYDRAULIC MOTOR (Figure 78) PREMIUM TRUCK FIRST USED ON S/N D114V-2088, INCLUDING 2039,2085	Page 126
HYDRAULIC MOTOR (Figure 79) PREMIUM TRUCK LAST USED ON S/N PENDING D114V-2087, EXCEPT 2039,2085 IDENTIFY BY PART NUMBER	Page 127
HYDRAULIC MOTOR (Figure 80) PREMIUM TRUCK (OPEN CONSTRUCTION WITH BWI) FIRST USED ON S/N D114V-2088, INCLUDING 2039,2085 IDENTIFY BY PART NUMBER	Page 128
HYDRAULIC MOTOR (Figure 81) PREMIUM TRUCK (CLOSED CONSTRUCTION WITH BWI) FIRST USED ON S/N D114V-2088, INCLUDING 2039,2085 IDENTIFY BY PART NUMBER	Page 129

TABLE OF CONTENTS

DESCRIPTION **PAGE**

H (Continued)

HYDRAULIC PUMP (Figure 71) IDENTIFY BY PART NUMBER LAST USED ON S/N D114V-3155	Page 115
HYDRAULIC PUMP (Figure 72) 12cc SINGLE GEAR PUMP IDENTIFY BY PART NUMBER FIRST USED ON S/N D114V-3156	Page 116
HYDRAULIC PUMP (Figure 73) 19cc DOUBLE GEAR PUMP IDENTIFY BY PART NUMBER FIRST USED ON S/N D114V-3156	Page 117
HYDRAULIC PUMP (Figure 74) IDENTIFY BY PART NUMBER	Page 118
HYDRAULIC TANK (Figure 87)	Page 140

I

INNER MAST (Figure 101) THREE-STAGE FULL FREE-LIFT MAST	Page 166
INNER MAST (Figure 114) TWO-STAGE FULL FREE-LIFT MAST	Page 190
INNER MAST (Figure 89) TWO-STAGE LIMITED FREE-LIFT MAST	Page 144
INSTRUMENT CLUSTER (Figure 56) ECONOMY TRUCK	Page 94
INTERMEDIATE MAST (Figure 100) THREE-STAGE FULL FREE-LIFT MAST	Page 164

L

LABELS AND PAINT (Figure 3)	Page 6
LIFT CYLINDER, LH (Figure 91) TWO-STAGE LIMITED FREE-LIFT MAST	Page 148
LIFT CYLINDER, RH (Figure 92) TWO-STAGE LIMITED FREE-LIFT MAST	Page 150

TABLE OF CONTENTS

DESCRIPTION	PAGE
L (Continued)	
LIFT (Figure 90) TWO-STAGE LIMITED FREE-LIFT MAST	Page 146
LIGHT HARNESS (Figure 135)	Page 226
LOAD BACKREST EXTENSION (Figure 108) THREE-STAGE FULL FREE-LIFT MAST	Page 179
LOAD BACKREST EXTENSION (Figure 121) TWO-STAGE FULL FREE-LIFT MAST	Page 203
LOAD BACKREST EXTENSION (Figure 94) TWO-STAGE LIMITED FREE-LIFT MAST	Page 153
M	
MAIN LIFT CYLINDER, LH (Figure 104) THREE-STAGE FULL FREE-LIFT MAST	Page 172
MAIN LIFT CYLINDER, LH (Figure 117) TWO-STAGE FULL FREE-LIFT MAST	Page 196
MAIN LIFT CYLINDER, RH (Figure 105) THREE-STAGE FULL FREE-LIFT MAST	Page 174
MAIN LIFT CYLINDER, RH (Figure 118) TWO-STAGE FULL FREE-LIFT MAST	Page 198
MAIN LIFT (Figure 102) THREE-STAGE FULL FREE-LIFT MAST	Page 168
MAIN LIFT (Figure 115) TWO-STAGE FULL FREE-LIFT MAST	Page 192
MAST INSTALLATION (Figure 109) THREE-STAGE FULL FREE-LIFT MAST	Page 180
MAST INSTALLATION (Figure 122) TWO-STAGE FULL FREE-LIFT MAST	Page 204
MAST INSTALLATION (Figure 95) TWO-STAGE LIMITED FREE-LIFT MAST	Page 154
MASTER CYLINDER (Figure 33)	Page 55

TABLE OF CONTENTS

DESCRIPTION	PAGE
N	
NON-SUSPENSION SEAT (Figure 10)	Page 18
O	
OUTER MAST (Figure 113) TWO-STAGE FULL FREE-LIFT MAST	Page 188
OUTER MAST (Figure 88) TWO-STAGE LIMITED FREE-LIFT MAST	Page 142
OUTER MAST (Figure 99) THREE-STAGE FULL FREE-LIFT MAST	Page 162
OVERHEAD GUARD (Figure 6) LAST USED ON S/N D114V-1801, INCLUDING 1812	Page 12
OVERHEAD GUARD (Figure 7) FIRST USED ON S/N D114V-1802, EXCEPT 1812	Page 13
P	
PARK BRAKE (Figure 36) LEVER ACTUATED	Page 60
PARK BRAKE LINKAGE (Figure 37) SEAT ACTUATED	Page 62
PUBLICATIONS (Figure 1)	Page 2
PUMP PANEL (Figure 49)	Page 86
R	
RECOMMENDED SPARE PARTS LIST (Figure 2)	Page 3

TABLE OF CONTENTS

DESCRIPTION	PAGE
S	
SHIFT LEVER (Figure 55)	Page 93
SIDESHIFT CARRIAGE (Figure 127)	Page 214
SIDESHIFT CYLINDER (Figure 128)	Page 216
STEERING AXLE (Figure 31)	Page 50
STEERING CONTACTOR (Figure 53)	Page 91
STEERING CONTROL UNIT (Figure 18) LAST USED ON S/N D114V-2817	Page 34
STEERING CONTROL UNIT (Figure 19) FIRST USED ON S/N D114V-2818	Page 35
STEERING CYLINDER (Figure 21) LAST USED ON DATE BREAK 6/96	Page 38
STEERING CYLINDER (Figure 22) FIRST USED ON DATE BREAK 6/96	Page 40
STEERING HYDRAULIC (Figure 20)	Page 36
STEERING MOTOR (Figure 26) LAST USED ON S/N D114V-2744, INCLUDING 2751-54,2764,2765,2767	Page 45
STEERING MOTOR (Figure 27) WITH BRUSH WEAR INDICATOR USED ON S/N D114V-2745, EXCEPT 2751-54,2764,2765,2767 THRU S/N D114V-3450, INCLUDING 3456,3470,3471,3475	Page 46
STEERING MOTOR (Figure 28) WITH BRUSH WEAR INDICATOR FIRST USED ON S/N D114V-3451, EXCEPT 3456,3470,3471,3475 ...	Page 47
STEERING MOTOR (Figure 29) WITHOUT BRUSH WEAR INDICATOR USED ON S/N D114V-2745, EXCEPT 2751-54,2764,2765,2767 THRU S/N D114V-3536, EXCEPT 3527	Page 48
STEERING MOTOR (Figure 30) WITHOUT BRUSH WEAR INDICATOR FIRST USED ON S/N D114V-3537, INCLUDING 3527	Page 49

TABLE OF CONTENTS

<u>DESCRIPTION</u>	<u>PAGE</u>
S (Continued)	
STEERING POD (Figure 17)	Page 32
STEERING PUMP (Figure 23) LAST USED ON DATE BREAK 4/97	Page 42
STEERING PUMP (Figure 24) USED ON DATE BREAK 4/97 THRU S/N D114V-2817	Page 43
STEERING PUMP (Figure 25) FIRST USED ON S/N D114V-2818	Page 44
STROBE LIGHT (Figure 132)	Page 223
SUSPENSION SEAT (Figure 11)	Page 20
T	
TILT CYLINDER (Figure 82)	Page 130
TIRE AND WHEEL (Figure 126)	Page 212
TRACTION MOTOR (Figure 15) ECONOMY TRUCK	Page 29
TRACTION MOTOR (Figure 16) PREMIUM TRUCK	Page 30
TRACTION PANEL (Figure 48)	Page 84
TRANSMISSION (Figure 13)	Page 26
V	
VALVE ATTACHING PARTS (Figure 83)	Page 132
W	
WIRE HARNESS (Figure 58) ON-DEMAND STEERING	Page 97
WIRE HARNESS (Figure 59) INSTRUMENT CLUSTER (PREMIUM TRUCK)	Page 98

TABLE OF CONTENTS

DESCRIPTION	PAGE
W (Continued)	
WIRE HARNESS (Figure 60) INSTRUMENT CLUSTER (ECONOMY TRUCK)	Page 99
WIRE HARNESS (Figure 61) INSTRUMENT CLUSTER (PREMIUM TRUCK W/TMM)	Page 100
WIRE HARNESS (Figure 62) IGNITION SWITCH	Page 101
WIRE HARNESS (Figure 63) CHASSIS LIGHT LAST USED ON DATE BREAK 8/97	Page 102
WIRE HARNESS (Figure 64) CHASSIS LIGHT FIRST USED ON DATE BREAK 8/97	Page 103
WIRE HARNESS (Figure 65) STEER MOTOR (SCR HYDRAULICS)	Page 104
WIRE HARNESS (Figure 66) HANDLEVER (CONTACTOR HYDRAULICS)	Page 105
WIRE HARNESS (Figure 67) HANDLEVER (SCR HYDRAULICS)	Page 106
WIRE HARNESS (Figure 68) MAIN	Page 107

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys, symbols and footnotes.

HYSTER SERIAL CODE D177-U.S.

3 → **DESCRIPTION** → **TABLE OF CONTENTS** → **PAGE NO.**

STEERING CONTROL UNIT (Figure 173)
LAST USED ON S/N PENDING PER ECN 59650-27 Page 316

4 →

STEERING CONTROL UNIT (Figure 173)
LAST USED ON S/N PENDING PER ECN 59650-27 Page 316

5 →

HYSTER SERIAL CODE D177

NUMERICAL INDEX

PART NO	PAGE NO	REF NO	PART NO	PAGE NO	REF NO	PART NO	PAGE NO	REF NO	PART NO	PAGE NO	REF NO
126	171	14	14386	209	39	149	43	8	303	15	30
142	175	17						8	311	19	16187
								97	15223	367	9
								31	15225	305	29
								15	15227	305	39
								14	15236	327	14
								13		351	3
								0		352	3
								1		381	3
								2		16374	59
								1		16379	57
								2		16480	333
								2			28

HYSTER SERIAL CODE D177-U.S.

1 → **ILLUSTRATED CONTENTS**

9
10
11

6

4

12

5

2

REF	SECTION
1	Frame
2	Engine
3	Fuel System
4	Electrical System
5	Transmission
6	Steering System
7	Brake System
8	Hydraulic System
9	Two Stage Limited
10	Three Stage Full Fr
11	Two Stage Full Fre
12	Optional
13	Numerical Index

©1997 HYSTER COMPANY

Page 441
SERIAL CODE D177-U.S.

HYSTER

9 → **CARRIAGE (Figure 233)**
TWO STAGE FFL
SIX ROLLER
LAST USED ON S/N PENDING PER ECN 98765

2

5

3

8

4

2

3

10

7

6

4

2

3

6

KEY:

A: H45-550M
B: H60-650M

REF.	PART NO.	NAME OF PART	QTY
a		Carriage Assy	1
b	1345239	Carriage	1
1	1345240	Carriage	1
1	1345264	Stubshaft	1
2	1345218	Load Roller	6
2	1395172	Load Roller ("A" Standard)	4
2	1345219	Load Roller ("B" 0.76 mm)	6
2	1345220	Load Roller ("C" 1.52 mm)	6
3	12991	Snap Ring	6
4	1345263	Shim	6
		APAR	

REF.	PART NO.	NAME OF PART	QTY
5	366116	Spacer	2
6	1369345	Chain Anchor	2
6	1369344	Chain Anchor	2
7	317735	Pin	2
8	131358	Snap Ring	2
9	323161	Pin	4
10	15200	Cotter Pin	2

a → Table Above
b Last Used On S/N Pending ECN 72449
c First Used On S/N Pending ECN 72446

©1997 HYSTER COMPANY

See Service Manual for service procedures

10/20/1997

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com