

Backhoe Loader

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3A - Maintenance](#)

[Section 3B - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section D - Controls](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)



Publication No.
9803/7130-08



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support



Notes:

General Information

Service Manual - Backhoe Loader

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3A - Maintenance](#)

[Section 3B - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section D - Controls](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)



Publication No.
9803/7130-08



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support



Notes:



Section 1 - General Information

Contents	Page No.
Introduction	
About this Publication	1-1
Using the Service Manual	1-1
Section Numbering	1-1
Left Side, Right Side	1-1
Machine Nomenclature	1-2
Machine Identification	
Machine Identification Plate	1-3
Typical Vehicle Identification Number (VIN)	1-3
Typical Product Identification Number (PIN)	1-4
Component Identification Plates	1-5
Typical Engine Identification Number	1-5
Transmission Identification Numbers	1-6
Torque Settings	
Zinc Plated Fasteners and Dacromet Fasteners	1-7
Introduction	1-7
Bolts and Screws	1-7
Hydraulic Connections	1-11
'O' Ring Face Seal System	1-11
'Torque Stop' Hose System	1-14
'Quick-Connect' Pilot Hoses	1-15
Disconnecting	1-15
Connecting	1-15
Service Tools	
Numerical List	1-17
Service Aids	
Sealing and Retaining Compounds	1-21
Terms and Definitions	
Colour Coding	1-23
Hydraulic Schematic Colour Codes	1-23

Please Click Here To Download The Complete Manual
Download Other Manuals
If Having Any Questions Feel Free To Contact us

admin@servicemanualbit.com