




**Bobcat®**

**316**

# **Service Manual**

**S/N 522811001 & Above**

**S/N 522911001 & Above**

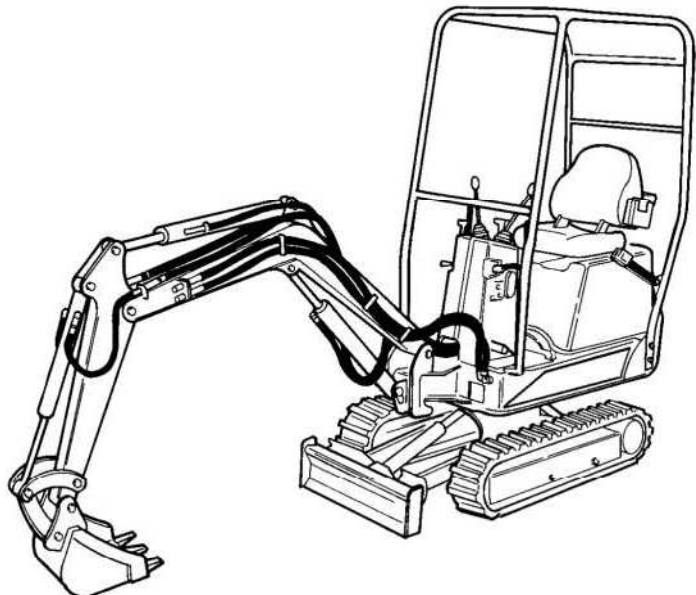



# MAINTENANCE SAFETY



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

### CORRECT



B-10731a

- ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

### CORRECT



B-15797

- ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jacks.


### CORRECT



B-15798

- ⚠ Cleaning and maintenance are required daily.

### WRONG

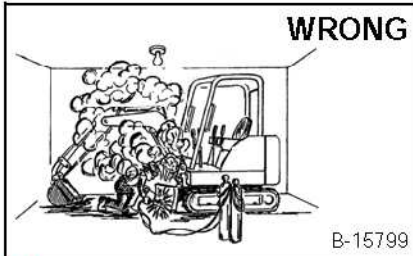

B-15799

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.


### WRONG



B-15800

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.


### WRONG

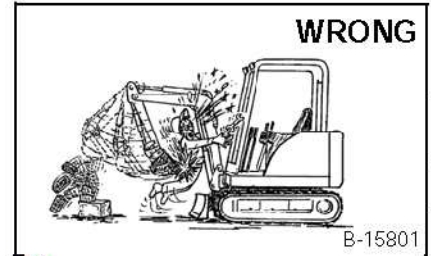

B-15801

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG

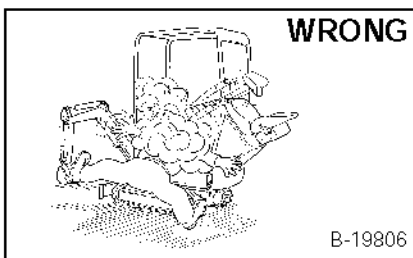

B-19806

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

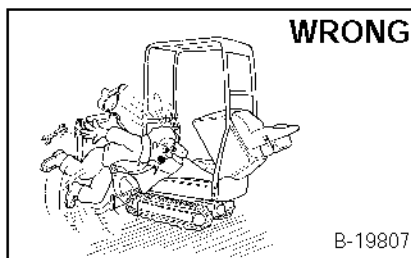

B-19807

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep side access covers closed except for service.

### WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.

MSW26-0905



**Bobcat®**

## ALPHABETICAL INDEX

AIR CLEANER .....	10-01, 60-01	INSTRUMENT PANEL .....	50-01
ALTERNATOR .....	50-01	ISO HYDRAULIC CONTROL CHANGE.....	20-01
ALTERNATOR BELT .....	10-01	LIFTING THE EXCAVATOR .....	10-01
ARM .....	40-01	LIGHT .....	50-01
ARM CYLINDER .....	20-01	LUBRICATING THE EXCAVATOR .....	10-01
AUXILIARY HYDRAULIC CONTROL VALVE .....	20-01	MAIN RELIEF VALVES.....	20-01
BATTERY .....	50-01	PORT RELIEF VALVES.....	20-01
BLADE .....	30-01	RADIATOR .....	60-01
BLADE CONTROL.....	40-01	REAR BUMPER .....	40-01
BLADE CYLINDER .....	20-01	RECONDITIONING THE ENGINE .....	60-01
BLADE EXTENSION .....	10-01	SEAT AND SEAT MOUNT .....	40-01
BOOM.....	40-01	SERVICE SCHEDULE .....	10-01
BOOM CYLINDER.....	20-01	SPARK ARRESTOR MUFFLER.....	10-01, 60-02
BOOM SWING CYLINDER.....	20-01	STANDARD HYDRAULIC CONTROL CHANGE .....	20-01
BOOM OFFSET FRAME .....	40-01	STARTER .....	50-01
BUCKET .....	40-01	SWING BEARING .....	30-01
BUCKET CYLINDER .....	20-01	SWING MOTOR .....	20-01
BUCKET LINK .....	40-01	SWIVEL JOINT .....	20-01
CANOPY .....	40-01	TORQUE SPECIFICATIONS FOR BOLTS .....	SPEC-01
CONSOLE COVER .....	40-01	TRACKS .....	30-01
CONTROL LEVERS AND LINKAGE .....	40-01	TRACK DAMAGE IDENTIFICATION.....	30-01
CONTROL LOCKOUT .....	40-01	TRACK FRAME .....	30-01
CONVERSIONS .....	SPEC-01	TRACK FRAME EXPANSION CYLINDER.....	20-01
COOLING SYSTEM .....	10-01	TRACK FRAME EXPANSION VALVE .....	20-01
ELECTRICAL SYSTEM INFORMATION .....	50-01	TRACK IDLER.....	30-01
ENGINE .....	60-01	TRACK ROLLER.....	30-01
ENGINE COMPONENTS AND TESTING .....	60-01	TRANSPORTING THE EXCAVATOR.....	10-01
ENGINE COVER .....	10-01, 40-01	TRAVEL CONTROLS .....	40-01
ENGINE FLYWHEEL .....	60-01	TRAVEL MOTOR.....	10-01, 20-01
ENGINE LUBRICATION SYSTEM.....	10-01	TROUBLESHOOTING .....	60-02
ENGINE SPECIFICATIONS.....	SPEC-01	UPPERSTRUCTURE .....	40-01
ENGINE SPEED CONTROL .....	40-01	UPPERSTRUCTURE COVER .....	40-01
EXCAVATOR SPECIFICATIONS .....	SPEC-01	UPPERSTRUCTURE SLEW LOCK .....	10-01, 40-01
FOOT CONTROL PEDALS AND LINKAGE .....	40-01	VOLTAGE REGULATOR .....	50-01
FUEL, COOLANT AND LUBRICANTS .....	SPEC-01		
FUEL SYSTEM .....	10-01		
FUEL TANK.....	40-01		
HORN .....	40-01		
HYDRAULIC CONNECTION SPECIFICATIONS .....	SPEC-01		
HYDRAULIC CONTROL VALVE.....	20-01		
HYDRAULIC FILTER MOUNT .....	20-01		
HYDRAULIC FLUID SPECIFICATIONS .....	SPEC-01		
HYDRAULIC PUMP.....	20-01		
HYDRAULIC RESERVOIR .....	20-01		
HYDRAULIC SYSTEM .....	10-01		
HYDRAULIC SYSTEM INFORMATION .....	20-01		



**Bobcat®**

## CONTENTS

FOREWORD . . . . .	III
SAFETY INSTRUCTIONS . . . . .	V
SERIAL NUMBER LOCATIONS . . . . .	IX
IDENTIFICATION AND MACHINE SIGNS (DECALS) . . . . .	X
SAFETY AND MAINTENANCE . . . . .	10-1
HYDRAULIC SYSTEM . . . . .	20-1
UNDERCARRIAGE . . . . .	30-1
UPPERSTRUCTURE & SWING SECTION . . . . .	40-1
ELECTRICAL SYSTEM . . . . .	50-1
ENGINE SERVICE . . . . .	60-1
SPECIFICATIONS . . . . .	SPEC-1

**SAFETY &  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**UNDERCARRIAGE**

**UPPERSTRUCTURE  
& SWING  
SECTION**

**ELECTRICAL  
SYSTEM**

**ENGINE  
SERVICE**

**SPECIFICATIONS**

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**