



 
# Bobcat®

---

## Service Manual 430 Compact Excavator

---

**S/N AA8711001 & Above**  
**S/N AA8811001 & Above**  
**S/N AACF11001 & Above**  
**S/N AACG11001 & Above**

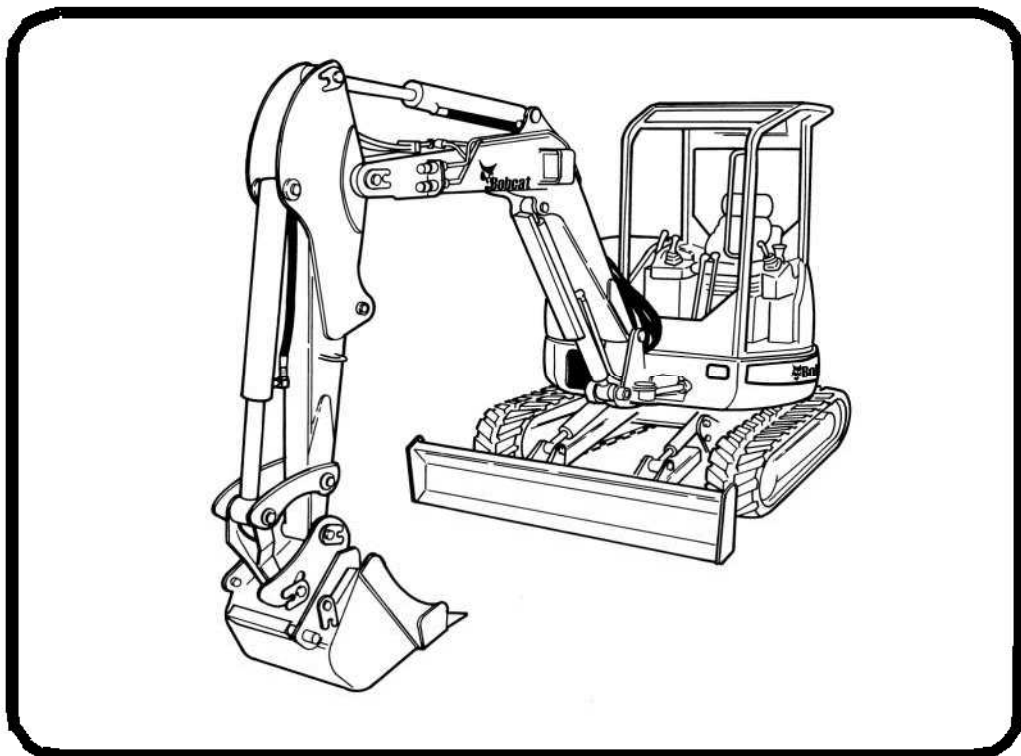



# MAINTENANCE SAFETY



## WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


**CORRECT**

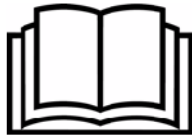

P-90216

- ⚠ Never service the Bobcat Hydraulic Excavator without instructions.


**CORRECT**

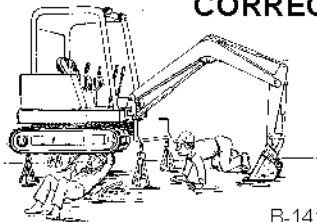 

B-14148

- ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.

**CORRECT**

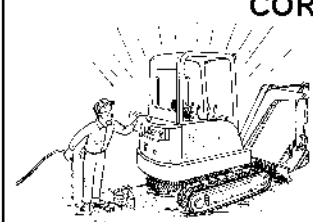 

B-14142

- ⚠ Cleaning and maintenance are required daily.


**WRONG**



 B-14147

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.


**WRONG**

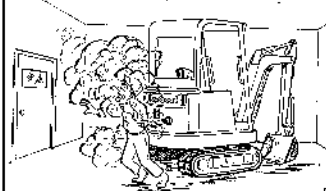

B-14141

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

**WRONG**

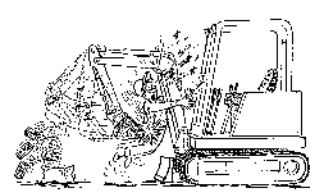 

B-14145

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


**WRONG**



 B-14146

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

**WRONG**

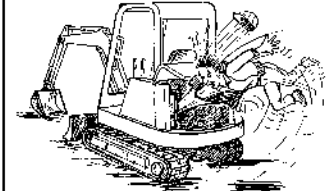

B-14143

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the excavator.

**WRONG**



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW20-0409



**Bobcat®**

## ALPHABETICAL INDEX

AIR CLEANER .....	10-01, 70-01	EVAPORATOR .....	80-01
AIR CONDITIONING SERVICE .....	80-01	EVAPORATOR/HEATER UNIT .....	80-01
AIR CONDITIONING SYSTEM FLOW .....	80-01	EXPANSION VALVE .....	80-01
ALTERNATOR .....	60-01	EXTENDIBLE ARM CYLINDER .....	20-01
ANGLE BLADE .....	40-01	FAN/CHARGE PUMP .....	30-01
ANGLE BLADE ASSEMBLY .....	40-01	FLOORMAT AND FLOOR PLATES .....	50-01
ANGLE BLADE CUTTING EDGE .....	40-01	FUEL, COOLANT AND LUBRICANTS .....	SPEC-01
ANGLE BLADE CYLINDER .....	20-01	FUEL LEVEL SENDER .....	60-01
ANGLE BLADE VALVE .....	20-01	FUEL SYSTEM .....	10-01
ARM .....	50-01	FUEL TANK .....	50-01
ARM CYLINDER .....	20-01		
		GENERAL AIR CONDITIONING SERVICE GUIDELINES	
BASIC TROUBLESHOOTING .....	80-01	.....	80-01
BATTERY .....	60-01		
BLADE .....	40-01	HEATER AIR FILTER (WITH CAB OPTION ONLY)	
BLADE CONTROL .....	50-01	.....	10-01
BLADE CYLINDER .....	20-01	HEATER COIL .....	80-01
BLOWER FAN .....	80-01	HEATER VALVE .....	80-01
BOOM .....	50-01	HORN .....	50-01
BOOM CYLINDER .....	20-01	HYDRAULIC CONTROL VALVE .....	20-01
BOOM SWING CYLINDER .....	20-01	HYDRAULIC CONNECTION SPECS .....	SPEC-01
BOOM SWING LOCK VALVE .....	20-01	HYDRAULIC FLUID SPECIFICATIONS .....	SPEC-01
BUCKET .....	50-01	HYDRAULIC FILTER MOUNT .....	20-01
BUCKET CYLINDER .....	20-01	HYDRAULIC PUMP .....	20-01
BUILD UP VALVE .....	20-01	HYDRAULIC PUMP START-UP .....	20-01
		HYDRAULIC RESERVOIR .....	20-01
CAB .....	50-01	HYDRAULIC SYSTEM .....	10-01
CASE DRAIN FILTER .....	20-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CLAMP .....	50-01	HYDRAULIC X-CHANGE VALVE .....	50-01
CLAMP CYLINDER .....	20-01	HYDROSTATIC PUMP .....	30-01
COMPONENTS .....	80-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
COMPRESSOR .....	80-01		
CONDENSOR .....	80-01	LEFT CONTROL LEVER (JOYSTICK) .....	20-01
CONVERSIONS .....	SPEC-01	LEFT CONSOLE .....	50-01
CONTROL LINKAGE ASSEMBLY .....	50-01	LIFTING AND BLOCKING THE EXCAVATOR .....	10-01
CONTROL PATTERN SELECTOR VALVE .....	20-01	LIFTING THE EXCAVATOR .....	10-01
COOLING FAN .....	20-01	LIGHTS .....	60-01
COOLING SYSTEM .....	10-01	LOWER TRACK ROLLER .....	40-01
CROSSPORT RELIEF VALVE .....	20-01	LUBRICATION OF THE HYDRAULIC EXCAVATOR	
		.....	10-01
DELUXE INSTRUMENT PANEL SETUP .....	60-01	MAIN RELIEF VALVES .....	20-01
DIAGNOSTICS SERVICE CODE .....	60-01	MANIFOLD ASSEMBLY/ACCUMULATOR .....	20-01
DIRECT TO TANK VALVE .....	20-01	MUFFLER .....	70-01
DRIVE BELT .....	30-01		
DRIVE BELT SHIELD .....	30-01	OIL COOLER .....	20-01
		OPERATOR CAB (ROPS/TOPS) .....	10-01
ELECTRICAL SYSTEM INFORMATION .....	60-01		
ENGINE .....	70-01	PORT RELIEF VALVES .....	20-01
ENGINE ACCESSORY DRIVE BELT .....	10-01	PRESSURE REDUCING VALVE .....	20-01
ENGINE COMPONENTS AND TESTING .....	70-01	PRESSURE RELIEF VALVE .....	80-01
ENGINE FLYWHEEL .....	70-01	PRESSURE SWITCH .....	80-01
ENGINE LUBRICATION SYSTEM .....	10-01		
ENGINE SPECIFICATIONS .....	SPEC-01		
ENGINE SPEED CONTROL .....	50-01		

## ALPHABETICAL INDEX (CONT'D)

RADIATOR .....	70-01
RECEIVER/DRIER .....	80-01
RECONDITIONING THE ENGINE .....	70-01
REGULAR MAINTENANCE .....	80-01
RIGHT CONTROL LEVER (JOYSTICK) .....	20-01
RIGHT CONSOLE .....	50-01
RIGHT PEDAL AND LINKAGE .....	50-01
RIGHT SIDE COVER .....	10-01, 50-01
ROPS CANOPY .....	50-01
SAFETY .....	80-01
SEAT AND SEAT MOUNT .....	50-01
SERVICE SCHEDULE .....	10-01
SPARK ARRESTOR MUFFLER .....	10-01
SPECIFICATIONS .....	SPEC-01
STARTER .....	60-01
SWING CIRCLE GEAR .....	40-01
SWING FRAME .....	50-01
SWING MOTOR .....	20-01
SWING MOTOR DRIVE CARRIER .....	20-01
SWIVEL JOINT .....	20-01
SYSTEM CHARGING AND RECLAMATION .....	80-01
SYSTEM TROUBLESHOOTING CHART .....	80-01
TAILGATE .....	10-01, 50-01
TEMPERATURE/PRESSURE .....	80-01
THERMOSTAT .....	80-01
TORQUE SPECIFICATIONS .....	SPEC-01
TRACK DAMAGE IDENTIFICATION .....	40-01
TRACK FRAME .....	40-01
TRACK IDLER .....	40-01
TRACKS .....	40-01
TRANSPORTING THE EXCAVATOR .....	10-01
TRAVEL CONTROL VALVE .....	20-01
TRAVEL CONTROLS .....	50-01
TRAVEL MOTOR .....	10-01, 20-01
TRAVEL PILOT PRESSURE .....	30-01
TROUBLESHOOTING .....	70-01
TWO SPEED SWITCH .....	60-01
UPPERSTRUCTURE .....	50-01
UPPERSTRUCTURE SLEW LOCK .....	10-01, 50-01
UPPER TRACK ROLLER .....	40-01
X-CHANGE .....	50-01
X-CHANGE (HYDRAULIC) .....	50-01

## CONTENTS

FOREWORD . . . . .	II
SAFETY INSTRUCTIONS . . . . .	IV
FIRE PREVENTION . . . . .	VII
SERIAL NUMBER LOCATIONS . . . . .	VIII
DELIVERY REPORT . . . . .	IX
BOBCAT EXCAVATOR IDENTIFICATION . . . . .	X
SAFETY & MAINTENANCE . . . . .	10-01
HYDRAULIC SYSTEM . . . . .	20-01
HYDROSTATIC SYSTEM . . . . .	30-01
UNDERCARRIAGE . . . . .	40-01
UPPERSTRUCTURE & SWING SECTION . . . . .	50-01
ELECTRICAL SYSTEM & ANALYSIS . . . . .	60-01
ENGINE SERVICE . . . . .	70-01
HEATING, VENTILATION, AIR CONDITIONING . . . . .	80-01
SPECIFICATIONS . . . . .	SPEC-01

**SAFETY &  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**UNDER-  
CARRIAGE**

**UPPER-  
STRUCTURE &  
SWING SECTION**

**ELECTRICAL  
SYSTEM &  
ANALYSIS**

**ENGINE  
SERVICE**

**HVAC**

**SPECIFICATIONS**

**Please Click Here To Download The Complete Manual**  
**Download Other Manuals**  
**If Having Any Questions Feel Free To Contact us**

**[admin@servicemanualbit.com](mailto:admin@servicemanualbit.com)**