


REPAIR MANUAL

CLAAS

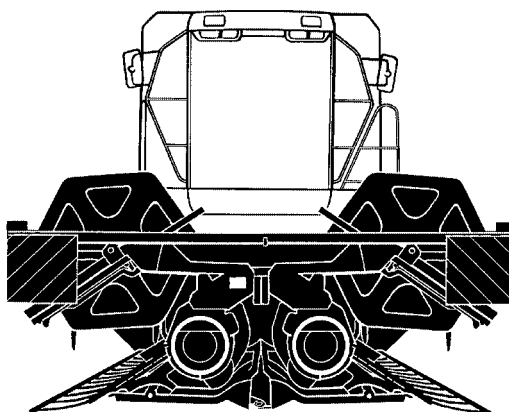

FOLDING CUTTERBAR

4.50 m – 5.40 m

LEXION

Read and follow safety instructions!

CONTENTS**1. Introduction**

General	1.1.1
Introduction	1.1.1
Introduction to the CLAAS Repair Manual	1.1.2
Key to symbols	1.1.3
Safety Rules	1.2.1
Important information	1.2.1
Identification of warning and danger signs	1.2.2
Correct use of the cutterbar	1.2.2
General safety and accident prevention regulations	1.2.2
Leaving the machine	1.2.2
Service	1.2.3
Basic rule	1.2.3
Hydraulic accumulators	1.2.3
General repair information	1.3.1
Reason of damage	1.3.1
Spare parts	1.3.1
Transmission	1.3.1
Tensioning the steel roller chains	1.3.1
Taper ring fasteners	1.3.1
Self-locking bolts	1.3.1
Liquid locking compound	1.3.1
Correct installation of lock collar bearings	1.3.2
Correct installation of adapter sleeve bearings	1.3.2
Ferrule fittings on hydraulic lines	1.3.2
Progressive ring fittings on hydraulic lines	1.3.2
Taper fittings on hydraulic lines	1.3.3
Welding	1.3.3
Some advice for speedy and correct repair work	1.3.3
Tightening torques	1.4.1
Bolts	1.4.1
Hydraulic screw fittings	1.4.2
Specifications	1.5.1
Lubricants chart	1.5.1
Drive diagram	1.6.1
General information on drives	1.6.1
Drive diagram, left-hand	1.6.1
Drive diagram, right-hand	1.6.2

2. Crop dividers

Crop dividers	2.1.1
Removing the long / short crop dividers	2.1.1
Installing the long / short crop dividers	2.1.1
Removing the special crop dividers	2.1.2
Special crop divider, disassembled	2.1.3
Installing the special crop divider	2.1.4

3. Cutterbar trough – Cutter bar

Cutter bar	3.1.1
Removing the knife	3.1.1
Installing the knife	3.1.1
Adjusting the knife height	3.1.2
Cutterbar lock (mechanical)	3.2.1
Removing the mechanical cutterbar lock	3.2.1
Mechanical cutterbar lock, disassembled	3.2.3
Installing the mechanical cutterbar lock	3.2.4

Rotating arm	3.3.1
Removing the rotating arm	3.3.1
Rotating arm, disassembled	3.3.4
Installing the rotating arm	3.3.5
Folding unit	3.4.1
Removing the cutterbar fold hydraulic cylinder rack	3.4.1
Cutterbar fold hydraulic cylinder rack, disassembled	3.4.3
Installing the cutterbar fold hydraulic cylinder rack	3.4.4

4. Drives

Intermediate drive	4.1.1
Removing the left-hand intermediate drive shaft	4.1.1
Left-hand intermediate drive, disassembled	4.1.2
Installing the left-hand intermediate drive shaft	4.1.3
Removing the right-hand intermediate drive shaft	4.1.4
Right-hand intermediate drive, disassembled	4.1.6
Installing the right-hand intermediate drive shaft	4.1.6
Main drive universal drive shaft	4.2.1
Removing the main drive universal drive shaft	4.2.1
Disassembling the main drive universal drive shaft	4.2.2
Main drive universal drive shaft, disassembled	4.2.4
Assembling the main drive universal drive shaft	4.2.5
Mounting the main drive universal drive shaft	4.2.6
Knife drive	4.3.1
Removing the knife drive belt (44)	4.3.1
Installing and adjusting the knife drive belt (44)	4.3.3
Removing the knife drive belt (51)	4.3.5
Installing and adjusting the knife drive belt (51)	4.3.7
Removing the jockey pulley of knife drive belt (44) and/or (51)	4.3.7
Knife drive belt (44), disassembled	4.3.9
Knife drive belt (51), disassembled	4.3.10
Installing the jockey pulley of knife drive belt (44) and/or (51)	4.3.11
Removing the deflection pulley of knife drive belt (44) and/or (51)	4.3.12
Installing the deflection pulley of knife drive belt (44) and/or (51)	4.3.12
Wobble transmission	4.4.1
Removing the wobble transmission (Part nos. 643 686.2 and 643 656.2)	4.4.1
Disassembling the wobble transmission (Part nos. 643 686.2 and 643 656.2)	4.4.3
Wobble transmission, disassembled (Part no. 643 686.2)	4.4.7
Wobble transmission, disassembled (Part no. 643 656.2)	4.4.8
Assembling the wobble transmission (Spare part nos. 643 686.2 and 643 656.2)	4.4.9
Installing the wobble transmission (Spare part nos. 643 686.2 and 643 656.2)	4.4.17

5. Intake auger

Intake auger drive	5.1.1
Removing the feed drive chain (40)	5.1.1

Installing and adjusting the feed drive chain (40)	5.1.2	Removing the variable-speed pulleys of reel drive (42)	6.1.4
Removing and disassembling the jockey sprocket of feed drive chain (40) and/or (50)	5.1.2	Installing the variable-speed pulleys of reel drive (42)	6.1.4
Installing the jockey sprocket of feed drive chain (40) and /or (50)	5.1.2	Removing the drive chain (43)	6.1.4
Removing and installing the double sprocket of feed drive chain (40) and/or (50)	5.1.3	Installing and adjusting the drive chain (43)	6.1.4
Removing the intake auger slip clutch	5.1.3	Removing the top sprocket of drive chain (43)	6.1.5
Intake auger slip clutch, disassembled (left-hand machine side)	5.1.5	Installing the top sprocket of drive chain (43)	6.1.5
Installing the intake auger slip clutch	5.1.6	Removing the bottom sprocket of drive chain (43)	6.1.5
Removing the feed drive chain (50)	5.1.9	Installing the bottom sprocket of drive chain (43)	6.1.5
Installing and adjusting the feed drive chain (50)	5.1.10	Removing the sprocket of drive chain (43)	6.1.6
Intake auger slip clutch, disassembled (right-hand machine side)	5.1.11	Installing the sprocket of drive chain (43)	6.1.6
Intake auger	5.2.1	Removing the reel drive slip clutch	6.1.6
Removing the left-hand (outside) and/or right-hand (outside) intake auger bearing	5.2.1	Disassembling the reel drive slip clutch	6.1.7
Left-hand (outside) and/or right-hand (outside) intake auger bearing, disassembled	5.2.2	Reel drive slip clutch, disassembled (up to serial no. .)	6.1.8
Installing the left-hand (outside) and/or right-hand (outside) intake auger bearing	5.2.3	Reel drive slip clutch, disassembled (from serial no. .)	6.1.9
Removing the left-hand and/or right-hand intake auger drive shaft	5.2.7	Assembling the reel drive slip clutch	6.1.11
Installing the left-hand and/or right-hand intake auger drive shaft	5.2.8	Installing the reel drive slip clutch	6.1.12
Removing the left-hand (centre) and/or right-hand (centre) intake auger bearing	5.2.8	Removing the reel drive shaft (17)	6.1.13
Left-hand (centre) and/or right-hand (centre) intake auger bearing, disassembled	5.2.11	Installing the reel drive shaft (17)	6.1.14
Installing the left-hand (centre) and/or right-hand (centre) intake auger bearing	5.2.11	Removing the reel drive dog clutch	6.1.15
Left-hand intake auger, disassembled	5.2.17	Reel drive dog clutch, disassembled	6.1.17
Right-hand intake auger, disassembled	5.2.19	Installing the reel drive dog clutch	6.1.18
Removing the intake auger finger	5.2.20	Reel drive universal drive shaft	6.2.1
Installing the intake auger finger	5.2.21	Removing the reel drive universal drive shaft	6.2.1
Removing the control shafts	5.2.22	Disassembling the reel drive universal drive shaft	6.2.2
Removing the control shafts (up to serial no. .)	5.2.23	Reel drive universal drive shaft, disassembled	6.2.4
Control shafts, disassembled (up to serial no. .)	5.2.25	Assembling the reel drive universal drive shaft	6.2.5
Removing the control shafts (from serial no. .)	5.2.25	Mounting the reel drive universal drive shaft	6.2.6
Control shafts, disassembled (from serial no. .)	5.2.27	Reel drive angle drive	6.3.1
Installing the control shafts (from serial no. ., up to serial no. .)	5.2.27	Removing the rear angle drive	6.3.1
		Disassembling the rear angle drive	6.3.2
		Assembling the rear angle drive	6.3.4
		Mounting the rear angle drive	6.3.5
		Removing the front angle drive	6.3.6
		Disassembling the front angle drive	6.3.7
		Front angle drive, disassembled	6.3.10
		Assembling the front angle drive	6.3.11
		Mounting the front angle drive	6.3.14
		Reel speed adjustment	6.4.1
		Removing the electric reel variable-speed pulley	6.4.1
		Reel variable-speed drive, disassembled	6.4.3
		Mounting the electric reel variable-speed pulley	6.4.4
		Removing the spring-loaded reel variable-speed pulley	6.4.6
		Spring-loaded reel variable-speed pulley, disassembled	6.4.8
		Mounting the spring-loaded reel variable-speed pulley	6.4.9
		Removing the reel variable-speed drive bearing tube	6.4.10
		Reel variable-speed drive bearing tube, disassembled	6.4.11
6. Reel			
Reel drive	6.1.1		
Removing the drive chain (41)	6.1.1		
Installing and adjusting the drive chain (41)	6.1.2		
Removing the top sprocket of drive chain (41)	6.1.2		
Installing the top sprocket of drive chain (41)	6.1.2		
Removing the reel drive belt (42)	6.1.3		
Installing and adjusting the reel drive belt (42)	6.1.4		

Installing the reel variable-speed drive bearing tube	6.4.12	Removing the right-hand reel spider (Right-hand reel)	6.6.8
Removing the electric reel speed adjustment	6.4.13	Installing the right-hand reel spider (Right-hand reel)	6.6.9
Disassembling the electric reel speed adjustment	6.4.16	Removing the left-hand reel bearing (Right-hand reel)	6.6.9
Electric reel speed adjustment, disassembled	6.4.18	Installing the left-hand reel bearing (Right-hand reel)	6.6.10
Assembling the electric reel speed adjustment	6.4.19	Removing the left-hand reel spider (Right-hand reel)	6.6.10
Mounting the electric reel speed adjustment	6.4.21	Installing the left-hand reel spider (Right-hand reel)	6.6.11
Left-hand reel	6.5.1	Removing the centre reel spider (Right-hand reel)	6.6.11
Removing the left-hand reel	6.5.1	Installing the centre reel spider (Right-hand reel)	6.6.12
Left-hand reel, disassembled	6.5.3		
Installing the left-hand reel	6.5.4		
Removing the left-hand reel bearing (Left-hand reel)	6.5.4		
Installing the left-hand reel bearing (Left-hand reel)	6.5.5		
Removing the control rollers (Left-hand reel)	6.5.5		
Installing the control rollers (Left-hand reel)	6.5.6		
Removing the control spider (Left-hand reel)	6.5.6		
Installing the control spider (Left-hand reel)	6.5.7		
Removing the left-hand reel spider (Left-hand reel)	6.5.7		
Installing the left-hand reel spider (Left-hand reel)	6.5.8		
Removing the right-hand reel bearing (Left-hand reel)	6.5.9		
Installing the right-hand reel bearing (Left-hand reel)	6.5.10		
Checking the reel lock setting	6.5.11		
Removing the right-hand reel spider (Left-hand reel)	6.5.11		
Installing the right-hand reel spider (Left-hand reel)	6.5.12		
Removing the centre reel spider (Left-hand reel)	6.5.12		
Installing the centre reel spider (Left-hand reel)	6.5.13		
Right-hand reel	6.6.1		
Removing the right-hand reel	6.6.1		
Right-hand reel, disassembled	6.6.3		
Installing the right-hand reel	6.6.4		
Checking the pawl setting (Reel lock)	6.6.4		
Removing the right-hand reel bearing (Right-hand reel)	6.6.5		
Installing the right-hand reel bearing (Right-hand reel)	6.6.5		
Removing the control rollers (Right-hand reel)	6.6.6		
Installing the control rollers (Right-hand reel)	6.6.6		
Removing the control spider (Right-hand reel)	6.6.6		
Installing the control spider (Right-hand reel)	6.6.7		
		7. Hydraulic system / Electric system	
		Control valves	7.1.1
		Removing the reel raise / lower valve block with check valve	7.1.1
		Reel raise / lower valve block with check valve, disassembled	7.1.3
		Assembling and installing the reel raise / lower valve block with check valve	7.1.4
		Removing the reel raise 3/2-way valve (Y22)	7.1.4
		Reel raise 3/2-way valve (Y22), disassembled	7.1.5
		Installing the reel raise 3/2-way valve (Y22)	7.1.6
		Removing the 2/2-way check valve (Y69)	7.1.7
		Installing the 2/2-way check valve (Y69)	7.1.7
		Removing the reel lower 2/2-way valve (Y23)	7.1.7
		Reel lower 2/2-way valve (Y23), disassembled	7.1.8
		Installing the reel lower 2/2-way valve (Y23)	7.1.9
		Removing the reel forward / backward and cutterbar fold valve block	7.1.10
		Reel forward / backward and cutterbar fold valve block, disassembled	7.1.12
		Assembling and installing the reel forward / backward and cutterbar fold valve block	7.1.13
		Disassembling the reel forward / backward and cutterbar fold valve block	7.1.14
		Removing the lock-up valve unit of reel backward valve (Y25)	7.1.15
		Disassembling the lock-up valve unit of reel backward valve (Y25)	7.1.16
		Lock-up valve unit of reel backward valve (Y25), disassembled	7.1.16
		Assembling the lock-up valve unit of reel backward valve (Y25)	7.1.16
		Installing the lock-up valve unit of reel backward valve (Y25)	7.1.17
		Removing the pilot controlled non-return valve	7.1.17
		Disassembling the pilot controlled non-return valve	7.1.18
		Pilot controlled non-return valve, disassembled	7.1.19
		Assembling the pilot controlled non-return valve	7.1.20
		Installing and adjusting the pilot controlled non-return valve	7.1.21
		Hydraulic cylinders	7.2.1
		Removing the cutterbar fold hydraulic cylinder	7.2.1

Disassembling the cutterbar fold hydraulic cylinder	7.2.2	Disassembling the centre fore and aft reel adjustment hydraulic cylinder	7.2.42
Cutterbar fold hydraulic cylinder, disassembled	7.2.5	Centre fore and aft reel adjustment hydraulic cylinder, disassembled	7.2.44
Assembling the cutterbar fold hydraulic cylinder	7.2.6	Assembling the centre fore and aft reel adjustment hydraulic cylinder	7.2.45
Installing the cutterbar fold hydraulic cylinder	7.2.9	Installing the centre fore and aft reel adjustment hydraulic cylinder	7.2.47
Adjusting the cutterbar fold hydraulic cylinder	7.2.9	Removing the right-hand fore and aft reel adjustment hydraulic cylinder	7.2.48
Removing the working position lock hydraulic cylinder	7.2.10	Disassembling the right-hand fore and aft reel adjustment hydraulic cylinder	7.2.48
Disassembling the working position lock hydraulic cylinder	7.2.12	Right-hand fore and aft reel adjustment hydraulic cylinder, disassembled	7.2.50
Working position lock hydraulic cylinder, disassembled	7.2.13	Assembling the right-hand fore and aft reel adjustment hydraulic cylinder	7.2.51
Assembling the working position lock hydraulic cylinder	7.2.14	Installing the right-hand fore and aft reel adjustment hydraulic cylinder	7.2.53
Installing the working position lock hydraulic cylinder	7.2.16	Potentiometers	7.3.1
Removing the transport position lock hydraulic cylinder	7.2.17	Replacing the CAC sensing band potentiometer	7.3.1
Disassembling the transport position lock hydraulic cylinder	7.2.18	Adjusting the CAC potentiometer	7.3.3
Transport position lock hydraulic cylinder, disassembled	7.2.20	Replacing the automatic reel height adjustment potentiometer	7.3.3
Assembling the transport position lock hydraulic cylinder	7.2.21	Adjusting the automatic reel height adjustment potentiometer	7.3.5
Installing the transport position lock hydraulic cylinder	7.2.23	Adjusting the cutterbar lock limit switch	7.3.6
Removing the left-hand single-acting reel height adjustment hydraulic cylinder	7.2.24	Adjusting the reel drive universal drive shaft limit switch	7.3.7
Disassembling the left-hand single-acting reel height adjustment hydraulic cylinder	7.2.24	Adjusting the reel limit switch	7.3.8
Left-hand single-acting reel height adjustment hydraulic cylinder, disassembled	7.2.26	Folding procedure (Description of function)	7.4.1
Assembling the left-hand single-acting reel height adjustment hydraulic cylinder	7.2.27	Folding from transport position to working position	7.4.1
Installing the left-hand single-acting reel height adjustment hydraulic cylinder	7.2.29	Folding from working position to transport position	7.4.5
Removing the right-hand double-acting reel height adjustment hydraulic cylinder	7.2.30		
Disassembling the right-hand double-acting reel height adjustment hydraulic cylinder	7.2.30		
Right-hand double-acting reel height adjustment hydraulic cylinder, disassembled	7.2.32		
Assembling the right-hand double-acting reel height adjustment hydraulic cylinder	7.2.33		
Installing the right-hand double-acting reel height adjustment hydraulic cylinder	7.2.35		
Removing the left-hand fore and aft reel adjustment hydraulic cylinder	7.2.36		
Disassembling the left-hand fore and aft reel adjustment hydraulic cylinder	7.2.36		
Left-hand fore and aft reel adjustment hydraulic cylinder, disassembled	7.2.38		
Assembling the left-hand fore and aft reel adjustment hydraulic cylinder	7.2.39		
Installing the left-hand fore and aft reel adjustment hydraulic cylinder	7.2.41		
Removing the centre fore and aft reel adjustment hydraulic cylinder	7.2.42		

7. Index

1

Introduction

GENERAL**Introduction**

This CLAAS REPAIR MANUAL is to assist in preserving the permanent working order and therefore the high value of your CLAAS machine by careful maintenance and service.

Experience gathered by both our service engineers and factory staff has been compiled in this REPAIR MANUAL.

The figures explain the procedure of repairs and the text describes the different adjustments to be made, the use of CLAAS special tools etc.

The illustrations included in support to the explanations show the sequence of major repairs so that minor repairs can easily be followed.

The CLAAS REPAIR MANUAL is filled in a folder which allows to insert supplementary pages as issued following technical developments and to always have an updated manual at hand for reference.

To be sure, always compare settings and filling capacities with specifications stated in the current Operator's Manual which applies to the combine-harvester.

CLAAS KGaA mbH
Service Department

Introduction to the CLAAS Repair Manual

The CLAAS REPAIR MANUAL is divided into main groups and subgroups.

The first figure at the bottom of each page refers to the main group whereas the second figure following the point indicates the subgroup; the figure behind the second point indicates the page number. In each subgroup, the figures and pages are numbered consecutively, starting at 1.

Where differences between the machine types must be observed, this is indicated in headings. Where a service procedure applies to all machines covered by this book, the machine names are not specifically given.

When supplements are to be added, the subgroups are supplemented or exchanged. All supplements are inserted into the respective main group / subgroup and the table of contents is updated.

The symbols communicate brief messages when recurring service procedures are described. Their meaning is explained at the beginning of this manual.

The section "GENERAL REPAIR INSTRUCTIONS" at the beginning of this manual contains useful practical hints. Read and follow these fundamental instructions. They are the basis for reliable service and durability of parts after repairs have been carried out.

The description of a particular service procedure can easily be found by checking the table of contents of the appropriate main group / subgroup.

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com