

CX300C TIER 4 CRAWLER EXCAVATOR SERVICE MANUAL COMPLETE CONTENTS

COMPLETE SERVICE MANUAL	84483361
BOOK 1	84541700
GENERAL INFORMATION	
BOOK 2	84541701
ENGINE	
FUEL SYSTEM	
BOOK 3	84541702
BOOK 4	84541703
ELECTRICAL SYSTEM	
BOOK 5	84541704
UNDERCARRIAGE	
DRIVE TRAIN	
BOOK 6	84541705
BOOK 7	84541706
UPPERSTRUCTURE HYDRAULICS	
BOOK 8	84541707
UPPERSTRUCTURE	
COMPLETE CONTENTS	84541708
BINDER SPINE	84541709
ELECTRICAL POSTER	84420831NA
HYDRAULIC POSTER	84420833NA

1 - GENERAL INFORMATION

SECTION 1001 - SAFETY, GENERAL INFORMATION AND STANDARD TORQUE DATA

BOOK 1 - 84541700

CONTENTS

Description	Page
General Information	3
Safety	4
ROPS Judgment Method	6
Bolt and Nut Tightening	10

SECTION 1002A - SPECIFICATIONS

BOOK 1 - 84541700

CONTENTS

Description	Page
Overall (CX300C)	3
Main Data	3
Performance	3
Main Unit Dimensions	3
Engine	4
Cooling System	4
Upper Side Work System	4
Operating Device	5
Swing Units	5
Travel Lower Body	5
Hydraulic Equipment	7
Hydraulic Device	7
Control Valve and Cylinder	7
Capacities, Filters	7
Coolant and Oil Capacities	7
Hydraulic Oil Filters	7
Fuel Filter	7

SECTION 1002B - MAIN EQUIPMENT TABLE

BOOK 1 - 84541700

CONTENTS

Description	Page
Lower Component	3
Travel Unit	3
Take-up Roller	3
Upper Roller	3
Lower Roller	3
Recoil Spring	3
Shoe (CX300C)	4
Upper Component	5
Swing Unit	5
Engine-related	6
Engine	6
DPD	6
Air Cleaner (double element)	6
Radiator	6
Hydraulic Device	7
Hydraulic Pump	7
Control-related	8
Control Valve	8
Solenoid Valve (5 stack)	8
Remote Control Valve (left/right, travel operations)	9
Remote Control Valve for Left/Right Operations	9
Remote Control Valve for Travel Operation	9
Remote Control Valve Characteristic Diagram	9
Operation Remote Control Valve Control Diagram	9
Travel Remote Control Valve Control Diagram	10
Cushion Valve (heat circuit, with shuttle valve)	11
Selector Valve (option)	11
Center Joint	11
Backhoe Attachment	11
Cylinder	11

SECTION 1002C - MAIN UNIT WEIGHT

BOOK 1 - 84541700

CONTENTS

Description	Page
Main Unit Weight	3
Divided Weight (standard specifications) CX300C	3
Stand Alone Part Weight (CX300C)	4
Shoe Weight (per side) CX300C	4
Arm Weight (CX300C)	4

SECTION 1002D - MAINTENANCE STANDARDS

BOOK 1 - 84541700

CONTENTS

Description	Page
Drive Sprocket	3
Take-up Roller	4
Upper Roller	5
Lower Roller	6
Track Shoe (grouser shoe)	7
Attachment (backhoe)	9
1. Boom and Swing Frame Installation Section	10
2. Boom Cylinder and Swing Frame Installation Section	11
3. Boom and Boom Cylinder Installation Section	12
4. Boom and Arm Cylinder Installation Section	13
5. Boom and Arm Installation Section	14
6. Arm and Arm Cylinder Installation Section	15
7. Arm and Bucket Cylinder Installation Section	16
8. Arm and Arm Link Installation Section	17
9. Bucket and Bucket Link Installation Section	18
10. Bucket Link and Bucket Cylinder Installation Section	19
11. Bucket and Arm Installation Section	20
Inspection Gauge	21
For Drive Sprocket	21
For Take-up Roller	22

SECTION 1002D - MAINTENANCE STANDARDS (CONT.)

BOOK 1 - 84541700

CONTENTS

Description	Page
For Upper Roller	23
For Lower Roller	24

SECTION 1002E - BOLT SIZE AND TORQUE TABLE

BOOK 1 - 84541700

CONTENTS

Description	Page
Special Torque Settings	3

SECTION 1002F - OVERALL VIEW

BOOK 1 - 84541700

CONTENTS

Description	Page
CX300C	3
Standard Arm (10.43 ft)	3
Short Arm (8.69 ft)	4
Long Arm (12.0079 ft)	5

SECTION 1003 - LIST OF SPECIAL TOOLS

BOOK 1 - 84541700

CONTENTS

Description	Page
Tools to purchase or to make locally	3
Travel Motor Special Tool	3
CX300C	3
Take-up Roller Special Tool	18
CX300C	18
Upper Roller Special Tool	20
CX300C	20
Lower Roller Special Tool	22
CX300C	22
Grease Cylinder Special Tool	24
Jig Dimension Diagram	24
Center Joint Special Tool	25
CX300C	25
Swing Motor Special Tool	27
Remote Control Valve Special Tool	29
Gas Filling Special Tool	31
CX300C	31
Hydraulic Circuit	33
CASE SPECIAL TOOLS	34
Isuzu Engine Special Tools	34
4HK1X-6HK1X Tier 4 Isuzu Engine	34
Attachment Special Tool (for Cylinder Assembly)	37
Special Jigs Part Number List	37
CNH-EST DIAGNOSTIC TOOL (SCAN TOOL)	38

SECTION 1004 - FLUIDS AND LUBRICANTS

BOOK 1 - 84541700

CONTENTS

Description	Page
HYDRAULIC FLUID	3
ENGINE OIL	3
FUEL	3
Conditions applicable to diesel fuel	3
RECOMMENDED CONDITIONS THAT CAN BE APPLIED TO DIESEL FUEL	3

SECTION 1005 - CONVERSION TABLE

BOOK 1 - 84541700

CONTENTS

Description	Page
Metric to U.S.	3
U.S. to Metric	4

SECTION 1900 - ABBREVIATIONS

BOOK 1 - 84541700

CONTENTS

Description	Page
Abbreviations	3

2 - ENGINE

SECTION 2000 - REMOVAL AND INSTALLATION OF ENGINE ASSEMBLY

BOOK 2 - 84541701

CONTENTS

Description	Page
Removal of Engine Assembly	3
Installation of Engine Assembly	10

SECTION 2001 - REMOVAL AND INSTALLATION OF THE FUEL COOLER ENGINE INTER-COOLER RADIATOR AND OIL COOLER

BOOK 2 - 84541701

CONTENTS

Description	Page
Removal and Installation of Fuel Cooler	3
Removal of Fuel Cooler	3
Installation of Fuel Cooler	4
Removal and Installation of Engine Inter Cooler	4
Removal of Inter Cooler	4
Installation of Inter Cooler	5
Removal and Installation of Radiator	5
Removal of Radiator	6
Installation of Radiator	10
Removal and Installation of Oil Cooler	11
Removal of oil cooler	11
Installation of oil cooler	14

SECTION 2004 - REMOVAL AND INSTALLATION OF TURBO CHARGER

BOOK 2 - 84541701

CONTENTS

Description	Page
Removal of Turbo Charger	3
Installation of Turbo Charger	4

SECTION 2005 - REMOVAL AND INSTALLATION OF EGR COOLER AND EGR VALVE

BOOK 2 - 84541701

CONTENTS

Description	Page
EGR valve Removal	3
EGR valve Installation	4

SECTION 2006 - REMOVAL AND INSTALLATION OF ENGINE HOOD

BOOK 2 - 84541701

CONTENTS

Description	Page
Removal of Engine Hood	3
Installation of Engine Hood	4

SECTION 2007 - REMOVAL AND INSTALLATION OF MUFFLER

BOOK 2 - 84541701

CONTENTS

Description	Page
Removal of Muffler	3
Installation of Muffler	3

SECTION 2401 - PRIMARY SPECIFICATIONS

BOOK 2 - 84541701

CONTENTS

Description	Page
Primary specifications	3

SECTION 2415 - REMOVAL AND INSTALLATION OF CYLINDER HEAD

BOOK 2 - 84541701

CONTENTS

Description	Page
Cylinder head cover Removal	3
Cylinder head cover Installation	4
Removal and Installation of Cylinder Head	5
Cylinder head assembly Removal	5
Cylinder head assembly Disassembly	15
Cylinder head assembly Reassembly	21
Cylinder head assembly Installation	30
Cylinder head assembly Inspection	46

SECTION 2425 - REMOVAL AND INSTALLATION OF CYLINDER BLOCK

BOOK 2 - 84541701

CONTENTS

Description	Page
Cylinder block Removal	3
Cylinder block Installation	20
Cylinder block Inspection	55

SECTION 2445 - LUBRICATION SYSTEM

BOOK 2 - 84541701

CONTENTS

Description	Page
Removal and Installation of Oil Pan	3
Oil pan Removal	3
Oil pan Installation	3
Removal and Installation of Oil Level Switch	4
Oil level switch Removal	4
Oil level switch Installation	5
Removal and Installation of Oil Pump Assembly	5
Oil pump assembly Removal	5
Oil pump assembly Disassembly	18
Oil pump assembly Reassembly	19
Oil pump assembly Installation	19
Oil pump assembly Inspection	42
Engine oil Inspection	43
Removal and Installation of Oil Port Cover	44
Oil port cover Removal	44
Oil port cover Installation	44

SECTION 2455 - COOLING SYSTEM

BOOK 2 - 84541701

CONTENTS

Description	Page
Removal and Installation of Water Pump Assembly	3
Water pump assembly Removal	3
Water pump assembly Installation	4
Water pump assembly Inspection	7
Removal and Installation of Thermostat	7
Thermostat Removal	7
Thermostat Installation	8
Thermostat Inspection	10
Coolant Inspection	11

SECTION 2455 - COOLING SYSTEM (CONT.)

BOOK 2 - 84541701

CONTENTS

Description	Page
Drive belt Inspection	12
Removal and Installation of Overheat Switch	12
Overheat switch Removal	12
Overheat switch Installation	13

SECTION 2465 - REMOVAL AND INSTALLATION OF EXHAUST MANIFOLD

BOOK 2 - 84541701

CONTENTS

Description	Page
Exhaust manifold Removal	3
Exhaust manifold Installation	5
Exhaust manifold Inspection	8

SECTION 2470 - DISASSEMBLY, REMOVAL AND INSTALLATION OF DPD ASSEMBLY

BOOK 2 - 84541701

CONTENTS

Description	Page
DPD assembly Disassembly	3
DPD assembly Reassembly	5
DPD assembly Inspection	7

3 - FUEL SYSTEM

SECTION 3001 - REMOVAL AND INSTALLATION OF FUEL TANK

BOOK 2 - 84541701

CONTENTS

Description	Page
Removal of Fuel Tank	3
Installation of fuel tank	6

SECTION 3004A - REMOVAL AND INSTALLATION OF FUEL SUPPLY PUMP

BOOK 2 - 84541701

CONTENTS

Description	Page
Fuel supply pump Removal	3
Fuel supply pump Installation	4

SECTION 3004B - REMOVAL AND INSTALLATION OF COMMON RAIL ASSEMBLY

BOOK 2 - 84541701

CONTENTS

Description	Page
Common rail assembly Removal	3
Common rail assembly Installation	7

SECTION 3005 - REMOVAL AND INSTALLATION OF INJECTOR

BOOK 2 - 84541701

CONTENTS

Description	Page
Injector Removal	3
Injector Installation	5

4 - ELECTRICAL SYSTEM

SECTION 4001A - ELECTRICAL AND ENGINE BASIC FUNCTIONS

BOOK 3 - 84541702

CONTENTS

Description	Page
Monitor Control	3
Fuel Gauge	3
Coolant Temperature Gauge	4
Oil Temperature Gauge	5
Monitor Display Dimming	6
Eco Gauge	7
DPD Gauge	8
Diagnostic Trouble Code Indicator	9
Clock	10
Fuel Economy Gauge	10
Basic Operation	11
Neutral Start	11
Engine Start/Stop Control	12
Preheating	13
Throttle	14
Idling Start	15
Auto Idle	16
One-touch Idle	17
Auto Warm Up	18
Quick Warm-up	19

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com