

---

# D35, DX35, D40, DX40, D45, DX45 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	10
SECTION 21 - TRANSMISSION .....	11
SECTION 23 - DRIVELINE .....	14
SECTION 25 - FWD FRONT AXLE .....	15
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	16
SECTION 29 - HYDROSTATIC TRANSMISSION .....	17
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS .....	21
SECTION 33 - BRAKES .....	24
SECTION 35 - HYDRAULIC SYSTEM .....	24
SECTION 41 - STEERING .....	28
SECTION 44 - 2WD FRONT AXLE .....	29
SECTION 50 - CLIMATE CONTROL .....	30
SECTION 55 - ELECTRICAL SYSTEM .....	34
SECTION 90 - PLATFORM .....	51

The following pages are the collation of the contents pages from each section and chapter of the D35 - DX45 Repair manual. Complete Repair part # 87622993.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the D35 - DX45 Tractors, PIN number HBA015001 and above.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87056690

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
00 000	Introduction .....	2
	Safety .....	3
	Technical Information .....	4
	Safety Precautions .....	5
	Safety Decals - D35, D40, D45 .....	8
	Instruction Decals - D35, D40, D45 .....	9
	Safety Decals - DX35, DX40, DX45 .....	12
	Instruction Decals - DX35, DX40, DX45 .....	13
	International Symbols - DX35, DX40, DX45 .....	17
	Specifications - D35, D40, D45 .....	18
	General Dimensions - D35, D40, D45 .....	25
	Specifications - DX35, DX40, DX45 .....	31
	General Dimensions - DX35, DX40, DX45 .....	37
	Minimum Hardware Tightening Torques .....	41
	Special Tools .....	43
	Recommended Lubricants .....	44
	Adjustments .....	45
	Tire Inflation Pressure - Adjustments .....	45
00 100	Pre-Season and Pre-Delivery Checklist .....	46

---

# SECTION 10 - ENGINE

BOOK 1 - 87056690

## Chapter 1 - Engine

### CONTENTS

Section	Description	Page
	Specifications .....	6
	Metric Bolt Torque Specifications .....	15
	Special Tools .....	16
	Compression Test and Tools .....	17
	Description of Operation .....	18
	Troubleshooting .....	19
	Cylinder Head and Valve Train Components .....	23
	Cylinder Block Assembly .....	23
	Separating the Tractor at the Clutch Housing/Engine - 12 x 12 Transmission .....	25
	Removal .....	25
	Separating the Tractor at the HST Housing/Engine - HST Transmission .....	29
	Removal .....	29
	Separating the Tractor at the Engine Frame .....	35
	Installation .....	38
	Attaching the 12 x 12 Transmission to the Engine .....	42
	Attaching the HST to the Engine .....	46
	Overhaul .....	54
	Engine .....	54
	Fuel Injector and Glow Plug .....	54
	Removal .....	54
	Oil Pressure Switch .....	54
	Temperature Sending Switch and Alternator .....	54
	Removal .....	54
	Fan, Water Pump and External Oil Tube .....	55
	Removal .....	55
	Air Inlet Manifold .....	55
	Removal .....	55
	Rocker Arm Shaft and Support Bracket .....	56
	Removal .....	56
10 101	Cylinder Head .....	56
	Removal .....	56

---

# SECTION 10 - ENGINE

BOOK 1 - 87056690

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Valve Tappet .....	57
	Removal .....	57
	Fuel Shutoff Solenoid .....	57
	Removal .....	57
10 106	Engine Timing Gear Cover, Timing Gears and Cam Shaft .....	57
	Timing Gear Cover Removal .....	57
10 106	Timing Gears and Cam Shaft .....	60
	Removal .....	60
10 102	Oil Sump .....	61
	Removal .....	61
	Oil Suction Pipe and Strainer .....	61
	Removal .....	61
10 110	Balancer Assembly .....	62
	Removal .....	62
10 105	Connecting Rods, Bearings and Pistons, Rings .....	62
	Removal .....	62
10 103	Flywheel .....	63
	Removal .....	63
10 103	Backplate and Oil Seal .....	63
	Removal .....	63
	Crankshaft and Main Bearings .....	63
	Removal .....	63
10 101	Cylinder Head .....	64
	Disassembly .....	64
	Inspection and Repair .....	64
	Valve Seats .....	65
	Valves .....	66
	Valve Guides .....	67
	Valve Springs .....	68
	Rocker Arms .....	68
	Push Rods .....	69
	Cylinder Head .....	69
	Assembly .....	69

---

# SECTION 10 - ENGINE

BOOK 1 - 87056690

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Cylinder Block .....	70
10 105	Pistons .....	70
	Disassembly and Inspection .....	70
	Piston Rings .....	73
	Connecting Rods .....	73
	Connecting Rod Bearing .....	75
	Clearance Check .....	75
	Pistons, Rings and Connecting Rod .....	76
	Assembly .....	76
10 103	Crankshaft - Main Bearing and Thrust Washer .....	77
	Removal and Inspection .....	77
	Crankshaft .....	78
	Bearing (Bushing) .....	79
	Replacement .....	79
	Main Bearing .....	80
	Assembly .....	80
	Port Block .....	81
	Removal .....	81
	Installation .....	81
10 106	Timing Gear .....	82
	Camshaft .....	82
	Disassembly .....	82
	Inspection .....	82
	Assembly .....	83
10 103	Flywheel .....	83
10 102	Timing Gear Housing .....	84
10 102	Front Oil Seal and Steering Pump Seal .....	84
	Replacement .....	84
10 103	Crankshaft and Bearing Holder .....	85
	Installation .....	85
	Rear Oil Seal and Backplate .....	85
	Installation .....	85

---

# SECTION 10 - ENGINE

BOOK 1 - 87056690

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Flywheel . . . . .	86
	Installation . . . . .	86
10 105	Pistons and Connecting Rods . . . . .	86
	Installation . . . . .	86
10 110	Balancer Assembly . . . . .	87
	Installation . . . . .	87
	Balancer Shims . . . . .	87
	Oil Suction Pipe and Suction Strainer . . . . .	88
	Installation . . . . .	88
	Oil Sump . . . . .	88
	Installation . . . . .	88
10 106	Camshaft and Camshaft Gear . . . . .	88
	Installation . . . . .	88
10 106	Idle Gear, Oil Pump and Injection Timing . . . . .	89
	Installation . . . . .	89
	Timing Gear Cover . . . . .	89
	Installation . . . . .	89
	Crankshaft Pulley . . . . .	90
	Installation . . . . .	90
	Fuel Injection Pump . . . . .	90
	Installation . . . . .	90
	Hydraulic Oil Pump . . . . .	91
	Installation . . . . .	91
	Power Steering Pump . . . . .	91
	Installation . . . . .	91
10 101	Head Gasket Selection . . . . .	92
	Selection Chart . . . . .	92
	Cylinder Head . . . . .	92
	Installation . . . . .	92
10 106	Valve Clearance . . . . .	93
	Adjustment . . . . .	93
	Valve Cover . . . . .	94
	Installation . . . . .	94

---

# SECTION 10 - ENGINE

BOOK 1 - 87056690

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Water Pump and Cooling Fan .....	94
	Installation .....	94
	External Oil Tube .....	94
	Assembly .....	94
	Glow Plug and Connector .....	95
	Installation .....	95
	Fuel Injector .....	95
	Installation .....	95
10 218	Fuel Piping .....	95
	Installation .....	95
	Alternator and Temperature Sender Switch .....	96
	Installation .....	96
	Exhaust Manifold .....	96
	Installation .....	96
10 304	Description of Operation - Engine Lubrication System .....	97
10 206	Oil Filter .....	101
	Construction and Function .....	101
	Maintenance .....	101
10 304	Oil Pump .....	101
	Removal .....	101
	Inspection .....	101
	Installation and Adjustment .....	102
	Engine Oil Pressure .....	103
	Check .....	103
	Oil Pressure Relief Valve .....	104
	Removal .....	104
	Installation .....	104
	Oil Consumption .....	104
10 400	Description of Operation - Cooling System .....	105
	Maintenance .....	107
	Coolant .....	107
	Radiator Cap .....	107
10 402	Thermostat .....	108

---

## SECTION 10 - ENGINE

BOOK 1 - 87056690

### Chapter 1 - Engine (Continued)

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
10 402	Water Pump .....	108
10 414	Cooling Fan .....	108
	Overhaul - Cooling System .....	109
10 406	Radiator .....	109
	Removal .....	109
	Inspection and Repair .....	110
	Installation .....	110
10 402	Water Pump .....	111
	Removal .....	111
	Inspection and Repair .....	113
	Installation .....	113
10 402	Thermostat .....	114
	Removal .....	114
	Inspection and Repair .....	114
	Installation .....	115
	Cab Heater .....	115
	Installation .....	115

## SECTION 10 - ENGINE

BOOK 1 - 87056690

### Chapter 2 - Fuel Systems

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	3
	Standards for Adjusting Injection Pump .....	3
	Torque Specifications .....	4
	Special Tools .....	4
	Description of Operation .....	5
10 242	Injection Pump .....	5



---

# SECTION 10 - ENGINE

BOOK 1 - 87056690

## Chapter 2 - Fuel Systems (Continued)

### CONTENTS

Section	Description	Page
	Troubleshooting - General .....	7
	Troubleshooting - Fuel Injectors .....	10
	Troubleshooting - Governor .....	11
10 244	Fuel Variation Mechanism .....	12
	Delivery Valve Assembly .....	13
10 244	CTD (Compact Timing Device) .....	13
10 236	Pumping Elements .....	15
10 214	Delivery Valves .....	15
10 242	Injection Pump .....	17
	Removal .....	17
	Repair .....	19
	Installation .....	19
	Calibration/Adjustments .....	20
10 230	Fuel Pump .....	20
	Installation .....	20
	Spill-Timing Procedure .....	21
	Fuel Screw/High Idle .....	25
	Adjustment .....	25
10 230	Fuel Pump .....	26
	Auto Bleed .....	26
	Description of Operation .....	27
10 230	Governor .....	27
	Disassembly .....	29
	Assembly .....	30
	Adjustments .....	32
10 218	Injectors .....	33
	Removal .....	34
	Disassembly .....	35
	Assembly/Adjustment .....	35
	Engine Breather Valve .....	36
	Removal .....	37
	Installation .....	37
	Troubleshooting - Engine Breather Valve .....	38

---

# SECTION 18 - CLUTCH

BOOK 1 - 87056690

## Chapter 1 - Clutch

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
18 000	Specifications .....	3
	Bolt Torques .....	4
	Special Tools .....	4
	Description of Operation .....	5
	Troubleshooting .....	7
	Overhaul .....	8
	Separating the Tractor at the Clutch Housing/Engine .....	8
	Removal .....	8
18 110	Clutch .....	14
	Removal .....	14
	Inspection .....	14
	Assembly .....	15
	Attaching the 12 x 12 Transmission to the Engine .....	16
18 110	Clutch Related Components .....	22
	Pilot Bearing .....	22
	Removal .....	22
	Installation .....	22
	Damper Disc .....	22
	Removal .....	23
	Inspection .....	23
	Installation .....	23
	Flywheel Dimensions .....	24
	Clutch Release Bearing .....	25
	Removal .....	25
	Inspection .....	26
	Installation .....	26
	Clutch Linkage Components .....	26
18 100	Cross Shaft Bushings .....	26
	Disassembly .....	26
	Assembly .....	27

---

## SECTION 18 - CLUTCH

BOOK 1 - 87056690

### Chapter 1 - Clutch (Continued)

#### CONTENTS

Section	Description	Page
	Pedal Bushings .....	28
	Removal .....	28
	Disassembly .....	28
	Assembly .....	28
	Installation .....	28
	Pedal Adjustment .....	29
	Adjustment .....	29
	Maximum Travel Adjustment .....	29

## SECTION 21 - TRANSMISSION

BOOK 2 - 87056691

### Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission

#### CONTENTS

Section	Description	Page
21 000	Specifications .....	3
	Metric Bolt Torque Specifications .....	4
	Special Tools .....	5
	Description of Operation .....	6
	Cross Section - 12 x 12 Transmission .....	8
	Powerflow .....	9
	Troubleshooting .....	13
	Overhaul .....	14
21 114	Separating the Tractor at the Clutch Housing/Engine .....	14
21 110 10	Removal .....	14
	Clutch Housing .....	20
	Disassembly .....	20
	Main Transmission .....	24

---

## SECTION 21 - TRANSMISSION

BOOK 2 - 87056691

### Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

#### CONTENTS

Section	Description	Page
21 148 63	Retainer Cover .....	24
	Disassembly .....	24
21 148 63	Main Shift Rails and Shift Forks .....	25
	Disassembly .....	25
21 148 63	Main Shaft .....	28
	Disassembly .....	28
21 148 63	Range Shift Rail and Shift Fork .....	31
	Disassembly .....	31
21 148 63	Range Gear Countershaft .....	32
	Disassembly .....	32
21 148 63	Input Shaft .....	33
	Disassembly .....	33
21 148 63	Reverse Idler Shaft .....	34
	Disassembly .....	34
21 148 63	Shuttle Shift Rail and Fork .....	36
	Disassembly .....	36
21 148 63	Main Countershaft .....	37
	Disassembly .....	37
21 148 63	Synchronizers .....	39
	Disassembly .....	39

---

## SECTION 21 - TRANSMISSION

BOOK 2 - 87056691

### Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

#### CONTENTS

Section	Description	Page
	Main Transmission Components .....	40
	Inspection .....	40
	Synchronizers .....	40
	Assembly .....	40
	Main Countershaft .....	41
	Assembly .....	41
	Shuttle Shift Rail and Fork .....	42
	Assembly .....	42
	Reverse Idler Shaft .....	44
	Assembly .....	44
21 148 63	Input Shaft .....	46
	Assembly .....	46
21 148 63	Main Countershaft End Float .....	47
	Assembly .....	47
21 148 63	Range Gear Countershaft .....	48
	Assembly .....	48
21 148 63	Range Shift Rail and Fork .....	49
	Assembly .....	49
21 148 63	Main Shaft .....	50
	Assembly .....	50
21 148 63	Main Shaft End Float .....	53
	Assembly .....	53
21 148 63	Main Shaft Gears End Float .....	54
	Assembly .....	54
	Main Shift Rails and Forks .....	55
	Assembly .....	55
	Retainer Cover .....	58
	Assembly .....	58
21 110 10	Clutch Housing .....	59
	Assembly .....	59
	Attaching the 12 x 12 Transmission to the Engine .....	64
21 130	Transmission Shift Levers .....	70

---

## SECTION 21 - TRANSMISSION

BOOK 2 - 87056691

### Chapter 1 - 12 x 12 Synchronized Shuttle Shift Gear Transmission (Continued)

#### CONTENTS

Section	Description	Page
	Main Shift Control Lever .....	71
	Removal .....	71
	Installation .....	71
	Main Shift Lever .....	72
	Adjustment .....	72
	Shuttle Shift Control Lever .....	73
	Removal .....	73
	Installation .....	73

## SECTION 23 - DRIVELINE

BOOK 2 - 87056691

### Chapter 1 - Driveline

#### CONTENTS

Section	Description	Page
23 000	Bolt Torque Specifications .....	2
	Special Tools .....	3
	Description of Operation .....	4
	Front Wheel Drive Take Off Gearbox .....	4
	Troubleshooting .....	5
	Lubrication .....	5
	Overhaul .....	6
	Front Wheel Drive Take Off Gearbox .....	6
	Removal .....	6
	Disassembly .....	8
	Inspection .....	8
	Assembly .....	8
	Installation .....	8

---

# SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87056691

## Chapter 1 - FWD Front Axle

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Front to Rear Axle Ratio .....	3
	Bolt Torque Specifications .....	6
	Special Tools .....	6
25 100	Description of Operation .....	7
	FWD Front Axle .....	7
	Troubleshooting .....	8
	Lubrication .....	10
	Lubricate Every 50 Hours - Standard FWD .....	10
	Overhaul .....	11
	Standard FWD Axle .....	11
	Removal .....	11
	Installation .....	11
25 108	Gear Reduction Drop Box .....	12
	Disassembly .....	12
25 102	Front Axle and Differential .....	15
	Disassembly .....	15
	Drive Pinion .....	16
	Disassembly .....	16
	Front Axle .....	17
	Inspection .....	17
	Differential .....	17
	Inspection .....	17
	Gear Reduction - Drop Box .....	17
	Inspection .....	17
	Drive Pinion .....	18
	Assembly .....	18
	Differential Gear .....	18
	Assembly .....	18
	Axle and Differential .....	19
	Assembly .....	19
	Differential Case Bearing Preload .....	20
	Check and Adjustment .....	20
	Ring Gear-to-Pinion Backlash .....	20
	Check and Adjustment .....	20

---

## SECTION 25 - FWD FRONT AXLE

BOOK 2 - 87056691

### Chapter 1 - FWD Front Axle (Continued)

#### CONTENTS

Section	Description	Page
25 108	Gear Reduction Box .....	23
	Assembly .....	23
	Ring Gear-to-Pinion Backlash .....	25
	Check and Adjustment .....	25
	Bevel Gear-to-Pinion Backlash .....	26
	Check .....	26

## SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87056691

### Chapter 1 - Differential, Rear Axle

#### CONTENTS

Section	Description	Page
27 000	Specifications .....	2
	Bolt Torque Specifications .....	3
	Special Tools .....	3
	Description of Operation .....	4
27 110	Differential .....	6
27 110	Differential Lock .....	6
27 126	Rear Axle .....	7
	Overhaul .....	8
27 106	Differential .....	8
	Removal .....	8
	Disassembly .....	10
	Inspection .....	10
	Assembly .....	11
	Installation .....	11
	Drive Pinion .....	13
	Removal .....	13



---

## SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 2 - 87056691

### Chapter 1 - Differential, Rear Axle (Continued)

#### CONTENTS

Section	Description	Page
	Disassembly .....	13
	Inspection .....	14
	Assembly .....	14
27 126	Rear Axle .....	17
	Removal .....	17
	Disassembly .....	18
	Inspection .....	21
	Assembly .....	22
27 126	Final Pinion .....	26
	Removal .....	26
	Disassembly .....	27
	Inspection .....	29
	Assembly .....	30
	Installation .....	32

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87056692

### Chapter 1 - Hydrostatic Transmission

#### CONTENTS

Section	Description	Page
	Specifications .....	4
	Metric Bolt Torque Specifications .....	6
	Special Tools .....	6
29 202	Description of Operation .....	7
	Power Flow .....	8
	High Range .....	8
	Low Range .....	9

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87056692

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Oil Flow .....	10
	Neutral Position .....	10
	Forward Position .....	11
	Reverse Position .....	12
29 212	Variable Displacement Pump .....	13
29 212	Two Position Displacement Motor .....	14
29 134	Hi/Lo Speed Control/Control Pod .....	15
	Hi/Lo Speed Control .....	15
29 200	Foot Control Pedals .....	15
	Troubleshooting .....	18
	Charge Pump Relief Valve .....	20
	Test .....	20
	Pressure Testing and Adjustments .....	21
	High Pressure Relief Valve .....	21
	Hi/Low Pressure Test .....	23
	Separating the Tractor .....	25
	DX35, DX40, and DX45 w/HST Transmission .....	25
	Separating at the HST Housing/Engine .....	25
	Separating the HST Housing at the Gearbox .....	32
	Attaching the HST Housing to the Gearbox .....	34
	Attaching the HST to the Engine .....	37
29 202	Hydrostatic Transmission .....	44
	Disassembly .....	44
	Charge Pump .....	44
	Removal .....	44
29 130	Port Block .....	45
	Removal .....	45
	Cylinder Block Assembly .....	46
	Removal .....	46
	Motor Swash Plate .....	46
	Removal .....	46

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87056692

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Input and Output Shaft .....	47
	Removal .....	47
	Pump Swash Plate .....	47
	Removal .....	47
29 130	Port Block .....	48
	Removal .....	48
	Inspection .....	48
	Piston .....	49
	Inspection .....	49
	Charge Pump .....	50
	Inspection .....	50
	Swash Plate .....	50
	Assembly .....	50
	Pump Shaft (Input Shaft) .....	51
	Assembly .....	51
	Charge Pump .....	51
	Assembly .....	51
29 218	Cylinder Block .....	51
	Assembly for Pump .....	51
	Motor Shaft .....	52
	Assembly .....	52
29 218	Cylinder Block .....	52
	Assembly for Motor .....	52
	Port Block .....	53
29 130	Assembly .....	53
	Installation .....	54
	Hydrostatic Transmission .....	55
	Assembly .....	55
29 204	Check Valve .....	55
	Description of Operation .....	55
	Disassembly .....	55
	Inspection .....	55
	Assembly .....	55

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87056692

## Chapter 1 - Hydrostatic Transmission (Continued)

### CONTENTS

Section	Description	Page
	Description of Operation - Gearbox .....	56
29 300	Gearbox .....	56
	Gearbox Identification .....	57
	Overhaul - Gearbox .....	58
	Gearbox .....	58
	Removal .....	58
	Disassembly .....	59
	Inspection .....	63
	Assembly .....	64
	Installation .....	68
29 214	Hi/Lo Solenoid Valve .....	69
	Removal .....	71
	Disassembly .....	71
	Inspection .....	72
	Testing .....	72
	Assembly .....	73
	Adapter Block .....	74
	Removal .....	74
	Disassembly .....	75
	Inspection .....	76
	Assembly .....	76
	Cruise Control .....	77
	Electromagnet Air Gap .....	78
	Adjustment .....	78

---

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 3 - 87056692

### Chapter 2 - Adjustment

#### CONTENTS

Section	Description	Page
	HST Pedals .....	2
	Stop Adjustment .....	2
	HST Cruise Control Magnet .....	3
	Adjustment .....	3
29 200	HST Foot Control Pedals .....	4
	Neutral Adjustment .....	4
	HST Pedals Return Spring .....	5
	Adjustment .....	5

## SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 3 - 87056692

### Chapter 1 - Power Take-Off (PTO) Systems

#### CONTENTS

Section	Description	Page
	Specifications .....	3
	PTO Hydraulic System .....	3
	PTO Clutch .....	3
	Metric Bolt Torque Specifications .....	4
	Special Tools .....	5
31 000	Description of Operation .....	6
31 110	Rear PTO .....	7
	Power Flow Diagram for the 12 x 12 Synchronized Shuttle Shift Transmission .....	7
	Power Flow Diagram for the Hydrostatic Transmission (HST) .....	8
31 120	Power Flow Diagram for Tractors Equipped with a Mid PTO Kit .....	9
31 104	Hydraulic Fluid Flow .....	10
	PTO Clutch Assembly .....	10
	Troubleshooting .....	13
	Pressure Testing .....	14

---

# SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 3 - 87056692

## Chapter 1 - Power Take-Off (PTO) Systems (Continued)

### CONTENTS

Section	Description	Page
	Test Procedure (Below Serial Number - See Chart) .....	14
	Test Procedure (Serial Number and Above - See Chart) .....	15
	Overhaul .....	17
31 104 82	PTO System Diverter Valve Assembly .....	17
	Removal .....	17
	Disassembly .....	17
	Inspection .....	18
	Assembly .....	18
	Installation .....	19
31 104 82	PTO Clutch Control Valve (BSN) .....	20
	Removal .....	20
	Spool .....	21
	Removal .....	21
	Inspection .....	21
	Assembly .....	21
	Clutch Control Relief Valve .....	23
	Disassembly .....	23
	Inspection .....	23
	Assembly .....	23
	Installation .....	24
31 104 82	PTO Clutch Control Valve (ASN) .....	25
	Removal .....	25
	Disassembly .....	26
	Inspection .....	26
	Assembly .....	26
	Installation .....	28
31 114 62	PTO Clutch .....	29
	Removal .....	29
31 114 68	Disassembly .....	32
31 114 62	Inspection .....	34
	Assembly .....	36
	Installation .....	40
31 114 42	Power Take Off System System for 12 x 12 Synchronized Shuttle Shift Transmission .	44
	Removal .....	44

---

# SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS

BOOK 3 - 87056692

## Chapter 1 - Power Take-Off (PTO) Systems (Continued)

### CONTENTS

Section	Description	Page
	PTO Input Shaft .....	44
	Removal .....	44
	Disassembly .....	45
	Inspection .....	45
	Assembly .....	45
	Installation .....	46
31 114 46	PTO Countershaft and Rear PTO Shaft .....	46
	Removal .....	46
31 114 46	Countershaft .....	48
	Disassembly .....	48
	Inspection .....	49
	Assembly .....	49
	Installation .....	51
31 114 00	PTO System for Hydrostatic Transmission (HST) .....	53
	Removal .....	53
31 114 42	PTO Input Shaft .....	53
	Removal .....	53
	Disassembly .....	54
	Inspection .....	54
	Assembly .....	54
	Installation .....	55
31 114 46	PTO Countershaft and Rear PTO Shaft .....	55
	Removal .....	55
31 114 42	Disassembly .....	59
	Inspection .....	61
	Assembly .....	61
31 114 19	Installation .....	63
31 120 00	Mid PTO Countershaft and Drop Box .....	66
	Removal .....	66
	Disassembly .....	71
	Inspection .....	73
	Assembly .....	74
	Installation .....	75

---

## SECTION 33 - BRAKES

BOOK 3 - 87056692

### Chapter 1 - Brakes

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Bolt Torque Specifications .....	3
	Description of Operation .....	4
33 120	Brakes .....	4
33 110	Parking Brake .....	6
33 120	Overhaul .....	7
	Brakes .....	7
	Removal and Disassembly .....	7
	Inspection .....	9
	Assembly and Installation .....	10
	Adjustment .....	12

## SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87056692

### Chapter 1 - Hydraulic System

#### CONTENTS

Section	Description	Page
	Specifications .....	4
	Metric Bolt Torque Specifications .....	5
	Special Tools .....	6
35 000	Description of Operation .....	7
	Flow Priority .....	8
	Hydraulic System .....	9
	Hydraulic Fluid Filter .....	9
35 080	Combination System Relief - Diverter Valve Manifold Assembly .....	10
35 200	Control Valve Assembly (HPL) .....	11
35 210	Fluid Flow .....	12
	Neutral Position .....	12
35 210	Raising Position .....	13
35 210	Lowering Position .....	14



---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87056692

## Chapter 1 - Hydraulic System (Continued)

### CONTENTS

Section	Description	Page
35 200	Bypass Spool - Fluid Flow .....	15
	Closed Position .....	15
35 200	Open Position .....	15
35 183	Flow Control Valve .....	16
35 108	Single Lever - Position Control .....	16
35 108	Neutral Position to Raise .....	17
	Raise Position to Neutral Position .....	17
	Neutral Position to Lowering Position .....	17
35 112	Dual Lever Position Control (Draft Control) .....	18
	Top Link Sensing Raise .....	18
	Top Link Sensing Lower .....	19
	Varying Draft Control Settings .....	19
35 124	Combining Position and Draft Control Settings .....	20
	Troubleshooting .....	21
	Pressure Testing .....	23
	Main System Relief Valve .....	23
	Inlet Restriction .....	25
	Pump Efficiency .....	26
	Overhaul - Hydraulic System .....	27
35 110	Lift Cylinder .....	27
	Removal .....	27
	Disassembly .....	31
	Inspection and Repair .....	33
	Assembly .....	33
	Installation .....	35
	Flow Control Valve .....	37
	Removal .....	37
	Disassembly .....	37
	Inspection .....	37
	Assembly .....	37
	Installation .....	37
35 200	Hydraulic Control Valve .....	38
	Removal .....	38
	Disassembly .....	38

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87056692

## Chapter 1 - Hydraulic System (Continued)

### CONTENTS

Section	Description	Page
	Inspection .....	39
	Assembly .....	39
	Installation .....	41
35 180	Combination System Relief Valve and Diverter Valve Assembly .....	42
	Removal .....	42
	Disassembly .....	42
	Inspection .....	43
	Assembly .....	43
	Installation .....	44
35 182	PTO System Diverter Valve .....	45
	Removal .....	45
	Disassembly .....	45
	Inspection .....	46
	Assembly .....	46
	Installation .....	47
35 124	Adjustments .....	48
	HPL Linkage .....	48
	Adjustment Procedure .....	48
	Control Lever .....	48
	Adjustment Procedure .....	48
	Description of Operation - Hydraulic Pump and Filter .....	49
35 304	Hydraulic Pump and Filter .....	49
35 304	Hydraulic Pump .....	50
	Removal .....	50
	Disassembly .....	52
	Inspection and Repair .....	52
	Assembly .....	53
	Installation .....	54
35 300	Sump Tube and Screen Filter .....	56
	Removal .....	56
	Disassembly .....	57
	Inspection .....	57
	Assembly .....	57

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 3 - 87056692

## Chapter 1 - Hydraulic System (Continued)

### CONTENTS

Section	Description	Page
	Description of Operation - Remote Valves .....	59
35 204	Remote Valves .....	59
	Rear (Single-Spool) Remote Valve .....	60
	Front (Double-Spool) Remote Valve .....	60
	Rear (Single-spool) Remote System .....	62
	Fluid Flow .....	62
	Neutral Position .....	62
	Remote Cylinder Extending .....	63
	Remote Cylinder Retracting .....	64
	Front Remote (Two Spool) Loader Control Valve Fluid Flow Diagrams .....	65
	Bucket Control .....	65
	Neutral/Lift Control-Neutral .....	65
	Dumping/Lift Control-Neutral .....	66
	Dumping REGEN/Lift Control-Neutral .....	67
	Roll Back/Lift Control-Neutral .....	68
	Neutral/Lift Control-Raising .....	69
	Neutral/Lift Control-Lowering .....	70
	Neutral/Lift Control-Float .....	71
35 204	Overhaul .....	72
	Rear (Single-Spool) Remote Valve .....	72
	Removal .....	72
	Disassembly .....	73
	Inspection .....	73
	Assembly .....	73
	Front (Double Spool) Remote Valve .....	74
	Removal .....	74
	Disassembly .....	76
	Inspection .....	76
	Assembly .....	76
	Installation .....	77

---

# SECTION 41 - STEERING

BOOK 4 - 87056693

## Chapter 1 - Steering

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
41 000	Specifications .....	3
	Metric Bolt Torque Specifications .....	4
	Special Tools .....	5
	Description of Operation .....	6
41 206	Power Steering Pump .....	6
41 216	Steering Cylinders .....	6
41 216	2WD and FWD .....	6
41 200	Power Steering Operation - 2WD and FWD .....	7
	Fluid Flow - Neutral Position .....	7
41 200	Fluid Flow - Left Turn .....	8
41 200	Fluid Flow - Right Turn .....	9
41 200	Manual Operation - 2WD and FWD .....	10
	Troubleshooting .....	11
	Pressure Testing .....	13
	Pump, Steering Motor, and Relief Valve .....	13
	Test Results .....	13
	Steering Cylinder .....	14
	Test Results .....	14
	Overhaul .....	15
41 204	Steering Control Motor .....	15
	Removal .....	15
	Disassembly .....	16
	Inspection .....	22
	Assembly .....	22
	Installation .....	31
41 216	Steering Cylinder - FWD .....	32
	Removal .....	32
41 216	Steering Cylinder - 2WD .....	33
	Removal .....	33
41 216	Steering Cylinder - 2WD and FWD .....	36
	Disassembly .....	36
	Inspection .....	37

---

## SECTION 41 - STEERING

BOOK 4 - 87056693

### Chapter 1 - Steering (Continued)

#### CONTENTS

Section	Description	Page
	Assembly .....	38
41 216	Steering Cylinder - FWD .....	40
	Installation .....	40
41 216	Steering Cylinder - 2WD .....	42
	Installation .....	42
41 206	Pump and Reservoir Tank .....	44
	Pump Removal .....	44
	Disassembly .....	45
	Inspection and Repair .....	45
	Assembly .....	45
41 206	Pump Installation .....	46

## SECTION 44 - 2WD FRONT AXLE

BOOK 4 - 87056693

### Chapter 1 - 2WD Front Axle

#### CONTENTS

Section	Description	Page
44 100	Specifications .....	2
	Bolt Torque Specifications .....	2
44 101	Description of Operation .....	3
	Troubleshooting .....	4
	Overhaul .....	5
	Front Axle .....	5
	Removal .....	5
	Disassembly .....	6
	Inspection .....	9
	Assembly .....	10
44 103	Installation .....	12

---

# SECTION 50 - CLIMATE CONTROL

BOOK 4A - 87622994

## Chapter 1 - Climate Control - DX40-DX45 With Cab

### CONTENTS

Section	Description	Page
	Specifications .....	4
	Compressor .....	4
	Refrigerant .....	4
	Refrigerant Oil .....	4
	Low Pressure Switch .....	4
	High Pressure Switch .....	4
	Special Tools .....	5
	Description and Operation .....	6
	Compressor .....	6
	Condenser .....	6
	Evaporator .....	6
	Expansion Valve .....	7
	Receiver/Drier .....	8
	Heater .....	8
	Heater System .....	9
	HVAC Control Panel .....	10
	Cab Air Filter .....	10
	Cleaning Cab Air Filter .....	11
	Compressor Protection Switches .....	11
	High-Pressure Cutout Switch .....	11
	Low-Pressure Cutout Switch .....	11
	Component Location .....	12
	Cab and Engine Bay .....	12
	Cab Roof .....	13
	Troubleshooting .....	14
	Expansion Valve - Testing .....	16
	Temperature/Pressure Chart .....	16
	Service Precautionary Statements .....	17
	Leak Testing .....	17
	Refilling .....	17
	Contaminants .....	17
	General .....	17
	Preventing Mixing of Service Equipment .....	18

---

# SECTION 50 - CLIMATE CONTROL

BOOK 4A - 87622994

## Chapter 1 - Climate Control - DX40-DX45 With Cab (Continued)

### CONTENTS

Section	Description	Page
	Refrigerant Extraction and Recycling Equipment .....	18
	Using Extraction Equipment .....	18
	Using Recycling Equipment .....	19
	Recycling vs. Reclaiming .....	19
	Containment of Air Conditioning Refrigerants .....	19
	Recovery .....	19
	Flushing .....	20
	Recharging/Refilling .....	20
	Using a Manifold Gauge Set .....	20
	Checking Refrigerant for Excess Air .....	21
	Containers for Storing Recycled Refrigerant .....	22
	Disposal of Empty or Near-empty Disposable Containers .....	22
	Applicable SAE Standards .....	22
	Related SAE Standards .....	22
	Manifold Gauges and Interpretations .....	23
	Performance Test Examples .....	23
	Evacuating the Refrigerant .....	34
	Vacuum Test .....	37
	Pressure Test .....	40
	Leakage Test .....	41
	Charging .....	41
	Overhaul .....	43
	Belt Replacement .....	43
	Specification .....	43
	HVAC Controls .....	43
	Removal .....	43
	Installation .....	44
	Heater Valve .....	44
	Removal .....	44
	Installation .....	45

---

# SECTION 50 - CLIMATE CONTROL

BOOK 4A - 87622994

## Chapter 1 - Climate Control - DX40-DX45 With Cab (Continued)

### CONTENTS

Section	Description	Page
	Condenser .....	45
	Removal .....	45
	Installation .....	47
	Receiver/Drier .....	49
	Removal .....	49
	Installation .....	50
	Evaporator/Heater Core Replacement .....	50
	Removal .....	50
	Disassembly .....	52
	Assembly .....	52
	Installation .....	53
	Expansion Valve .....	54
	Removal .....	54
	Installation .....	55
	Temperature Sensor .....	56
	Removal .....	56
	Installation .....	57
	Blower Motor/Blower Motor Resistor .....	58
	Removal .....	58
	Disassembly .....	60
	Assembly .....	60
	Installation .....	60
	Low Pressure Switch .....	62
	Replacement .....	62
	High Pressure Switch .....	62
	Replacement .....	62
	A/C Compressor .....	63
	Removal .....	63
	Compressor Assembly Torques .....	65
	Compressor Breakdown .....	66
	Clutch Breakdown .....	67



---

# SECTION 50 - CLIMATE CONTROL

BOOK 4A - 87622994

## Chapter 1 - Climate Control - DX40-DX45 With Cab (Continued)

### CONTENTS

Section	Description	Page
	Compressor Repaired Internally and Reinstalled in the System .....	67
	Sanden Compressor Replaced by a New Sanden Compressor of the Same Type .....	68
	Clutch Head Repair .....	69
	Keyed Shaft Armature Removal .....	69
	Rotor Assembly Removal .....	70
	Field Coil Assembly Removal .....	70
	Field Coil Assembly Installation .....	70
	Rotor Assembly Installation .....	71
	Armature Assembly Installation .....	71
	Replacement of Shaft Seal .....	72
	Cylinder Head Removal .....	75
	Valve Plate Removal .....	76
	Valve Plate and Cylinder Head Installation .....	76

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87056693

## Chapter 1 - Electrical

### CONTENTS

Section	Description	Page
	Bolt Torque Specifications .....	5
55 100	Description of Operation .....	6
	Component Location and Function .....	6
55 100	Wiring Harnesses .....	8
	Grounds .....	8
	Electrical System Components .....	9
	Battery .....	9
	Checking the Electrolyte Level .....	10
	Removal .....	10
	Installation .....	10
	Main Fuse .....	11
	Replacement .....	11
	Fuse Block .....	12
	Key Switch .....	13
	Removal .....	13
	Terminal Identification .....	14
	Testing .....	14
	Stop Position (Not Shown) .....	14
	Heat/Accessory/Run Position .....	14
	Start Position .....	15
	Light Switch .....	15
	Light Switch Removal .....	16
	Light Switch Testing .....	17
	“Off” Position .....	17
	“Taillight/Instrument Panel” Position (middle position) .....	18
	“Headlight Position” (forward position) .....	19
	Light Switch Installation .....	20
55 404	Headlight .....	21
	Replacement .....	21
55 404	Taillight .....	22

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87056693

## Chapter 1 - Electrical (Continued)

### CONTENTS

Section	Description	Page
	Hazard Light Switch .....	23
	Removal .....	23
	Testing .....	24
	“Off” Position .....	24
	“On” Position .....	24
	Installation .....	25
55 408	Transmission Range Safety Switch (HST and Gear) .....	26
	Removal .....	26
	Testing .....	27
	Extended Position .....	27
	Retracted Position (Not Shown) .....	27
	Installation .....	27
55 408	Rear (Main) PTO Safety Switch .....	28
	Testing .....	28
	Extended Position .....	28
	Retracted Position .....	29
55 408	Mid PTO Safety Switch (Optional for DX35, DX45 and DX40 Models Only) .....	29
	Removal .....	29
	Testing .....	29
	Extended Position .....	29
	Retracted Position .....	30
55 408	Seat Safety Switch .....	30
	Removal .....	31
	Testing .....	31
	Extended Position .....	31
	Retracted Position .....	31
55 408	Parking Brake Safety Switch .....	32
	Testing .....	32
	Extended Position .....	32
	Retracted Position .....	32

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87056693

## Chapter 1 - Electrical (Continued)

### CONTENTS

Section	Description	Page
	Relays .....	33
	(DX) Series Relay Panel Identification .....	33
	(D) Series Relay Panel Identification .....	34
	Testing-Micro Relays .....	35
	“HI”, “LOW”, Cruise Control, Fuel Shutoff, PTO Safety, and Glow Plug Lamp Relays ..	35
	Replacement .....	35
	Headlight and Neutral Start Relays .....	36
	Replacement .....	36
	Glow Plug Power Relay .....	38
	Replacement .....	38
	Diodes .....	39
	Module Testing .....	40
	Diode Testing .....	41
	Operator Safety Module .....	42
	Removal .....	42
	Testing .....	43
	Glow Plug Timer .....	44
	Testing .....	45
55 201	Engine Glow Plugs .....	45
	Removal .....	46
	Testing .....	47
	Installation .....	47
	Hazard Flasher/Turn Signal Control Module .....	48
	Removal .....	49
	Testing .....	50
	Installation .....	53
55 410	Fuel Level Sending Unit .....	54
	Removal .....	54
	Testing .....	55
	Installation .....	56

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87056693

## Chapter 1 - Electrical (Continued)

### CONTENTS

Section	Description	Page
	Fuel Shutoff Solenoid . . . . .	57
	Removal . . . . .	57
	Testing . . . . .	58
	Installation . . . . .	58
55 414	Engine Oil Pressure Switch . . . . .	59
	Testing . . . . .	59
	Engine Coolant Temperature Sending Unit . . . . .	60
	Testing . . . . .	60
	Hi/Low Transmission Range Switch . . . . .	62
	Testing . . . . .	62
	Optional Testing . . . . .	64
	Hi/Low Transmission Range Solenoid . . . . .	65
	Removal . . . . .	66
	Testing . . . . .	66
	Installation . . . . .	67
	Electric Cruise Control Switch (HST) . . . . .	68
	Removal . . . . .	68
	Testing . . . . .	69
	Installation . . . . .	69
	Cruise Control Magnet (HST) . . . . .	70
	Removal . . . . .	70
	Testing . . . . .	71
	Installation . . . . .	71
	Cruise Control Brake Release Switch (HST) . . . . .	72
	Removal . . . . .	72
	Testing . . . . .	72
	Extended Position (Not Shown) . . . . .	72
	Retracted Position . . . . .	73
	Installation . . . . .	73

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87056693

## Chapter 2 - Schematics

### CONTENTS

Section	Description	Page
	Complete Wiring Schematic . . . . .	2
	Safety Start Circuit (Operator Present) . . . . .	18
	Safety Start Circuit (Operator Not Present) . . . . .	22
	Safe Operation Circuit (Operator Present) . . . . .	26
	Safe Operation Circuit (Operator Not Present) . . . . .	30
	Glow Plug Circuit . . . . .	34
	Road Lights Circuit . . . . .	38
	Hazard Flasher Circuit . . . . .	42
	Right Turn Signal Circuit . . . . .	46
	Left Turn Signal Circuit . . . . .	50
	PTO Indicator Light Circuit . . . . .	54
	Engine Coolant Temperature Circuit . . . . .	58
	Engine Low Oil Pressure Indicator Light Circuit . . . . .	60
	Fuel Level Circuit . . . . .	62
	Parking Brake Indicator Light Circuit . . . . .	64
	Tachometer Circuit . . . . .	66
	Auxiliary Power Socket Circuit . . . . .	68
	Cruise Control Circuit (HST Transmission) . . . . .	70
	HST Range "LOW" Shift Circuit . . . . .	74
	HST Range "HIGH" Shift Circuit . . . . .	78
	Charging Circuit . . . . .	82

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87056693

## Chapter 3 - Instrument Panel

### CONTENTS

Section	Description	Page
	Component Operation and Servicing .....	2
	Instrument Panel .....	2
	Removal .....	4
	Component Testing and Replacement .....	4
	Fuel Gauge .....	4
	Testing .....	4
	Replacement .....	5
	Temperature Gauge .....	6
	Testing .....	6
	Replacement .....	6
	Tachometer .....	7
	Testing .....	7
	Replacement .....	8
	Instrument Panel Indicator and Illumination Lights .....	10
	Bulb Identification Chart .....	10
	Bulb Replacement .....	11

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87056693

## Chapter 4 - Alternator and Starter

### CONTENTS

Section	Description	Page
	Alternator Specifications .....	3
	Alternator Troubleshooting .....	4
	Charging System .....	6
	Alternator .....	6
	Description of Operation .....	6
	Charging Circuit .....	7
	Principle of IC Regulator .....	7
	Preliminary Alternator Tests .....	9
	Alternator Drive Belt .....	9
	Alternator Output .....	9
	Alternator Removal .....	11
	Alternator Disassembly .....	11
	Alternator Component Testing and Inspection .....	15
	Stator .....	15
	Rotor .....	16
	Rectifier Assembly .....	17
	Alternator Brushes .....	18
	Alternator Bearings .....	18
	Drive Pulley .....	19
	Alternator Frames .....	19
	Assembly .....	19
	Alternator Bench Check .....	23
	Installation .....	24
	Starter Motor Specifications .....	25
	Starter Motor Troubleshooting .....	26
	Starting System .....	28
	Description of Operation .....	28
	Starter Components .....	28
	Starter Motor Assembly .....	28
	Starter Solenoid .....	29
	Pinion Clutch .....	29



---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87056693

## Chapter 4 - Alternator and Starter (Continued)

### CONTENTS

Section	Description	Page
	Removal .....	30
	Disassembly .....	31
	Inspection .....	35
	Electrical Testing .....	38
	Armature .....	38
	Brush Holder .....	39
	Field Coil .....	39
	Starter Solenoid .....	40
	Assembly .....	43
	No Load Test .....	48
	Installation .....	48

---

# SECTION 55 - ELECTRICAL

BOOK 4A - 87622994

## Chapter 5 - Electrical - DX40-DX45 With Cab

### CONTENTS

Section	Description	Page
	Bolt Torque Specifications .....	5
55 100	Description of Operation .....	6
	Component Location and Function .....	6
55 100	Wiring Harnesses .....	8
	Grounds .....	8
	Electrical System Components .....	9
	Battery .....	9
	Checking the Electrolyte Level .....	10
	Removal .....	10
	Installation .....	10
	Main Fuse .....	11
	Replacement .....	11
	Fuse Blocks .....	12
	Key Switch .....	14
	Removal .....	14
	Terminal Identification .....	15
	Testing .....	15
	Stop Position (Not Shown) .....	15
	Heat/ Accessory/ Run Position .....	15
	Start Position .....	15
	Installation .....	16
	Multifunction Stalk Switch (Lights, Turn Signals, Horn) .....	16
	Removal .....	17
	Switch Testing .....	17
	Installation .....	17
55 404	Headlights .....	18
55 404	Taillight/Rear Flasher Light .....	19
	Front Flasher Warning Light/Turn Signals .....	20
	Cab Work Lights .....	20
	Hazard Light Switch .....	21
	Removal .....	21

---

# SECTION 55 - ELECTRICAL

BOOK 4A - 87622994

## Chapter 5 - Electrical - DX40-DX45 With Cab (Continued)

### CONTENTS

Section	Description	Page
	Testing .....	22
	“Off” Position .....	22
	“On” Position .....	22
	Installation .....	23
55 408	Transmission Range Safety Switch .....	24
	Removal .....	24
	Testing .....	25
	Extended Position .....	25
	Retracted Position (Not Shown) .....	25
	Installation .....	25
55 408	Rear (Main) PTO Safety Switch .....	26
	Removal .....	26
	Testing .....	26
	Extended Position (PTO “ON”) .....	26
	Retracted Position (PTO “OFF”) .....	27
	Installation .....	27
55 408	Mid PTO Safety Switch (Optional) .....	27
	Removal .....	27
	Testing .....	27
	Extended Position .....	27
	Retracted Position .....	28
	Installation .....	28
55 408	Seat Safety Switch .....	29
	Description .....	29
	Removal .....	29
	Testing .....	30
	Extended Position .....	30
	Retracted Position .....	30
	Installation .....	30

---

# SECTION 55 - ELECTRICAL

BOOK 4A - 87622994

## Chapter 5 - Electrical - DX40-DX45 With Cab (Continued)

### CONTENTS

Section	Description	Page
55 408	Parking Brake Safety Switch .....	31
	Testing .....	31
	Extended Position .....	31
	Retracted Position .....	31
	Relays .....	32
	(DA) Series Relay Panel Identification .....	32
	Removal .....	33
	Testing-Micro Relays .....	33
	“HI”, “LOW”, Cruise Control, Fuel Shutoff, PTO Safety, Glow Plug Lamp, Flasher Cutoff, Park Brake Interface, Front Work Lights, and HVAC Relays .....	33
	Replacement .....	33
	Testing .....	34
	Headlight, Neutral Start, and Cab Power Relays .....	34
	Replacement .....	34
	Glow Plug Power Relay .....	36
	Testing .....	36
	Installation (All Relays) .....	36
	Diodes .....	37
	Module Testing .....	38
	Diode Testing .....	39
	Operator Safety Module .....	40
	Removal .....	40
	Testing .....	41
	Installation .....	41
	Park Brake Safety Alarm (Buzzer) .....	42
	Removal .....	42
	Testing .....	42
	Installation .....	44
	Glow Plug Timer .....	44
	Removal .....	44
	Testing .....	45
	Installation .....	45

---

# SECTION 55 - ELECTRICAL

BOOK 4A - 87622994

## Chapter 5 - Electrical - DX40-DX45 With Cab (Continued)

### CONTENTS

Section	Description	Page
55 201	Engine Glow Plugs .....	46
	Removal .....	46
	Testing .....	47
	Installation .....	47
	Hazard Flasher/Turn Signal Control Module .....	48
	Removal .....	48
	Testing .....	50
55 410	Installation .....	52
	Fuel Level Sending Unit .....	53
	Removal .....	53
	Testing .....	54
	Installation .....	55
	Fuel Shutoff Solenoid .....	56
	Removal .....	56
Testing .....	56	
55 414	Installation .....	57
	Engine Oil Pressure Switch .....	58
	Testing .....	58
	Engine Coolant Temperature Sending Unit .....	59
	Testing .....	59
	Hi/Low Transmission Range Switch (HST) .....	61
	Testing .....	61
	Optional Joystick Switch Testing .....	63
	Hi/Low Transmission Range Solenoid (HST) .....	64
	Removal .....	65
	Testing .....	65
Installation .....	66	
Electric Cruise Control Switch (HST) .....	67	
Removal .....	67	
Testing .....	68	
Installation .....	68	

---

# SECTION 55 - ELECTRICAL

BOOK 4A - 87622994

## Chapter 5 - Electrical - DX40-DX45 With Cab (Continued)

### CONTENTS

Section	Description	Page
	Cruise Control Magnet (HST) .....	69
	Removal .....	69
	Testing .....	70
	Installation .....	70
	Cruise Control Brake Release Switch (HST) .....	71
	Removal .....	71
	Testing .....	71
	Extended Position .....	71
	Retracted Position .....	71
	Installation .....	72
	Cab to Tractor Harness Main Connectors .....	73

---

# SECTION 55 - ELECTRICAL

BOOK 4A - 87622994

## Chapter 6 - Schematics - DX40-DX45 With Cab

### CONTENTS

Section	Description	Page
	Electrical Schematic Diagram .....	2
	Safety Start Circuit (Operator Present or Not Present) .....	28
	Safe Operation Operator Present Circuit .....	32
	Safe Operation Operator Not Present Circuit .....	36
	Safety Alarm Circuit (Key "Off" and Park Brake "Off") .....	40
	Safety Alarm Circuit (Key "On", Rear PTO "On", Operator Not Present and Park Brake "On") .....	42
	Safety Alarm Circuit (Key "On", Rear PTO "On", Operator Not Present and Park Brake "Off") .....	46
	Glow Plug Circuit .....	50
	Headlights Circuit .....	54
	Cab Work Lights Circuit .....	58
	Interior Cab Lights Circuit .....	62
	Hazard Flasher Lights Circuit .....	64
	Right Turn Signal Circuit .....	68
	Left Turn Signal Circuit .....	74
	HVAC Circuit .....	76
	Auxiliary Power Socket Circuit .....	80
	Front and Rear Wiper Circuit .....	82
	Horn Circuit .....	86
	Cruise Control Circuit (HST Transmission) .....	88
	HST Range "Low" Shift Circuit .....	92
	HST Range "High" Shift Circuit .....	96
	Charging Circuit .....	100
	PTO Indicator Light Circuit .....	104
	Park Brake Indicator Light Circuit .....	108
	Engine Coolant Temperature Circuit .....	112
	Engine Low Oil Pressure Indicator Light Circuit .....	114
	Fuel Level Circuit .....	116
	Tachometer Circuit .....	118
	Beacon Circuit .....	120
	Radio Circuit .....	124

---

# SECTION 55 - ELECTRICAL

BOOK 4A - 87622994

## Chapter 7 - Instrument Panel - DX40-DX45 With Cab

### CONTENTS

Section	Description	Page
	Component Operation and Servicing .....	2
	Instrument Panel .....	2
	Removal .....	4
	Component Testing and Replacement .....	4
	Fuel Gauge .....	4
	Testing .....	4
	Replacement .....	5
	Temperature Gauge .....	6
	Testing .....	6
	Replacement .....	6
	Tachometer .....	7
	Testing .....	7
	Proof Meter (hour meter) .....	8
	Instrument Panel Indicator and Illumination Lights .....	9
	Bulb Identification Chart .....	9
	Bulb Replacement .....	10



---

# SECTION 55 - ELECTRICAL

BOOK 4A - 87622994

## Chapter 8 - Alternator and Starter - DX40-DX45 With Cab

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Alternator Specifications .....	3
	Alternator Troubleshooting .....	4
	Charging System .....	6
	Alternator .....	6
	Description of Operation .....	6
	Charging Circuit .....	7
	Principle of IC Regulator .....	7
	Preliminary Alternator Tests .....	9
	Alternator Drive Belt .....	9
	Alternator Output .....	9
	Alternator Removal .....	11
	Alternator Disassembly .....	11
	Alternator Component Testing and Inspection .....	15
	Stator .....	15
	Rotor .....	16
	Rectifier Assembly .....	17
	Alternator Brushes .....	18
	Alternator Bearings .....	18
	Drive Pulley .....	19
	Alternator Frames .....	19
	Assembly .....	19
	Alternator Bench Check .....	23
	Installation .....	24
	Starter Motor Specifications .....	25
	Starter Motor Troubleshooting .....	26
	Starting System .....	28
	Description of Operation .....	28

---

## SECTION 55 - ELECTRICAL

BOOK 4A - 87622994

### Chapter 8 - Alternator and Starter - DX40-DX45 With Cab (Continued)

#### CONTENTS

Section	Description	Page
	Starter Components .....	28
	Starter Motor Assembly .....	28
	Starter Solenoid .....	29
	Pinion Clutch .....	29
	Removal .....	30
	Disassembly .....	31
	Inspection .....	35
	Electrical Testing .....	38
	Armature .....	38
	Brush Holder .....	39
	Field Coil .....	39
	Starter Solenoid .....	40
	Assembly .....	43
	No Load Test .....	48
	Installation .....	48

---

# SECTION 90 - PLATFORM

BOOK 4 - 87056693

## Chapter 1 - Platform

### CONTENTS

Section	Description	Page
90 105	Hood .....	3
	Removal .....	3
	Installation .....	4
90 100	Rear Hood Side Panels .....	5
	Removal .....	5
	Installation .....	6
90 110	Dash Console .....	7
	Removal .....	7
	Installation .....	9
90 120	Seat .....	11
	Removal - D35, D40, D45 .....	11
	Installation .....	13
	Seat .....	14
	Removal - DX35, DX40, DX45 .....	14
	Disassembly .....	16
	Inspection .....	22
	Assembly .....	22
	Installation .....	29
90 114	ROPS .....	30
	Removal .....	30
	Installation .....	31
	Fuel Tank .....	34
	Removal .....	34
	Installation .....	35
90 116	D35, D40, D45 Fenders .....	36
	Removal .....	36
90 116	DX35, DX40, DX45 Fenders .....	37
	Removal .....	37
	D35, D40, D45 Fenders .....	38
	Installation .....	38

---

## SECTION 90 - PLATFORM

BOOK 4 - 87056693

### Chapter 1 - Platform (Continued)

#### CONTENTS

Section	Description	Page
	DX35, DX40, DX45 Fenders .....	39
	Installation .....	39
90 115	D35, D40, D45 Deck .....	40
	Removal .....	40
90 115	DX35, DX40, DX45 Deck .....	42
	Removal .....	42
90 115	D35, D40, D45 Deck .....	46
	Installation .....	46
90 115	DX35, DX40, DX45 Deck .....	48
	Installation .....	48

## SECTION 90 - PLATFORM

BOOK 4A - 87622994

### Chapter 2 - Platform - DX40-DX45 With Cab

#### CONTENTS

Section	Description	Page
	Hood .....	3
	Removal .....	3
	Installation .....	3
	Rear Hood Panels .....	4
	Removal .....	4
	Installation .....	5
	Dash Console .....	6
	Removal .....	6
	Installation .....	7

---

# SECTION 90 - PLATFORM

BOOK 4A - 87622994

## Chapter 2 - Platform - DX40-DX45 With Cab (Continued)

### CONTENTS

Section	Description	Page
	Operator's Seat .....	9
	Removal .....	9
	Disassembly .....	9
	Inspection .....	15
	Assembly .....	15
	Installation .....	21
	Front Wiper Motor .....	21
	Removal .....	21
	Installation .....	24
	Washer Tank .....	26
	Removal .....	26
	Installation .....	27
	Rear Wiper Motor .....	28
	Removal .....	28
	Installation .....	30
	Door Handle and Latch .....	32
	Removal .....	32
	Installation .....	32
	Door Striker .....	33
	Replacement .....	33
	Adjustment .....	33
	Cab Door .....	34
	Removal .....	34
	Installation .....	34
	Cab Rear Window .....	35
	Removal .....	35
	Installation .....	36
	Fuel Tank .....	38
	Removal .....	38
	Installation .....	39

---

# SECTION 90 - PLATFORM

BOOK 4A - 87622994

## Chapter 2 - Platform - DX40-DX45 With Cab (Continued)

### CONTENTS

Section	Description	Page
	Fenders .....	40
	Removal .....	40
	Installation .....	41
	Cab .....	42
	Removal .....	42
	Cab Lifting Fixture .....	47
	Installation .....	48

**SECTION 00 - GENERAL INFORMATION**

**Chapter 1 - General Information**

**CONTENTS**

<b>Section</b>	<b>Description</b>	<b>Page</b>
00 000	Introduction .....	2
	Safety .....	3
	Technical Information .....	4
	Safety Precautions .....	5
	Safety Decals - D35, D40, D45 .....	8
	Instruction Decals - D35, D40, D45 .....	9
	Safety Decals - DX35, DX40, DX45 .....	12
	Instruction Decals - DX35, DX40, DX45 .....	13
	International Symbols - DX35, DX40, DX45 .....	17
	Specifications - D35, D40, D45 .....	18
	General Dimensions - D35, D40, D45 .....	25
	Specifications - DX35, DX40, DX45 .....	31
	General Dimensions - DX35, DX40, DX45 .....	37
	Minimum Hardware Tightening Torques .....	41
	Special Tools .....	43
	Recommended Lubricants .....	44
	Adjustments .....	45
	Tire Inflation Pressure - Adjustments .....	45
00 100	Pre-Season and Pre-Delivery Checklist .....	46

## **INTRODUCTION**

This repair manual provides the technical information needed to properly service the Case IH D35, DX35, D40, DX40, D45 and DX45 tractors. Use this manual in conjunction with the operator's manual for complete operation, adjustment, and maintenance information.

On Case IH equipment, left and right are determined by standing behind the unit, looking in the direction of travel.



## PRECAUTIONARY STATEMENTS

### PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements (“**CAUTION**”, “**WARNING**”, and “**DANGER**”) followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.

---

 **CAUTION** 

---

The word “**CAUTION**” is used where a safe behavioral practice according to operating and maintenance instructions and common safety practices will protect the operator and others from accident involvement.

---

---

 **DANGER** 

---

The word “**DANGER**” denotes a forbidden practice in connection with a serious hazard.

---

---

 **WARNING** 

---

The word “**WARNING**” denotes a potential or hidden hazard which has a potential for serious injury. It is used to warn operators and others to exercise every appropriate means to avoid a surprise involvement with machinery.

---

**FAILURE TO FOLLOW THE “CAUTION”, “WARNING”, AND “DANGER” INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH.**

### MACHINE SAFETY

The precautionary statement (“**IMPORTANT**”) is followed by specific instructions. This statement is intended for machine safety.

**IMPORTANT:** *The word “IMPORTANT” is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.*

## TECHNICAL INFORMATION

### HARDWARE

#### GENERAL

The D35, DX35, D40, DX40, D45 and DX45 tractors have been built using metric hardware.

**NOTE:** *Be sure to use the hardware specified when using tapped holes, as trying to install a metric bolt in an inch thread, or an inch bolt in a metric thread, will damage the thread.*

Certain hardware must be tightened to specific torque specifications. If specific torque specifications are not noted, tighten the hardware to the standard torque chart specification listed in this manual.

#### PLATING

Hardware used on Case IH tractors is plated with zinc chromate (gold color). Gold colored hardware has different torquing requirements from unplated or zinc plated (silver color) hardware because of the difference in the coefficient of friction of the plating material. The torque charts in this manual list the correct specifications for gold, silver, and unplated bolts.

#### NUT TIGHTENING

Whenever possible, the nut should be tightened, not the head of the bolt. When tightening using the bolt head, the clamp load can be lost because some of the torque applied twists the bolt instead of tensioning (stretching) it. The tension on the bolt is what holds the joint together.

Approximately 90% of the torque applied during assembly goes to overcoming friction between the parts. The other 10% is used to tension (stretch) the bolt. After assembly, the frictional forces disappear, which is the basis for the saying "If it does not fail during assembly, it will not fail in service." The bolt may later fail due to other factors, but not from being over tightened.

#### LOCKNUTS

Most locknuts are coated with a special lubricant that is dry to the touch. Anytime a locknut is used, a lower than normal torque is required. Refer to the torque charts in this manual for specific values.

#### JAM NUTS

When using a jam nut to lock a regular nut, the jam nut should be installed first and tightened to one half the recommended torque, then held in place while installing a regular nut to the recommended torque.

#### THREAD LUBRICATION

The addition of antiseize compound, Molykote, oil, graphite, or any other lubricant to a bolt decreases the friction between it and a nut. This makes it necessary to reduce the recommended torque to prevent over tensioning of the bolt. When using the torque charts in this manual, decrease the value by 20% whenever a lubricant is used.



## SAFETY PRECAUTIONS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read and take the following precautions before operating this tractor. Equipment should be operated only by those who are responsible and instructed to do so.

### THE TRACTOR

1. Read the Operator's Manual carefully before using the tractor. Lack of operating knowledge can lead to accidents.
2. Use an approved roll bar and seat belt for safe operation. Overturning a tractor without a roll bar can result in death or injury. If your tractor is not equipped with a roll bar and seat belt, see your Case IH Dealer.
3. Always use the seat belt. The only instance when the seat belt should not be used is if the roll bar has been removed from the tractor or folding ROPS is in down position.
4. If a front end loader is to be installed, always use a FOPS (Falling Object Protective Structure) canopy to avoid injury from falling objects.
5. Use the handholds and step plates when getting on and off the tractor to prevent falls. Keep steps and platform cleared of mud and debris.
6. Do not permit anyone but the operator to ride on the tractor. There is no safe place for extra riders.
7. Keep all safety decals clean of dirt and grime, and replace all missing, illegible, or damaged safety decals. See the list of decals in the Decal section of this manual.

### SERVICING THE TRACTOR

1. The cooling system operates under pressure which is controlled by the radiator cap. It is dangerous to remove the cap while the system is hot. Always turn the cap slowly to the first stop and allow pressure to escape before removing the cap entirely.
2. Keep any type of open flame away from the tractor and do not smoke while refueling. Wait for the engine to cool before refueling.
3. Keep the tractor and equipment, particularly brakes and steering, maintained in a reliable and

satisfactory condition to ensure your safety and comply with legal requirements.

4. Keep open flame or cold weather starting aids away from the battery to prevent fires or explosions. Use jumper cables according to instructions to prevent sparks which could cause explosion.
5. Stop the engine before performing any service on the tractor.
6. Escaping hydraulic/diesel fluid under pressure can penetrate the skin causing serious injury. If fluid is injected into the skin, obtain medical attention immediately or gangrene may result.
  - DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks.
  - Stop the engine and relieve pressure before connecting or disconnecting lines.
  - Tighten all connections before starting the engine or pressurizing lines.
7. Do not modify or permit anyone else to modify or alter this tractor or any of its components or functions without first consulting a Case IH Dealer.
8. The fuel oil in the injection system is under high pressure and can penetrate the skin. Unqualified persons should not remove or attempt to adjust a pump, injector, nozzle, or any other part of the fuel injection system. Failure to follow these instructions can result in serious injury.
9. Continuous long-term contact with used engine oil may cause skin cancer. Avoid prolonged contact with used engine oil. Wash skin promptly with soap and water.
10. Some components of your tractor, such as gaskets and friction surfaces (brake linings, clutch linings, etc.) may contain asbestos. Breathing asbestos dust is dangerous to your health. You are advised to have any maintenance or repair on such components carried out by an authorized Case IH Dealer. However, if service operations are to be undertaken on parts that contain asbestos, the essential precautions listed below must be observed:

- Work out of doors or in a well ventilated area.
- Dust found on the tractor or produced during work on the tractor should be removed by extraction, not by blowing.
- Dust waste should be dampened, placed in a sealed container, and marked to ensure safe disposal.
- If any cutting, drilling, etc. is attempted on materials containing asbestos, the item should be dampened and only hand tools or low speed power tools used.

### **OPERATING THE TRACTOR**

1. Before starting the tractor, apply the parking brake, place the PTO lever in the "OFF" position, the lift control lever in the down position, the remote control valve levers in the neutral position, and the transmission in neutral.
2. Always sit in the tractor seat when starting the engine or operating controls. Do not start the engine or operate controls while standing beside the tractor.
3. Do not bypass the neutral start switches. Consult your Case IH Dealer if your neutral start controls malfunction. Use jumper cables only in the recommended manner. Improper use can result in tractor runaway.
4. Avoid accidental contact with the gear shift lever while the engine is running, as this can cause unexpected tractor movement.
5. Before getting off the tractor, disengage the PTO, turn the engine off, and apply the parking brake. Never get off the tractor while it is in motion.
6. Do not park the tractor on a steep incline.
7. Do not operate the tractor engine in an enclosed building without adequate ventilation. Exhaust fumes can cause death or illness.
8. If the power steering or engine ceases operating, stop the tractor immediately.
9. Pull only from the drawbar or the lower link drawbar in the down position. Use only a drawbar pin that locks in place. Pulling from the tractor rear axle or any point above the axle may cause the tractor to upset.
10. If the front end of the tractor tends to rise when heavy implements are attached to the three-point hitch, install front end or front wheel weights. Do not operate the tractor with a light front end.

11. Always set the hydraulic selector lever in position control when attaching or transporting equipment. Ensure hydraulic couplers are properly mounted and will disconnect safely in case of accidental detachment of implement.
12. Do not leave equipment in the raised position.
13. Use the flasher/turn signal lights and SMV signs when traveling on public roads both day and night (unless prohibited by law).
14. When operating at night, adjust lights to prevent blinding oncoming drivers.

### **DRIVING THE TRACTOR**

1. Watch where you are going, especially at row ends, on roads, around trees and low hanging obstacles.
2. To avoid upsets, drive the tractor with care and at a safe speed. Use extra caution when operating over rough ground, when crossing ditches or slopes, and when turning corners.
3. To provide two-wheel braking, lock tractor brake pedals together when transporting on roads.
4. Do not coast or free wheel down hills. Use the same gear when going downhill as is used when going uphill.
5. Any towed vehicle with a total weight exceeding that of the towing tractor should be equipped with brakes for safe operation.
6. If the tractor becomes stuck or the tires become frozen to the ground, back up the tractor to prevent upset.
7. Always check overhead clearance, especially when transporting the tractor.
8. When operating at night, adjust lights to prevent blinding oncoming drivers.

### **OPERATING THE PTO**

1. When operating PTO driven equipment, shut off the engine and wait until the PTO stops before getting off the tractor and disconnecting the equipment.
2. Do not wear loose clothing when operating the power take-off or when near rotating equipment.
3. When operating stationary PTO driven equipment, always place all gear shift levers in neutral position.

Apply the tractor parking brake, and block the rear wheels front and back.

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**