

821B Loaders Service Manual

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Loctite Product Chart		8-98900
Standard Torque Specifications	1001	8-71600
Fluids and Lubricants	1002	7-59321
 Engines		
	Tab 2	
Engine Removal and Installation and Radiator Removal and Installation	2001	7-60130
Stall Tests	2002	7-59330
Specification Details	2403	8-28423
Cylinder Head and Valve Train	2415	8-28432
Cylinder Block - Crankshaft, Pistons, Rods, Sleeves, Camshaft, Bearings, Seals, and Flywheel	2425	8-28442
Lubrication System	2445	8-28452
Cooling System	2455	8-28462
Turbocharger	2465	8-28470
Turbocharger Failure Analysis	2565	9-78235
 Fuel System		
	Tab 3	
Fuel System and Filters	3410	8-28480
Fuel Injection Pump and Drive Gear	3412	8-28492
Fuel Injectors	3413	8-28501
 Electrical System		
	Tab 4	
Removal and Installation of Starter and Alternator	4000	7-59010
Electrical Schematics and Troubleshooting	4001	8-99560
Electrical Schematics and Troubleshooting - Units with Auto Shift Transmission	4001	7-52840
Starter and Starter Solenoid - Nippondenso	4002	8-17920
Batteries	4004	8-71701
Instrument Cluster	4005	7-59800
65 Ampere Alternator	4006	8-73860
 Steering		
	Tab 5	
Removal and Installation of Steering Components	5001	7-59730
Steering Troubleshooting and Pressure Checks	5002	8-99871
Steering Control Valve	5003	8-73901
Flow Control Valve	5004	8-13290
Steering Cylinder	5005	8-13302
Center Pivot	5006	7-60070
Auxiliary Steering Motor and Pump	5008	7-43960

CASE CORPORATION
700 STATE STREET
RACINE, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 SOUTH SERVICE ROAD
BURLINGTON, ON L7N 3M6 CANADA

Bur 7-60114

Reprinted

Copyright © 1996 Case Corporation
Printed in U.S.A.
Issued December 1996

821B Loaders Service Manual

Table of Contents

Description	Section No.	Form No.
Power Train		
	Tab 6	
Removal and Installation of Power Train Components	6001	7-59910
Transmission Specifications, Schematic, and Troubleshooting - Units Without Auto Shift Transmission	6002	7-43944
Transmission Specifications, Schematic, and Troubleshooting - Units With Auto Shift Transmission	6002	7-52510
Transmission Repair - 821B	6003	8-13354
Front and Rear Axle Repair	6004	7-59000
Drive Shaft, Center Bearing and Universal Joints	6005	8-13370
Wheels and Tires	6006	8-13381
Transmission Control Valve - Units Without Auto Shift Transmission	6007	8-18163
Transmission Control Valve - Units With Auto Shift Transmission	6007	7-52520
Brakes		
	Tab 7	
Removal and Installation of Brake Components	7001	7-59710
Hydraulic Brake Troubleshooting	7002	8-99880
Brake Pump	7003	7-59590
Brake Accumulators	7004	8-18331
Brake Actuator Valve	7005	8-18351
Brake Accumulator Valve	7007	7-43620
Parking Brake - Disc	7008	7-44130
NOTE: <i>For parking brake and brake pedal adjustments, see Section 9009.</i>		
Hydraulics		
	Tab 8	
Removal and Installation of Hydraulic Components	8001	7-59630
Hydraulic Specifications, Schematics, Troubleshooting and Pressure Checks	8002	8-99891
Cleaning the Hydraulic System	8003	8-74160
Hydraulic Pump	8004	8-13470
Loader Control Valve	8005	8-13481
Cylinders	8006	8-13491
Remote Control Valves	8010	7-59610
Pressure Reducing/Sequence Valve	8011	7-59620
Unloading Valve	8012	7-59640

821B Loaders Service Manual

Table of Contents

Description	Section No.	Form No.
Chassis	Tab 9	
Air Conditioning Troubleshooting and System Checks	9001	8-18050
Air Conditioning Troubleshooting and System Checks - For Systems with HFC-134a Refrigerant	9001	7-64360
Air Conditioner System Service - Refrigerant Recovery, System Evacuation and Recharging	9002	8-16471
Air Conditioner System Service - Refrigerant Recovery, System Evacuation and Recharging for Systems with HFC-134a Refrigerant	9002	7-64370
Removal and Installation of Air Conditioning Components	9003	8-18400
Removal and Installation of Air Conditioning Components - For Systems with HFC-134a Refrigerant	9003	7-64380
Air Conditioning Compressor and Clutch	9004	8-18410
Air Conditioning Compressor and Clutch - For Systems with HFC-134a Refrigerant	9004	7-64390
Loader	9005	7-60200
ROPS Cab and ROPS Canopy	9006	7-60180
Seat and Seat Belts	9007	8-74271
Suspension Seat	9008	8-74280
Pedals and Levers	9009	7-59341
Cab Window Replacement	9010	7-60040

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com