

**Backhoe Loader  
580SR-590SR-695SM-695SR**

**Service Manual**

NOTE: CASE Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

## COMPANY POLICY

Company policy, which is one of continuous improvement, reserves the right to make changes in design and specification at any time without notice and without obligation to modify units previously built.

All data given in this book is subject to production variations. Dimensions and weights are approximate only and the illustrations do not necessarily show tractors in standard condition. For exact information about any particular machine please consult your Dealer.

## PARTS AND ACCESSORIES

Genuine parts and accessories have been specifically designed for these machines.

We would like to point out that “non-genuine” parts and accessories have NOT been examined and released by the Company. The installation and or use of such products could have negative effects upon the design characteristics of your machine and thereby affect its safety. The Company is not liable for any damage caused by the use of “non-genuine” parts and accessories.

## MODEL CODES

The complete range of Backhoe Loaders described in this manual are identified below :

	EUR							NA			
	LB 90.B	LB 95.B	LB 110.B	LB 115.B 4WS	580 SR	590 SR	695 SM	LB 75.B	LB 90.B LB 95.B	LB 110.B	LB 115.B 4WS
							695 SR				
<b>Moteur 95HP FAGE0454C</b>	X	X			X			X			
<b>Moteur 110HP FAGE0484G</b>			X	X		X	X		X	X	X
<b>PowerShuttle</b>	X	X	X		X	X		X	X	X	
<b>PowerShift</b>			X	X	X	X	X			X	X
<b>Cab</b>	X	X	X	X			X	X	X	X	X
<b>Euro. cab</b>			X	X	X	X	X				
<b>ROPS</b>	X				X			X	X	X	
<b>Central Pivot</b>			X	X			X	X	X	X	X
<b>Side Shift</b>	X	X	X	X	X	X	X				
<b>2 WD</b>					X			X			
<b>4 WD</b>	X	X	X	X	X	X	X	X	X	X	X
<b>4 WS</b>				X			X				X
<b>Mechanical control</b>	X	X	X	X	X	X	X	X	X	X	X
<b>Pilot control</b>	X	X	X	X	X	X	X	X	X	X	X

The vehicles listed above may not be available in all countries or markets, therefore for the latest information consult your local authorised dealer.



# CONTENTS

## SECTION 00 - HEALTH, SAFETY, MAINTENANCE

### CHAPTER 1 - General

Description	Page
General Specifications .....	1

## SECTION 10 - ENGINE

### CHAPTER 1 - Injection pump

Description	Page
Special tools.....	1
Removal.....	2
Installation.....	7

## SECTION 17 - TORQUE CONVERTOR

### CHAPTER 1 - With Powershuttle Transmission

Description	Page
General Specifications .....	1
Overhaul .....	4

### CHAPTER 2 - With Powershift Transmission

Description	Page
General Specifications .....	1
Overhaul .....	4

## SECTION 21 - TRANSMISSIONS

### CHAPTER 1 - 4x4 Compact Shuttle

Description	Page
General Specifications .....	1
Description and Operation .....	5
Overhaul .....	28

### CHAPTER 2 - Powershift Introduction

Description	Page
General Specifications .....	1
Description and Operation .....	2
Removal.....	35

### CHAPTER 3 - Powershift Operating Lever

Description	Page
General Specifications .....	1
Fault Finding .....	14

**CHAPTER 4 - Powershift Overhaul (includes 4 Wheel Steer)**

Description	Page
General Specifications .....	1
Fault Finding .....	5
Overhaul .....	8

**SECTION 25 - FRONT AXLES****CHAPTER 1 - Front Axle for 2 and 4 Wheel Drive Only**

Description	Page
General Specifications .....	1
Overhaul .....	10

**CHAPTER 2 - Front Axle for 4 Wheel Steer Only**

Description	Page
General Specifications .....	1
Overhaul .....	3

**CHAPTER 3 - Front Axle**

Description	Page
Identification .....	1
Overhaul .....	4

**CHAPTER 7 - Front Axle**

Description	Page
Identification .....	1
Overhaul .....	4

**CHAPTER 10 - Front Axle**

Description	Page
Identification .....	1

**SECTION 27 - REAR AXLES****CHAPTER 1 - Rear Axle with Foot Operated Diff Lock for 2 and 4 Wheel Drive Only**

Description	Page
General Specifications .....	1
Overhaul .....	6

**CHAPTER 2 - Rear Axle with Electrically Operated Diff Lock for 2 and 4 Wheel Drive Only**

Description	Page
General Specifications .....	1
Overhaul .....	8

**CHAPTER 3 - Rear Axle for 4 Wheel Steer Only**

Description	Page
General Specifications .....	1
Overhaul .....	2

**CHAPTER 4 - Rear Axle**

Description	Page
Identification.....	1
Overhaul .....	4

**SECTION 33 - BRAKE SYSTEMS****CHAPTER 1 - Brakes for 2 and 4 Wheel Drive Only**

Description	Page
General Specifications.....	1
Overhaul .....	8

**CHAPTER 2 - Brakes for 4 Wheel Steer Only**

Description	Page
General Specifications.....	1
Overhaul .....	5

**SECTION 35 - HYDRAULIC SYSTEMS****CHAPTER 1 - Hydraulic Circuits and Components for HUSCO Only**

Description	Page
General Specifications.....	2
Hydraulic Valve Spool Seals.....	15
Stabiliser and Extendible Dipper Control Valves.....	21
Loader Control Valve .....	33
Backhoe Control Valve.....	49

**CHAPTER 2 - Fault Finding, Pressure and Flow Testing for HUSCO Only**

Description	Page
General Specifications.....	2
Fault Finding.....	6
Pressure Testing.....	11
Flow Testing (Pump Performance Test).....	21

**CHAPTER 3 - Hydraulic Circuits and Components for REXROTH**

Description	Page
General Specifications.....	1
Description and Operation.....	5
Hydraulic Circuits.....	10

**CHAPTER 4 - Fault Finding, Pressure and Flow Testing for REXROTH Only**

Description	Page
Preliminary Checks.....	2
Fault Finding Charts.....	3
Pressure Testing.....	7
Flow Testing (Pump Performance Test).....	10

**CHAPTER 5 - Control Valves for REXROTH with Mechanical or Hydraulic Control**

Description	Page
General Specifications.....	1
Overhaul .....	2
Disassembly.....	4

## CHAPTER 6 - Swing System and Hydraulic Cylinders

Description	Page
General Specifications .....	1
Swing System Description and Operation .....	3
Hydraulic Cylinders Description and Operation .....	6
Backhoe and Loader Cylinders - Removal and Installation .....	9
Backhoe and Loader Cylinder Overhaul .....	18
Swing Cylinder Removal and Overhaul .....	22

## CHAPTER 7 - Hydraulic Pump

Description	Page
General Specifications .....	1
Tightening torques .....	1
Description and Operation .....	2
Pump Overhaul .....	6

## CHAPTER 8 - Rexroth Control Blocks

Description	Page
General Specifications .....	1
Tightening torques .....	1
Exploded View of the Lever .....	2
Overhaul of the Control Block .....	5

## SECTION 39 - VEHICLE CHASSIS

### CHAPTER 1 - CHASSIS COMPONENTS

Description	Page
General Specifications .....	1
Overhaul .....	6

## SECTION 41 - STEERING SYSTEMS

### CHAPTER 1 - Steering for 2 and 4 Wheel Drive Only

Description	Page
General Specifications .....	1
Fault Finding .....	7
Overhaul .....	8

### CHAPTER 2 - Steering for 4 Wheel Steer Only

Description	Page
General Specifications .....	1
Fault Finding .....	7
Overhaul .....	10

## SECTION 50 - CAB HEATING AND AIR CONDITIONING

### CHAPTER 1 - Cab Heating

Description	Page
General Specifications .....	1
Fault Finding .....	7
Overhaul .....	8



**CHAPTER 2 - Cab Air Conditioning**

<b>Description</b>	<b>Page</b>
General Specifications .....	1
Description & operation.....	5
Fault Finding .....	16
Overhaul .....	38

**SECTION 55 - ELECTRICAL SYSTEM****CHAPTER 1 - System General**

<b>Description</b>	<b>Page</b>
General Specifications .....	1
Tempory wiring harness repair.....	2
Electrical System General Fault Finding.....	3

**CHAPTER 2.1 - Powershuttle Wiring Diagrams (N/A and European Model)**

<b>Description</b>	<b>Page</b>
Fuses and Relays .....	2
Components.....	3
Connectors.....	4
Wiring Diagrams (N/A and European Model).....	6
Connectors (Details) .....	18

**CHAPTER 2.2 - Powershift Wiring Diagrams (N/A and European Model)**

<b>Description</b>	<b>Page</b>
Fuses and Relays .....	2
Components.....	3
Connectors.....	4
Wiring Diagrams (N/A and European Model).....	6
Connectors (Details) .....	18

**CHAPTER 2.3 - Powershift 4 WS Wiring Diagrams (N/A and European Model)**

<b>Description</b>	<b>Page</b>
Fuses and Relays .....	2
Components.....	3
Connectors.....	4
Wiring Diagrams (N/A and European Model).....	6
Connectors (Details) .....	18

**CHAPTER 2.4 - ROPS Wiring Diagrams (N/A and European Model)**

<b>Description</b>	<b>Page</b>
Fuses and Relays .....	2
Components.....	3
Connectors.....	4
Wiring Diagrams (N/A and European Model).....	6
Connectors (Details) .....	19

**CHAPTER 3 - Starter Motor 2.7kW**

<b>Description</b>	<b>Page</b>
General Specifications .....	1
Fault Finding .....	3
Exploded Wiew of the Starter .....	6

**CHAPTER 4 - Alternator 90A**

<b>Description</b>	<b>Page</b>
General Specifications .....	1
Fault Finding .....	4
Exploded View of the Alternator.....	10

**CHAPTER 5 - Battery**

<b>Description</b>	<b>Page</b>
General Specifications .....	1
Removal and Installation.....	2
Battery Maintenance and Tests.....	3

**CHAPTER 6 - Service Diagnostics, Calibration and Immobiliser**

<b>Description</b>	<b>Page</b>
Service Indicators .....	1
Alarms and Diagnostics Signalling.....	2
Calibration of speedometer.....	4
Immobiliser circuit .....	5

**CHAPTER 7 - Component Testing**

<b>Description</b>	<b>Page</b>
General Introduction .....	2
Component Testing.....	3
Component Earth Points.....	4
Key start and stop switch.....	7
Starter motor - starter relay.....	8
Safety start relais .....	9
Alternator .....	10
Transmissions.....	11
Cab .....	16
Steering control unit.....	26
Loader.....	31
Backhoe.....	34

**SECTION 82 - LOADER****CHAPTER 1 - Loader Frame, Controls and Buckets for 2 and 4 Wheel Drive Only**

<b>Description</b>	<b>Page</b>
General Specifications .....	2
Overhaul .....	6

**CHAPTER 2 - Loader Frame, Controls and Buckets for 4 Wheel Steer Only**

<b>Description</b>	<b>Page</b>
General Specifications .....	2
Overhaul .....	5

## SECTION 84 - BACKHOE

### CHAPTER 1 - Backhoe, Boom and Dipperstick assembly

<b>Description</b>	<b>Page</b>
General Specifications .....	1
Backhoe Control Linkage Overhaul .....	15
Component Removal .....	18
Dipperstick .....	21
Extendible Dipperstick Overhaul .....	27

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**