

721D Loader Service Manual 6-47281

Table of Contents

Description	Section No.	Form No.
General		
Tab 1		
Section Index - General		6-47550
Standard Torque Specifications	1001	8-71602
Fluids and Lubricants	1002	6-47450
Metric Conversion Chart	1003	7-52950
Loctite Product Chart		6-48640
Engines		
Tab 2		
Section Index - Engines		6-47560
Engine and Radiator Removal and Installation	2000	6-47570
Stall Tests	2002	6-47460
For Engine Repair, See the Engine Service Manual		6-49360
Fuel System		
Tab 3		
Section Index - Fuel System		6-47580
For Fuel System Repair, See the Engine Service Manual		
Electrical		
Tab 4		
Section Index - Electrical		6-47590
Removal and Installation of Starter and Alternator	4001	6-47600
Electrical Specifications and Troubleshooting	4002	6-47470
Batteries	4003	6-42330
Information and Diagnostic Center	4005	6-47610
Steering		
Tab 5		
Section Index - Steering		6-47620
Removal and Installation of Steering Components	5001	6-47630
Steering Specifications, Pressure Checks, and Troubleshooting	5002	6-47481
Steering Control Valve	5003	6-47640
Steering Priority Valve	5004	6-42400
Steering Cylinders	5005	6-47650
Center Pivot	5006	6-47661
Auxiliary Steering Motor and Pump	5008	6-42430

721D Loader Service Manual 6-47281

Table of Contents

Description	Section No.	Form No.
<hr/>		
Power Train	Tab 6	
Section Index - Power Train		6-47670
Removal and Installation of Power Train Components	6001	6-47680
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-47491
Transmission	6003	6-47691
Front Axle	6004	6-47701
Rear Axle	6004	6-47711
Drive Shafts, Center Bearing, and Universal Joints	6005	6-47720
Wheels and Tires	6006	6-47730
Transmission Control Valve	6007	6-42501
<hr/>		
<hr/>		
Brakes	Tab 7	
Section Index - Brakes		6-47740
Removal and Installation of Brake Components	7001	6-47750
Hydraulic Brake Troubleshooting	7002	6-47501
Brake Accumulators	7004	6-47761
Parking Brake	7008	6-44970
<hr/>		
<hr/>		
Hydraulics	Tab 8	
Section Index - Hydraulics		6-47770
Removal and Installation of Hydraulic Components	8001	6-47780
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	6-47511
Cleaning the Hydraulic System	8003	7-49641
Loader Control Valve	8005	6-47800
Cylinders	8006	6-47811
Coupler Solenoid Locking Valve	8007	6-42600
Pilot Pressure Accumulator and Ride Control Accumulator	8013	6-47831
Ride Control Valve	8014	6-44750
<hr/>		
<hr/>		

**721D Loader
Service Manual
6-47281**

Table of Contents

Description	Section No.	Form No.
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		6-47840
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	6-42650
Air Conditioner System Service	9003	6-47850
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	6-47860
Loader	9006	6-47870
ROPS Cab and ROPS Canopy	9007	6-47880
Cab Glass Installation	9010	6-42710
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	In Rear Pocket	6-47530

NOTE: CNH reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003
Loctite Product Chart	

Section 1001

GENERAL TORQUE SPECIFICATIONS

TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE	3
TORQUE SPECIFICATIONS - METRIC HARDWARE	4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	6

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com