



WORKSHOP MANUAL

PRINT No. 9-93210

TX130-30/TX130-30 turbo

TX130-33/TX130-33 turbo

AVOID ACCIDENTS

Most accidents and injuries occurring in industry, on the farm, at home or on the road, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason, **MOST ACCIDENTS CAN BE PREVENTED** by recognizing the real cause and taking the necessary precautions, before the accident occurs.

Regardless of the care used in design and construction of any type of equipment, there may be conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against accidents. The complete observance of one simple rule would prevent many thousands serious injuries each year.

This rule is: Never attempt to clean, lubricate or adjust a machine while it is in motion.



ATTENTION

On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.

If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.

MODEL CODES

The complete range of telescopic handlers (Telehandler) described in this manual is identified in the text by reference to the maximum extension of the telescopic arm.

The vehicles listed below may not be available in all countries or markets, therefore for the latest information consult your authorised dealer.

Model	TX130-30/TX130-30 Turbo TX130-33/TX130-33 Turbo	
	no stab.	Small stab.
Engine	Aspirated 60 kW - 71 kW Turbo charged	
Max. lifting height (m)	12,750	13.060
Max. capacity (kg) a 500 mm from fork stop	3,300	3,300
Capacity at max. height (kg)	2,500	3,300
Extension at max. height (m)	1.800	1.800
Max. longitudinal extension (m)	8.750	
Capacity at max. extension (kg)	650	1,350
Weight (kg)	9,600	
Length (m)	5,950	

Workshop Manual

TX130-30/TX130-30 Turbo

TX130-33/TX130-33 Turbo

TELEHANDLERS

GENERAL LIST OF CONTENTS

SECTION 00 - GENERAL

Description	Page
General instructions	1
Safety rules	3
Product identification	6
Environmental considerations	9
Maintenance techniques	10

SECTION 10 - ENGINE

Description	Page
Main specifications of engines	2
Troubleshooting	5
Generalities engine F4GE0404B*D600	21
Generalities engine F4GE0454C*D600	23
Description of main mechanical components of the engine	25
Lubrication	37
Cooling	42
Mechanical injection supply system	44
Mechanical fuel pump	45
Injection assembly	46
Removal of engine transmission group from the vehicle	56
Engine overhaul on bench	59
Repair interventions on the cylinder group	71
Timing	73
Bushes	74
Crankshaft	77
Conrod-piston assembly	81
Valves	103
Valve guides	104
Valve seats	104
Valve springs	106
Assembly of cylinder head	106
Replacing the injectors	113
Adjustment of valve clearance	115
Removal/reinstallation of rocker arms	115
Setting of timing	116

Timing of the injection pump	117
Electrical components	118
Tooling	119

SECTION 21 - POWERSHIFT GEARBOX

Description	Page
Powershift Gearbox 4x4	2
Driving with the powershift gearbox	2
Gearbox assembly	5
Idler gear case assembly	7
Gearbox operation	8
Transmission and Hydraulic oil circuit diagrams	15
Modulation valve operation	31
Torque converter and heat exchanger hydraulic oil circuit	34
Troubleshooting guide	35
Troubleshooting procedures	35
Troubleshooting	37
Pressure testing clutch and high pressure circuit	38
Pressure testing torque converter and cooler circuit	39
Check points	40
Assembly instructions	42
Overhaul	45
Special tools	104

SECTION 25 - FRONT AXLE

Description	Page
Specifications	1
Description	2
Operation	3
Troubleshooting	4
Wheel toe-in check	5
Component overhaul	5
Front axle removal procedure	6
Front axle overhaul	7
Axle drive pinion bearing adjustment	52
How to install and adjust the axle drive pinion	54
Front drive shaft	57

SECTION 27 - REAR AXLE

Description	Page
Specifications	1
Description	2

Operation diagram	3
Component overhaul	5
Rear axle removal procedure	5
Overhaul	6
Special tools	7

SECTION 33 - BRAKES

Description	Page
Specifications	1
Power brakes	2
Parking brake	3
Brake disc adjustment	6
Troubleshooting	7
Brakes disassembly	8

SECTION 35 - HYDRAULIC SYSTEM

Description	Page
Technical data	2
Description and operation	3
Introduction	3
Steering system hydraulic circuit	3
Steering valve	4
Telescopic boom hydraulic circuit	6
Component operation	10
Hydraulic pump	10
Delivery side divider valve	10
Pressure reduction valve	12
Front loader controls	14
Balancing valves	16
Power steering (OSPQ)	18
Telescopic boom distributor	19
Auxiliary control distributor	22
Cylinders	24
Booms	34

SECTION 55 - ELECTRICAL SYSTEM

Description	Page
Chapter 1 – Electrical system general	
Electrical equipment specifications	1
Electrical system and fuses	2
Controls and instruments	6
Procedure for the calibration of the load momentum system	17

Bulb replacement	22
Protecting the electrical systems during charging or welding	25
Starting the machine using jump leads	26
Temporary wiring repairs	27
Electrical system-general fault finding	29
Chapter 2 – Circuit diagrams	
List of connectors	32
List of components	33
How to use the circuit diagrams	34
Diagram 1: Starting/Recharge/Warning/Indicators lights	36
Diagram 2: Transmission	38
Diagram 3: Wheel alignment/Hydraulic solenoids/Brake system	40
Diagram 4: Boom control	42
Diagram 5: Stabiliser	44
Diagram 6: Lights/Front wiper	46
Diagram 7: Work lamps/Roof beacon light	48
Diagram 8: Load momentum device / Upper wiper	50
Diagram 9: Heating / Radio / Power socket / Ceiling light	52
Diagram 10: Conditioner	54
Chapter 3 - Wiring list	
Instrument panel wiring	58
Cab wiring	62
Front wiring	63
Rear wiring	64
Engine wiring	65

SECTION 60 - AIR CONDITIONING UNIT

Description	Page
AIR CONDITIONING UNIT	2
Operating instructions	2
Cab climate	4
Cab climate controls	4
Air conditioning system	5
Service precautions	6
Tool connections	9
Discharging	10
Refrigerant charging	10
Leak inspection	11
Special tools	14
Troubleshooting	15

Thanks for your reading.

Please click here to download complete manual instantly.

And can also choose other manuals.

Feel free --->write to me with any questions.

Our service email:

manuals007@hotmail.com