

**GEHL**®

Form No.  
918076  
Revision C  
May 2008

**803**

## **Compact Excavator**

**Beginning Serial Number: AC02528**



**Parts Manual**

# INTRODUCTION

When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number. For your safety and continued proper operation, use only genuine GEHL service parts.

The model and serial number for this unit are on a tag located on a panel on the front of the cabin.

"Right" and "left" are determined from a position sitting on the seat and facing forward.

GEHL Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

Refer to the abbreviations table located on this page for the various fastener descriptions.

Standard attaching hardware torque values are also provided on the inside back cover. Metric torque values shown in the illustrations are in Newton-meters and can be converted to foot-pounds by multiplying by 0.738.

Specific Reference Numbers, indicating a complete assembly, are circled in some illustrations. A small bag, pictured in some illustrations, indicates a seal kit (seals, o-rings, etc.). In the exploded view parts list, additional information may follow the Reference Number.

Serial number breaks are indicated as follows:

- (SN 999 and before) - indicates serial numbers up to and including 999.
- (SN 1000 - 2000) - indicates serial numbers between 1000 and 2000.
- (SN 999 and up) - indicates serial numbers including 999 and after.

Serial number exceptions and inclusions are indicated as follows:

- (SN 999 and before except 997) - indicates serial numbers up to and including 999, EXCEPT 997.

- (SN 1000 - 2000 except 1996 including 997) - indicates serial numbers between 1000 and 2000, INCLUDING 997 EXCEPT 1996.
- (SN 2001 and up including 1996) - indicates serial numbers including 2001 and after, INCLUDING 1996.

Unless otherwise specified, all cap screws, nuts, and bolts are Grade 8.8, cadmium or zinc plated.

**NOTE:** *The following abbreviations may be used herein:*

ASSD	Assembled
ASSY	Assembly
AR	As Required
CB	Carriage Bolt
CP	Cotter Pin
CS	Cap Screw (Hexagon Head)
CYL	Cylinder
DIA	Diameter
FHCS	Flat Head Cap Screw
GR	Grade
HB	Hex Bolt
HLN	Hex Lock Nut
HN	Hex Nut
HP	High Pressure
HYD	Hydraulic
INS	Insert
LN	Lock Nut
LT	Left
LW	Lock Washer
M	Meter or Meters
MM/mm	Millimeter
NPT	National Pipe Thread
RH	Right Hand
RT	Right
SHCS	Socket Head Cap Screw
SLTD	Slotted
SN	Serial Number or Slotted Nut
SQ	Square
W/	With
W/O	Without

# TABLE OF CONTENTS

Introduction.....	Inside Front Cover	58
Table of Contents.....	1	59
Decal Locations .....	4	60
Diesel Engine - Tier III .....	8	62
Diesel Engine - Tier II .....	9	63
Engine Mounts - Tier III.....	10	64
Engine Mounts - Tier II .....	11	67
Cylinder Head, Valve Cover.....	12	68
Cylinder Block.....	13	70
Seal - Crankshaft - Tier III.....	14	72
Seal - Crankshaft - Tier II .....	15	72
Oil Pan - Tier III .....	16	73
Oil Pan - Tier II.....	17	74
Camshaft - Tier III .....	18	75
Camshaft - Tier II .....	19	76
Crankshaft, Piston - Tier III .....	20	77
Crankshaft, Piston - Tier II .....	21	78
Lubrication - Tier III .....	22	79
Lubrication - Tier II .....	23	80
Cooling System - Tier III.....	24	82
Cooling System - Tier II .....	25	83
Fuel Injection System - Tier III .....	26	84
Fuel Injection System - Tier II.....	27	86
Engine Air Filter - Tier III .....	28	87
Engine Air Filter - Tier II .....	29	88
Intake Manifold - Tier III.....	30	89
Intake Manifold - Tier II .....	31	90
Exhaust Components - Tier III .....	32	92
Exhaust Components - Tier II .....	33	93
Diesel Tank .....	34	94
Hydraulic Pump Drive .....	35	95
Fuel Supply - Tier III .....	36	96
Fuel Supply - Tier II .....	37	98
Auto Idle/Throttle - Tier III .....	38	99
Throttle Lever - Tier II.....	39	100
Radiator - Tier III.....	40	102
Radiator - Tier II .....	41	103
Turntable Drive Unit Installation.....	44	104
Turntable Drive Unit.....	46	106
Oil Cooler .....	47	107
Pilot Control Drive Unit .....	48	108
Drive Motor Installation .....	50	110
Drive Motor (Mag 50) .....	52	112
Drive Motor (Mag 44) .....	53	113
Hydraulic Oil Tank .....	55	114

# TABLE OF CONTENTS

Wire Harness - Chassis, Engine.....	115	Engine Hood - Tier II.....	146
Wire Harness - Chassis .....	117	Tank Cover .....	148
Wire Harness - Oil Control .....	118	Partition Wall .....	149
Wire Harness - Armrest .....	119	Isolation Mats .....	152
Wire Harness - Switch .....	120	Undercarriage Cover.....	155
Wire Harness - Work Light - Front.....	122	Chassis Cover .....	156
Wire Harness - Cab.....	123	Mirrors .....	158
Wire Harness - Auto-Idle (Option) .....	124	Boom.....	159
Wire Harness - Proportional Control (Option).....	126	Dipper Arm - Short .....	160
Dozer Blade .....	127	Dipper Arm - Long (Option) .....	162
Undercarriage, Rubber Track.....	128	Cab Mounting .....	164
Rubber Track .....	129	Cab Frame 1 .....	165
Undercarriage, Steel Track (Option).....	130	Cab Frame 2 .....	168
Steel Track (Option) .....	131	Cab Door.....	171
Track Tensioner, Rubber Track .....	132	Windshield .....	172
Track Tensioner, Steel Track (Option) ....	134	Cabin Windows.....	175
Track Roller (Rubber Track) .....	136	Cab Trim .....	176
Bottom Roller .....	137	Operator's Seat .....	178
Top Roller .....	138	Heater .....	180
Top Roller .....	139	Air Conditioning (Option) .....	182
Chassis .....	140	Air Conditioning Compressor (Option) ...	183
Lubrication.....	141	Air Conditioning Installation (Option) ....	185
Counterweight.....	142	Rotating Beacon (Option) .....	188
Counterweight (Option).....	144	Tools .....	189
Engine Hood - Tier III .....	145	Alphabetical Index .....	191
		Numerical Index .....	193

## **NOTES**

**Thanks for your reading.**  
**Please click here to download complete manual**  
**instantly.**  
**And can also choose other manuals.**

**Feel free --->write to me with any questions.**  
**Our service email:**  
**manuals007@hotmail.com**