

## Wheeled Loading Shovel - 418S

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Hydraulic Steering](#)

[Section K - Engine](#)



Publication No.  
**9813/3550-01**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

## General Information

Service Manual - Wheeled Loading Shovel - 418S

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Hydraulic Steering](#)

[Section K - Engine](#)



Publication No.  
**9813/3550-01**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class  
Customer Support





# Section 1 - General Information

---

<b>Contents</b>	<b>Page No.</b>
<b>Introduction</b>	
About this Manual .....	1 - 1
Machine Model and Serial Number .....	1 - 1
Using the Service Manual .....	1 - 1
Section Numbering .....	1 - 1
Left Side, Right Side .....	1 - 1
Cross References .....	1 - 2
Identifying Your Machine .....	1 - 3
Machine Identification Plate .....	1 - 3
Component Identification Plates .....	1 - 4
<b>Standard Torque Settings</b>	
Zinc Plated Fasteners and Dacromet Fasteners .....	1 - 5
Introduction .....	1 - 5
Bolts and Screws .....	1 - 5
Hydraulic Connections .....	1 - 9
'O' Ring Face Seal System .....	1 - 9
'Torque Stop' Hose System .....	1 - 12
JCB Standard Torque Settings .....	1 - 13
B.S.P. Port Connection (Colour Coded) .....	1 - 13
Hose Ends and Flanged Fittings (Colour Coded) .....	1 - 14
<b>Service Tools</b>	
Numerical List .....	1 - 15
Tool Detail Reference Section B - Body and Framework .....	1 - 16
Numerical List Section C - Electrics .....	1 - 21
Tool Detail Reference Section C - Electrics .....	1 - 22
Numerical List Section E - Hydraulics .....	1 - 23
Tool Detail Reference Section E- Hydraulics .....	1 - 26
Numerical List Section F - Transmission .....	1 - 30
Tool Detail Reference Section F - Transmission .....	1 - 31
Numerical List Section K - Engine .....	1 - 32
Tool Detail Reference Section K - Engine .....	1 - 33
<b>Service Consumables</b>	
Sealing and Retaining Compounds .....	1 - 35
<b>Terms and Definitions</b>	
Colour Coding .....	1 - 37
Hydraulic Schematic Colour Codes .....	1 - 37



# Section 1 - General Information

---

Contents

Page No.

## Introduction

### About this Manual

#### Machine Model and Serial Number

This manual provides information for the following model(s) in the JCB machine range:

- 418 from SN 23356 to 2336423

#### Using the Service Manual

This publication is designed for the benefit of JCB Distributor Service Engineers who are receiving, or have received, training by JCB Technical Training Department.

These personnel should have a sound knowledge of workshop practice, safety procedures, and general techniques associated with the maintenance and repair of hydraulic earthmoving equipment.

The illustrations in this publication are for guidance only. Where the machines differ, the text and/or the illustration will specify.

General warnings in Section 2 are repeated throughout the manual, as well as specific warnings. Read all safety statements regularly, so you do not forget them.

Renewal of oil seals, gaskets, etc., and any component showing obvious signs of wear or damage is expected as a matter of course. It is expected that components will be cleaned and lubricated where appropriate, and that any opened hose or pipe connections will be blanked to prevent excessive loss of hydraulic fluid and ingress of dirt.

Where a torque setting is given as a single figure it may be varied by plus or minus 3%. Torque figures indicated are for dry threads, hence for lubricated threads may be reduced by one third.

The manufacturer's policy is one of continuous improvement. The right to change the specification of the machine without notice is reserved. No responsibility will be accepted for discrepancies which may occur between specifications of the machine and the descriptions contained in this publication.

Finally, please remember above all else safety must come first!

#### Section Numbering

The manual is compiled in sections, the first three are numbered and contain information as follows:

- 1 General Information - includes torque settings and service tools.
- 2 Care and Safety - includes warnings and cautions pertinent to aspects of workshop procedures etc.
- 3 Maintenance - includes service schedules and recommended lubricants for all the machine.


The remaining sections are alphabetically coded and deal with Dismantling, Overhaul etc. of specific components, for example:

- A Attachments
- B Body and Framework, etc.

Section contents, technical data, circuit descriptions, operation descriptions etc. are inserted at the beginning of each alphabetically coded section.

#### Left Side, Right Side

In this manual, 'left' **A** and 'right' **B** mean your left and right when you are seated correctly in the machine.

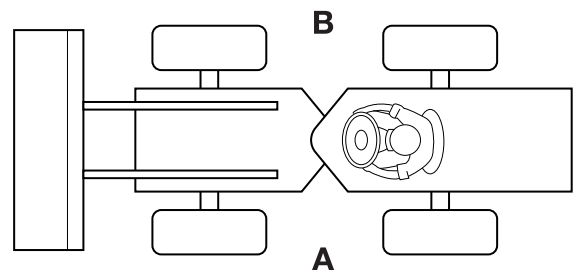

### Cross References

T1-004\_2

In this publication, page cross references are made by presenting the subject title printed in bold, italic and underlined. It is preceded by the 'go to' symbol. The number of the page upon which the subject begins, is indicated within the brackets. For example: → ***Cross References*** (1-2).

### Identifying Your Machine

#### Machine Identification Plate

Your machine has an identification plate mounted as shown. The serial numbers of the machine and its major units are stamped on the plate.

**Note:** The machine model and build specification is indicated by the PIN. Refer to **Typical Product Identification Number (PIN)**.

The serial number of each major unit is also stamped on the unit itself. If a major unit is replaced by a new one, the serial number on the identification plate will be wrong. Either stamp the new number of the unit on the identification plate, or simply stamp out the old number. This will prevent the wrong unit number being quoted when replacement parts are ordered.

The machine and engine serial numbers can help identify exactly the type of equipment you have.

CE JCB J.C.B. EARTHMOVERS LIMITED  
LAKESIDE WORKS, ROCESTER  
UTTOXETER, UNITED KINGDOM  
ST14 5JP

VIN Vehicle Identification Number	PIN Product Identification Number
ENGINE SERIAL NUMBER	FRONT AXLE SERIAL NUMBER
TRANSMISSION SERIAL NUMBER	REAR AXLE SERIAL NUMBER
WEIGHT kg	YEAR OF CONST.
	ENGINE POWER kW @ RPM
MACHINE TYPE	HOMOLOGATION No.


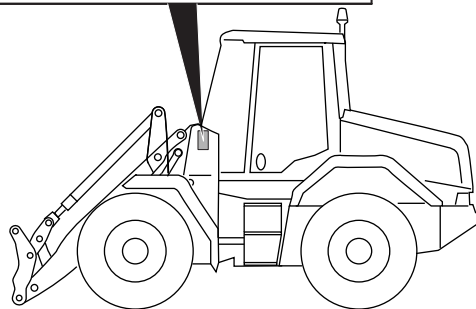


Fig 1.

T005660-1

#### Typical Product Identification Number



T033160-2

Fig 2.

- 1 World Manufacturer Identification (3 Digits)
- 2 Model Number (3 Digits)
- 3 Loader End Type (1 Digit)

O = HT Loader End  
Z = ZX Loader End

- 4 Designation (1 Digit)

S = Farmmaster  
O = None Farmmaster  
I = India

- 5 Check Letter (1 Digit)

The Check Letter is used to verify the authenticity of the machine's PIN.

- 6 Machine Serial Number (8 Digits)

Each machine has a unique serial number.



### Component Identification Plates

#### FOPS Data Plate

#### WARNING

Do not use the machine if the falling objects protection level provided by the structure is not sufficient for the application. Falling objects can cause serious injury.

8-2-8-17

If the machine is used in any application where there is a risk of falling objects then a falling-objects protective structure (FOPS) must be installed. For further information contact your JCB Dealer

The falling objects protection structure (FOPS) is fitted with a dataplate. The dataplate indicates what level protection the structure provides.

There are two levels of FOPS:

- **Level I Impact Protection** - impact strength for protection from small falling objects (e.g. bricks, small concrete blocks, hand tools) encountered in operations such as highway maintenance, landscaping and other construction site services.
- **Level II Impact Protection** - impact strength for protection from heavy falling objects (e.g. trees, rocks) for machines involved in site clearing, overhead demolition or forestry.

#### ROPS Data Plates

#### WARNING

You could be killed or seriously injured if you operate a machine with a damaged or missing ROPS/FOPS. If the Roll Over Protection Structure (ROPS)/Falling Objects Protection Structure (FOPS) has been in an accident, do not use the machine until the structure has been renewed. Modifications and repairs that are not approved by the manufacturer may be dangerous and will invalidate the ROPS/FOPS certification.

INT-2-1-9\_6

#### WARNING

##### Seat Belts

The ROPS/FOPS is designed to give you protection in an accident. If you do not wear your seat belt, you could be thrown out of the machine and crushed. You must wear a seat belt when using the machine. Fasten the seat belt before starting the engine.

0153

Machines built to ROPS/FOPS standards have a data plate attached to the inside of the cab.

J.C.B. CAB SYSTEMS LAKESIDE WORKS ROCHESTER UTTOXETER, STAFFS ST14 5JP ENGLAND 	LOADING SHOVEL	411	OECD APPROVAL NUMBER
	WHEELED	416	
	MAX UNLADEN MASS		ROPS COMPLIANCE EN ISO 3471:2008
	14000 KG		FOPS COMPLIANCE EN ISO 3449:2008 LEVEL 2
YEAR OF MANUFACTURE	XXXX		WA PART NUMBER
WA SERIAL NUMBER	XXXXXXXXXXXXXXXXXX		XXX/XXXXX

A33205588

Fig 3.

# Standard Torque Settings

## Zinc Plated Fasteners and Dacromet Fasteners

T11-002

### Introduction

Some external fasteners on JCB machines are manufactured using an improved type of corrosion resistant finish. This type of finish is called Dacromet and replaces the original Zinc and Yellow Plating used on earlier machines.

The two types of fasteners can be readily identified by colour and part number suffix. ⇒ [Table 1. Fastener Types](#) (1-5).

**Table 1. Fastener Types**

Fastener Type	Colour	Part No. Suffix
Zinc and Yellow	Golden finish	'Z' (e.g. 1315/3712Z)
Dacromet	Mottled silver finish	'D' (e.g. 1315/3712D)

**Note:** As the Dacromet fasteners have a lower torque setting than the Zinc and Yellow fasteners, the torque figures used must be relevant to the type of fastener.

**Note:** A Dacromet bolt should not be used in conjunction with a Zinc or Yellow plated nut, as this could change the torque characteristics of the torque setting further. For the same reason, a Dacromet nut should not be used with a Zinc or Yellow plated bolt.

**Note:** All bolts used on JCB machines are high tensile and must not be replaced by bolts of a lesser tensile specification.

**Note:** Dacromet bolts, due to their high corrosion resistance are used in areas where rust could occur. Dacromet bolts are only used for external applications. They are not used in applications such as gearbox or engine joint seams or internal applications.

### Bolts and Screws

Use the following torque setting tables only where no torque setting is specified in the text.

**Note:** Dacromet fasteners are lubricated as part of the plating process, do not lubricate.

Torque settings are given for the following conditions:


#### Condition 1

- Un-lubricated fasteners
- Zinc fasteners
- Yellow plated fasteners

#### Condition 2

- Zinc flake (Dacromet) fasteners
- Lubricated zinc and yellow plated fasteners
- Where there is a natural lubrication. For example, cast iron components

### Verbus Ripp Bolts

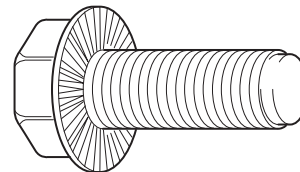

**Fig 1.**

Torque settings for these bolts are determined by the application. Refer to the relevant procedure for the required settings.



## Section 1 - General Information Standard Torque Settings

Zinc Plated Fasteners and Dacromet Fasteners

**Table 2. Torque Settings - UNF Grade 'S' Fasteners**

Bolt Size		Hexagon (A/F)	Condition 1			Condition 2		
in.	mm	in.	Nm	kgf m	lbf ft	Nm	kgf m	lbf ft
1/4	6.3	7/16	11.2	1.1	8.3	10.0	1.0	7.4
5/16	7.9	1/2	22.3	2.3	16.4	20.0	2.0	14.7
3/8	9.5	9/16	40.0	4.1	29.5	36.0	3.7	26.5
7/16	11.1	5/8	64.0	6.5	47.2	57.0	5.8	42.0
1/2	12.7	3/4	98.0	10.0	72.3	88.0	9.0	64.9
9/16	14.3	13/16	140.0	14.3	103.2	126.0	12.8	92.9
5/8	15.9	15/16	196.0	20.0	144.6	177.0	18.0	130.5
3/4	19.0	1 1/8	343.0	35.0	253.0	309.0	31.5	227.9
7/8	22.2	1 15/16	547.0	55.8	403.4	492.0	50.2	362.9
1	25.4	1 1/2	814.0	83.0	600.4	732.0	74.6	539.9
1 1/8	31.7	1 7/8	1181.0	120.4	871.1	1063.0	108.4	784.0
1 1/4	38.1	2 1/4	1646.0	167.8	1214.0	1481.0	151.0	1092.3

**Table 3. Torque Settings - Metric Grade 8.8 Fasteners**

Bolt Size		Hexagon (A/F)	Condition 1			Condition 2		
ISO Metric Thread	mm	mm	Nm	kgf m	lbf ft	Nm	kgf m	lbf ft
M5	5	8	5.8	0.6	4.3	5.2	0.5	3.8
M6	6	10	9.9	1.0	7.3	9.0	0.9	6.6
M8	8	13	24.0	2.4	17.7	22.0	2.2	16.2
M10	10	17	47.0	4.8	34.7	43.0	4.4	31.7
M12	12	19	83.0	8.5	61.2	74.0	7.5	54.6
M16	16	24	205.0	20.9	151.2	184.0	18.8	135.7
M20	20	30	400.0	40.8	295.0	360.0	36.7	265.5
M24	24	36	690.0	70.4	508.9	621.0	63.3	458.0
M30	30	46	1372.0	139.9	1011.9	1235.0	125.9	910.9
M36	36	55	2399.0	244.6	1769.4	2159.0	220.0	1592.4



## Section 1 - General Information Standard Torque Settings

Zinc Plated Fasteners and Dacromet Fasteners

**Table 4. Metric Grade 10.9 Fasteners**

Bolt Size		Hexagon (A/F)	Condition 1			Condition 2		
ISO Metric Thread	mm	mm	Nm	kgf m	lbf ft	Nm	kgf m	lbf ft
M5	5	8	8.1	0.8	6.0	7.3	0.7	5.4
M6	6	10	13.9	1.4	10.2	12.5	1.3	9.2
M8	8	13	34.0	3.5	25.0	30.0	3.0	22.1
M10	10	17	67.0	6.8	49.4	60.0	6.1	44.2
M12	12	19	116.0	11.8	85.5	104.0	10.6	76.7
M16	16	24	288.0	29.4	212.4	259.0	26.4	191.0
M20	20	30	562.0	57.3	414.5	506.0	51.6	373.2
M24	24	36	971.0	99.0	716.9	874.0	89.1	644.6
M30	30	46	1930.0	196.8	1423.5	1737.0	177.1	1281.1
M36	36	55	3374.0	344.0	2488.5	3036.0	309.6	2239.2

**Table 5. Metric Grade 12.9 Fasteners**

Bolt Size		Hexagon (A/F)	Condition 1			Condition 2		
ISO Metric Thread	mm	mm	Nm	kgf m	lbf ft	Nm	kgf m	lbf ft
M5	5	8	9.8	1.0	7.2	8.8	0.9	6.5
M6	6	10	16.6	1.7	12.2	15.0	1.5	11.1
M8	8	13	40.0	4.1	29.5	36.0	3.7	26.5
M10	10	17	80.0	8.1	59.0	72.0	7.3	53.1
M12	12	19	139.0	14.2	102.5	125.0	12.7	92.2
M16	16	24	345.0	35.2	254.4	311.0	31.7	229.4
M20	20	30	674.0	68.7	497.1	607.0	61.9	447.7
M24	24	36	1165.0	118.8	859.2	1048.0	106.9	773.0
M30	30	46	2316.0	236.2	1708.2	2084.0	212.5	1537.1
M36	36	55	4049.0	412.9	2986.4	3644.0	371.6	2687.7



## Section 1 - General Information Standard Torque Settings

Zinc Plated Fasteners and Dacromet Fasteners

**Table 6. Torque Settings - Rivet Nut Bolts/Screws**

Bolt Size		Nm	kgf m	lbf ft
ISO Metric Thread	mm			
M3	3	1.2	0.1	0.9
M4	4	3.0	0.3	2.0
M5	5	6.0	0.6	4.5
M6	6	10.0	1.0	7.5
M8	8	24.0	2.5	18.0
M10	10	48.0	4.9	35.5
M12	12	82.0	8.4	60.5

**Table 7. Torque Settings - Internal Hexagon Headed Cap Screws (Zinc)**

Bolt Size	Nm	kgf m	lbf ft
ISO Metric Thread			
M3	2.0	0.2	1.5
M4	6.0	0.6	4.5
M5	11.0	1.1	8.0
M6	19.0	1.9	14.0
M8	46.0	4.7	34.0
M10	91.0	9.3	67.0
M12	159.0	16.2	117.0
M16	395.0	40.0	292.0
M18	550.0	56.0	406.0
M20	770.0	79.0	568.0
M24	1332.0	136.0	983.0

### Hydraulic Connections

T11-003

#### 'O' Ring Face Seal System

##### Adaptors Screwed into Valve Blocks

Adaptor screwed into valve blocks, seal onto an 'O' ring which is compressed into a 45° seat machined into the face of the tapped port.

**Table 8. Torque Settings - BSP Adaptors**

BSP Adaptor Size	Hexagon (A/F)	Nm	kgf m	lbf ft
	mm			
1/4	19.0	18.0	1.8	13.0
3/8	22.0	31.0	3.2	23.0
1/2	27.0	49.0	5.0	36.0
5/8	30.0	60.0	6.1	44.0
3/4	32.0	81.0	8.2	60.0
1	38.0	129.0	13.1	95.0
1 1/4	50.0	206.0	21.0	152.0

**Table 9. Torque Settings - SAE Connections**

SAE Tube Size	SAE Port Thread Size	Hexagon (A/F)	Nm	kgf m	lbf ft
		mm			
4	7/16 - 20	15.9	20.0 - 28.0	2.0 - 2.8	16.5 - 18.5
6	9/16 - 18	19.1	46.0 - 54.0	4.7 - 5.5	34.0 - 40.0
8	3/4 - 16	22.2	95.0 - 105.0	9.7 - 10.7	69.0 - 77.0
10	7/8 - 14	27.0	130.0 - 140.0	13.2 - 14.3	96.0 - 104.0
12	1 1/16 - 12	31.8	190.0 - 210.0	19.4 - 21.4	141.0 - 155.0
16	1 5/16 - 12	38.1	290.0 - 310.0	29.6 - 31.6	216.0 - 230.0
20	1 5/8	47.6	280.0 - 380.0	28.5 - 38.7	210.0 - 280.0

### Hoses Screwed into Adaptors

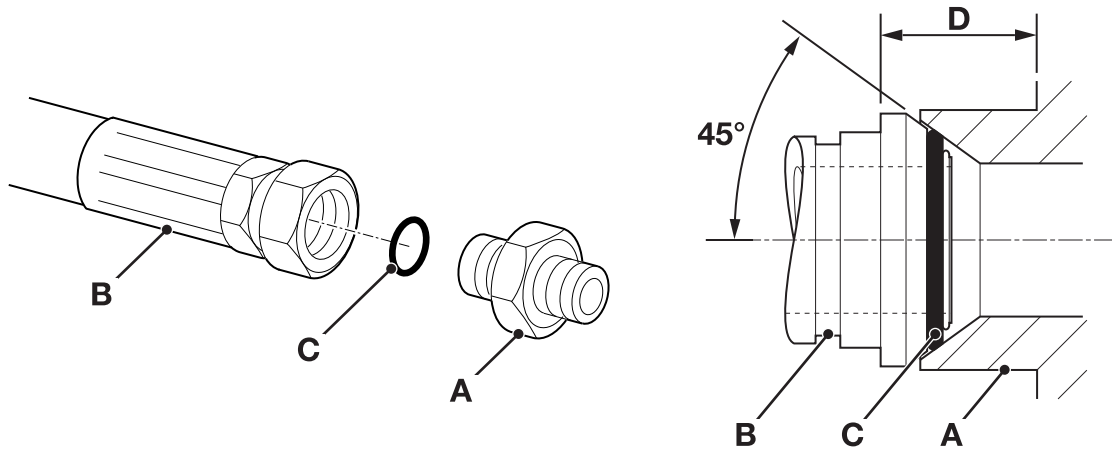


Fig 2.

Hoses **2-B** screwed into adaptors **2-A** seal onto an 'O' ring **2-C** which is compressed into a 45° seat machined into the face of the adaptor port.

**Note:** Dimension **2-D** will vary depending upon the torque applied.

Table 10. BSP Hose - Torque Settings

BSP Hose Size	Hexagon (A/F)	Nm	kgf m	lbf ft
	in.			
1/8		14.0 - 16.00	1.4 - 1.6	10.3 - 11.8
1/4		24.0 - 27.0	2.4 - 2.7	17.7 - 19.9
3/8		33.0 - 40.0	3.4 - 4.1	24.3 - 29.5
1/2		44.0 - 50.0	4.5 - 5.1	32.4 - 36.9
5/8		58.0 - 65.0	5.9 - 6.6	42.8 - 47.9
3/4		84.0 - 92.0	8.6 - 9.4	61.9 - 67.8
1		115.0 - 126.0	11.7 - 12.8	84.8 - 92.9
1 1/4		189.0 - 200.0	19.3 - 20.4	139.4 - 147.5
1 1/2		244.0 - 260.0	24.9 - 26.5	180.0 - 191.8



## Section 1 - General Information Standard Torque Settings

Hydraulic Connections

### Adaptors into Component Connections with Bonded Washers

Table 11. BSP Adaptors with Bonded Washers - Torque Settings

<b>BSP Size</b>			
<b>in.</b>	<b>Nm</b>	<b>kgf m</b>	<b>lbf ft</b>
1/8	20.0	2.1	15.0
1/4	34.0	3.4	25.0
3/8	75.0	7.6	55.0
1/2	102.0	10.3	75.0
5/8	122.0	12.4	90.0
3/4	183.0	18.7	135.0
1	203.0	20.7	150.0
1 1/4	305.0	31.0	225.0
1 1/2	305.0	31.0	225.0



### 'Torque Stop' Hose System

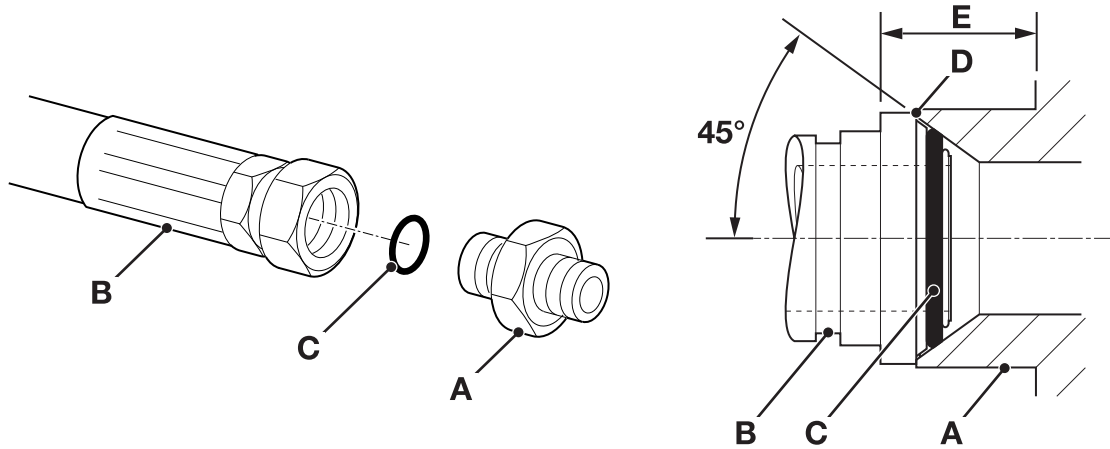


Fig 3.

'Torque Stop' Hoses **3-B** screwed into adaptors **3-A** seal onto an 'O' ring **3-C** which is compressed into a 45° seat machined in the face of the adaptor port. To prevent the 'O' ring being damaged as a result of over tightening, 'Torque

Stop' Hoses have an additional shoulder **3-D**, which acts as a physical stop.

**Note:** Minimum dimension **3-E** fixed by shoulder **3-D**.

Table 12. BSP 'Torque Stop' Hose - Torque Settings

BSP Hose Size	Hexagon (A/F)	Nm	kgf m	lbf ft
	in.			
1/8	14.0	14.0	1.4	10.0
1/4	19.0	27.0	2.7	20.0
3/8	22.0	40.0	4.1	30.0
1/2	27.0	55.0	5.6	40.0
5/8	30.0	65.0	6.6	48.0
3/4	32.0	95.0	9.7	70.0
1	38.0	120.0	12.2	89.0
1 1/4	50.0	189.0	19.3	140.0
1 1/2	55.0	244.0	24.9	180.0

**JCB Standard Torque Settings**

**B.S.P. Port Connection (Colour Coded)**

*Note: All adapters, elbows and hoses should be tightened to JCB standard torque settings unless stated otherwise.*




SOP 600-005-V1

Fig 4.

### Hose Ends and Flanged Fittings (Colour Coded)

**Note:** All adapters, elbows and hoses should be tightened to JCB standard torque settings unless stated otherwise.

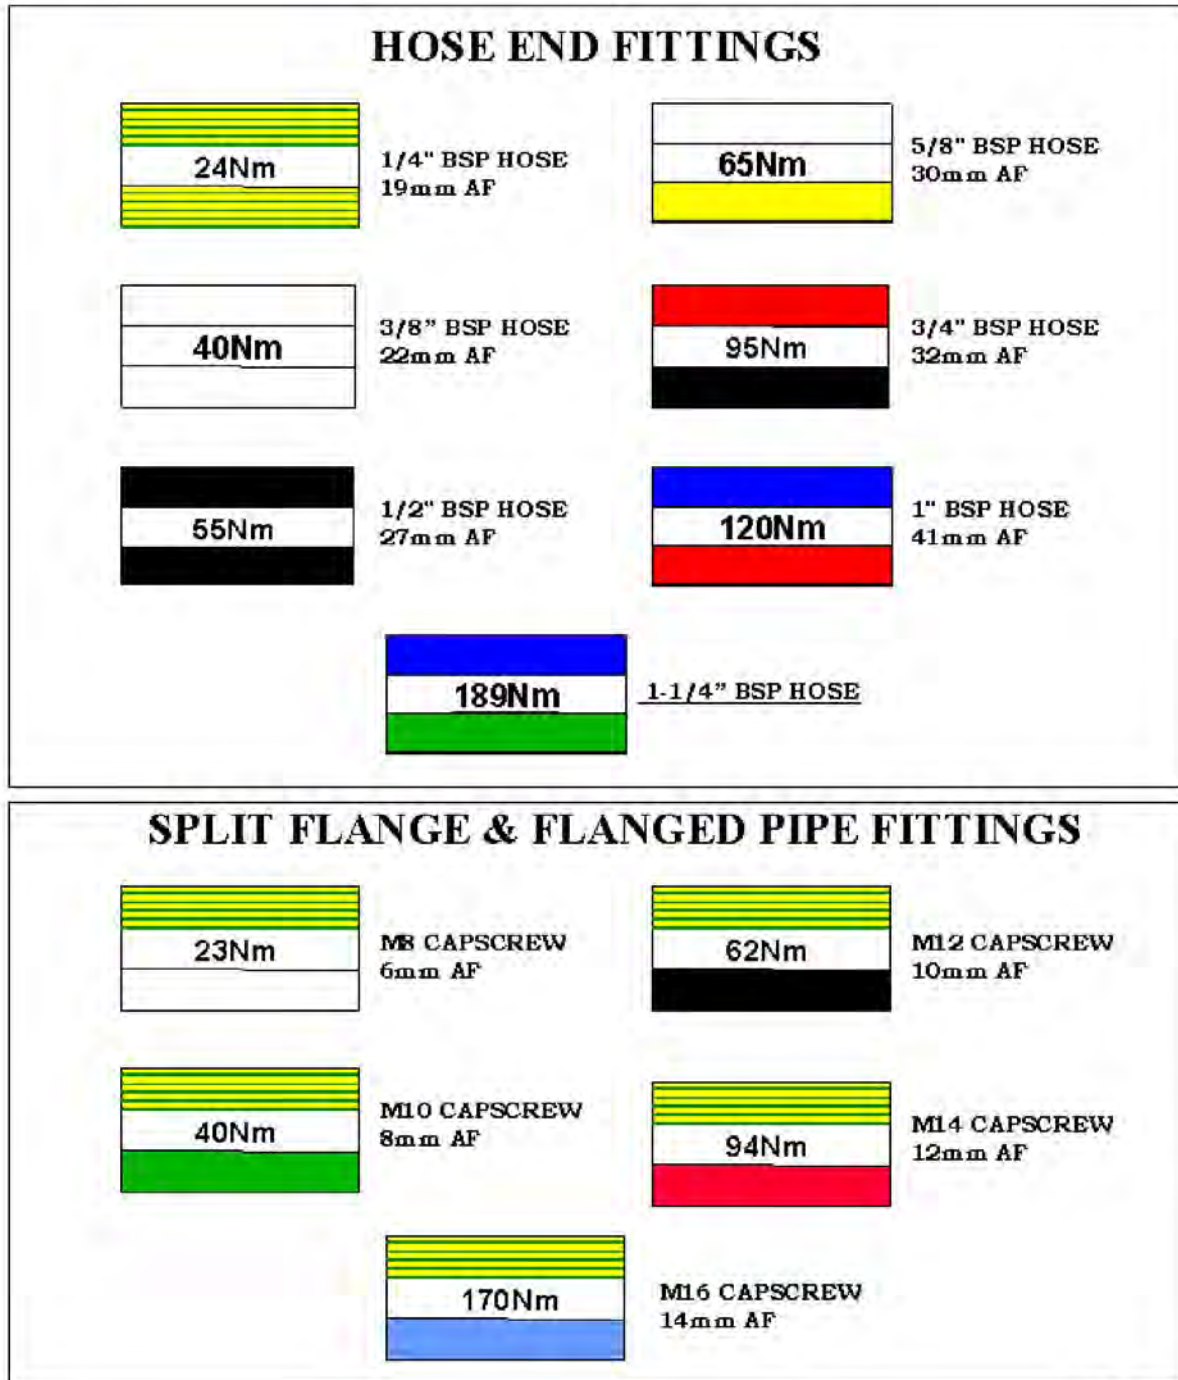

SOP 600-003-V1

Fig 5.

# Service Tools

## Numerical List

The tools listed in the table are special tools required for carrying out the procedures described in this manual. These tools are available from JCB Service.


Some tools are available as kits or sets, the part numbers for parts within such kits or sets are not listed here. For full

details of all tools, including the content of kits and sets, refer to **Tool Detail Reference, Section 1**.

**Note:** *Tools other than those listed will be required. It is expected that such general tools will be available in any well equipped workshop or be available locally from any good tool supplier.*

### Tool Detail Reference Section B - Body and Framework





Part Number	Description	Tool Detail Reference
825/99849	Dummy Boss	⇒ <a href="#">Fig 12. (□ 1-19)</a>
825/99850	Bearing Locator	⇒ <a href="#">Fig 12. (□ 1-19)</a>
826/01179	M6 x 16mm Rivet Nut	⇒ <a href="#">Fig 1. (□ 1-16)</a>
826/01106	M6 x 19mm Rivet Nut	⇒ <a href="#">Fig 1. (□ 1-16)</a>
826/01177	M8 x 18mm Rivet Nut	⇒ <a href="#">Fig 1. (□ 1-16)</a>
826/01176	M10 x 23mm Rivet Nut	⇒ <a href="#">Fig 1. (□ 1-16)</a>
826/01333	M10 x 26mm Rivet Nut	⇒ <a href="#">Fig 1. (□ 1-16)</a>
892/00842	Glass Lifter	⇒ <a href="#">Fig 3. (□ 1-17)</a>
892/00843	Glass Stand	⇒ <a href="#">Fig 2. (□ 1-17)</a>
892/00844	Long Knife	⇒ <a href="#">Fig 11. (□ 1-19)</a>
892/00846	Glass Extractor (Handles)	⇒ <a href="#">Fig 8. (□ 1-18)</a>
892/00847	Nylon Spatula	⇒ <a href="#">Fig 4. (□ 1-17)</a>
892/00848	Wire Starter	⇒ <a href="#">Fig 6. (□ 1-18)</a>
892/00849	Braided Cutting Wire	⇒ <a href="#">Fig 10. (□ 1-19)</a>
926/15500	Rubber Spacer Blocks	⇒ <a href="#">Fig 5. (□ 1-17)</a>
992/12800	Cut-Out Knife	⇒ <a href="#">Fig 7. (□ 1-18)</a>
992/12801	'L' Blades	⇒ <a href="#">Fig 9. (□ 1-19)</a>

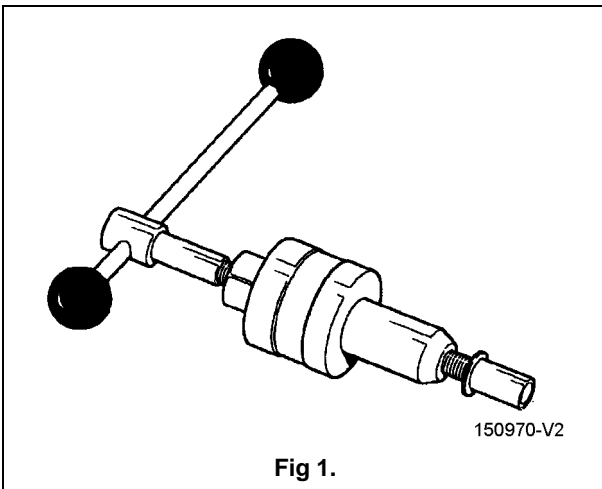


**Note:** 826/01179 M6 x 16mm Rivet Nut, 826/01106 M6 x 19mm Rivet Nut, 826/01177 M8 x 18mm Rivet Nut, 826/01176 M10 x 23mm Rivet Nut, 826/01333 M10 x 26mm Rivet Nut


Installation Tool Available from:

Bollhoff Fastenings Ltd.  
 Midacre  
 The Willenhall Estate  
 Rose Hill  
 Willenhall  
 West Midlands, WV13 2JW

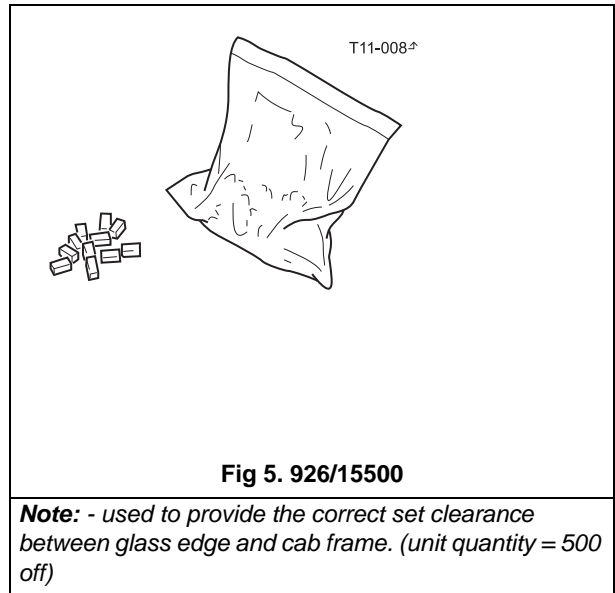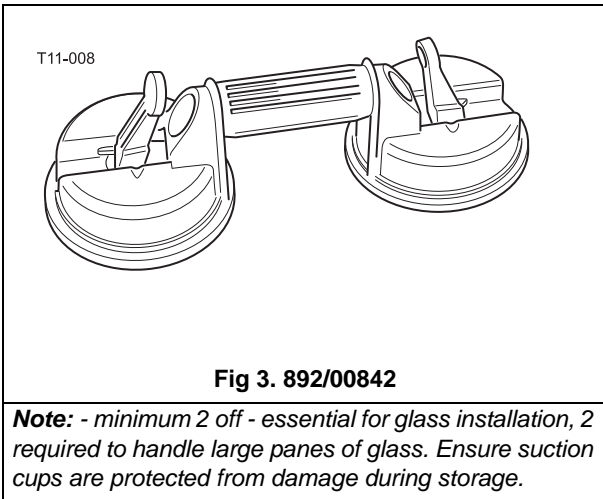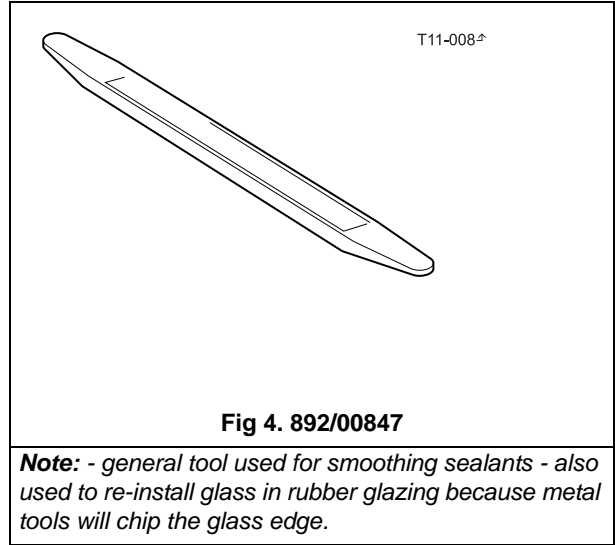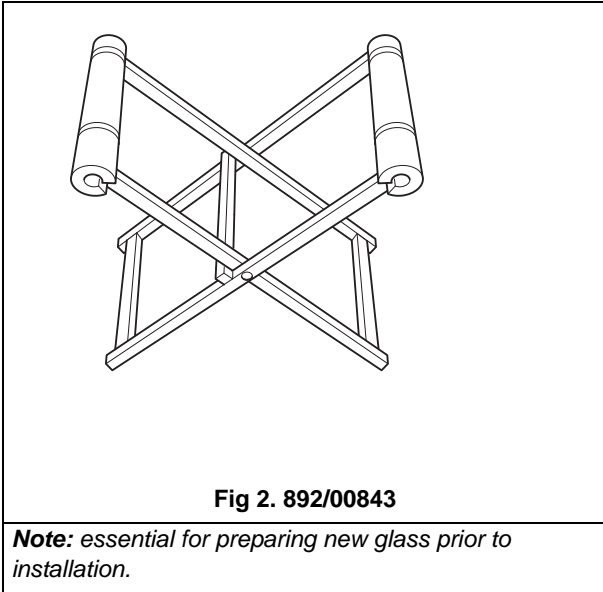


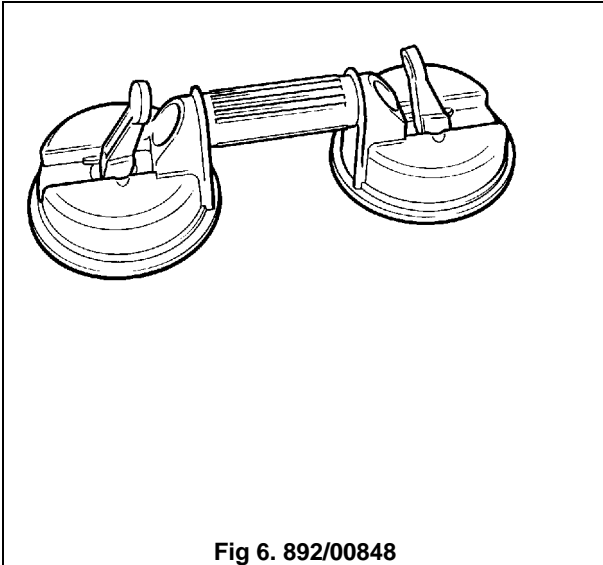






**Note:** - used to access braided cutting wire (below) through original polyurethane seal.

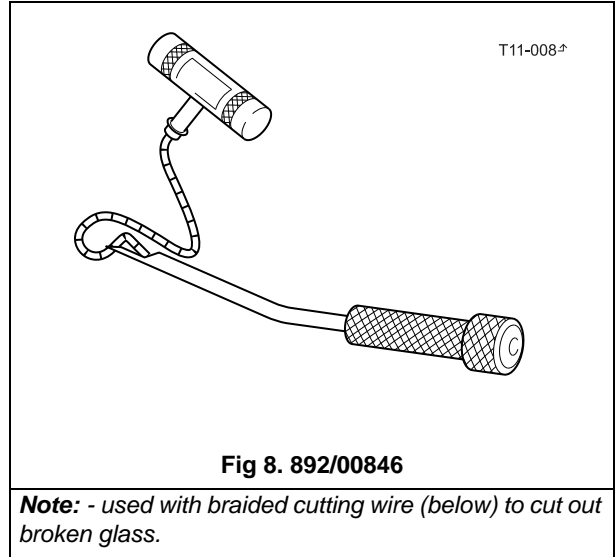


**Note:** - used with braided cutting wire (below) to cut out broken glass.

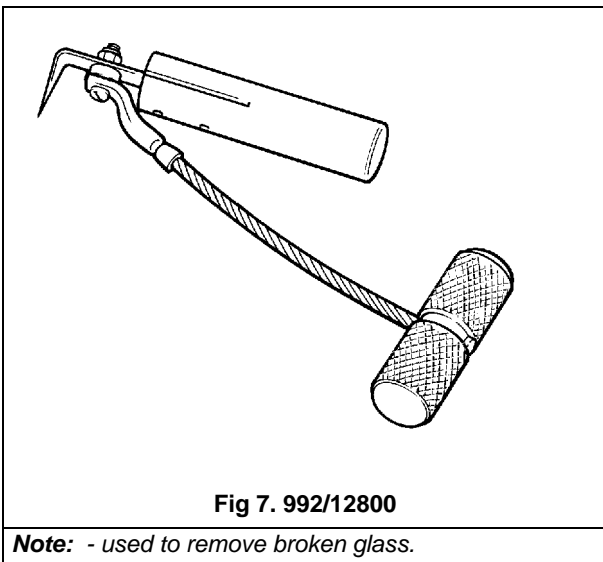

**Note:** - used to remove broken glass.

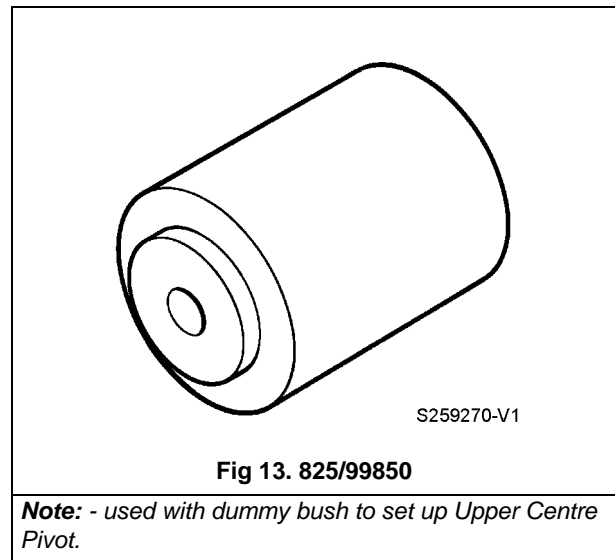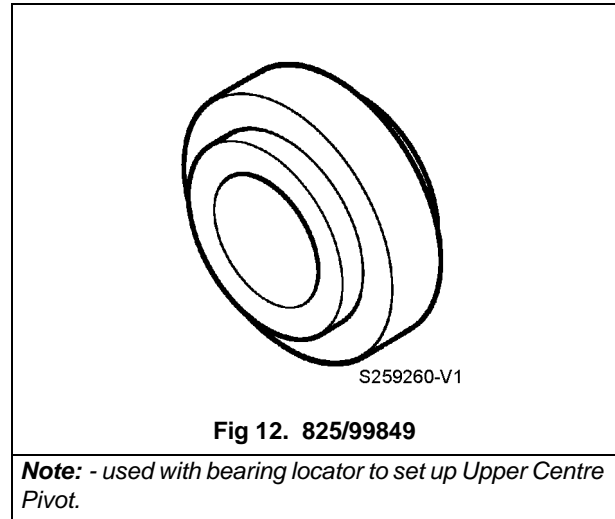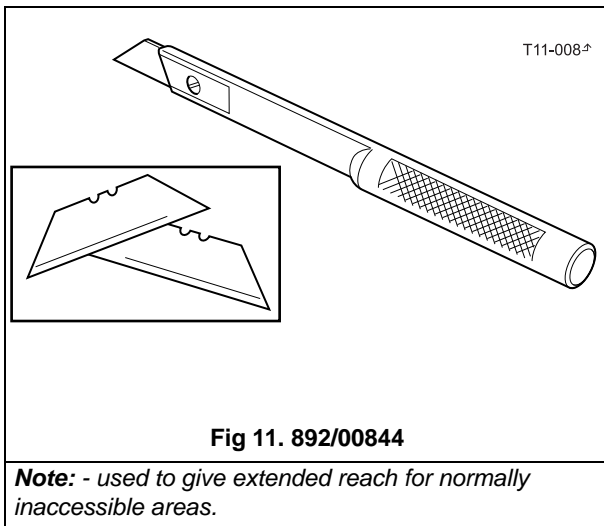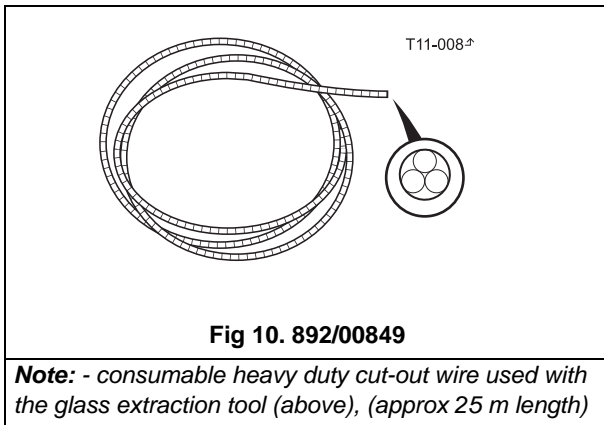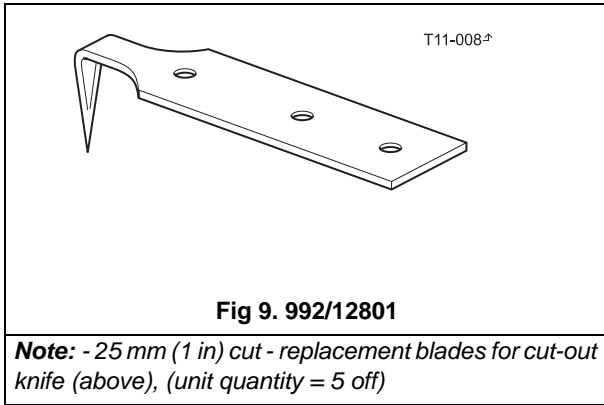



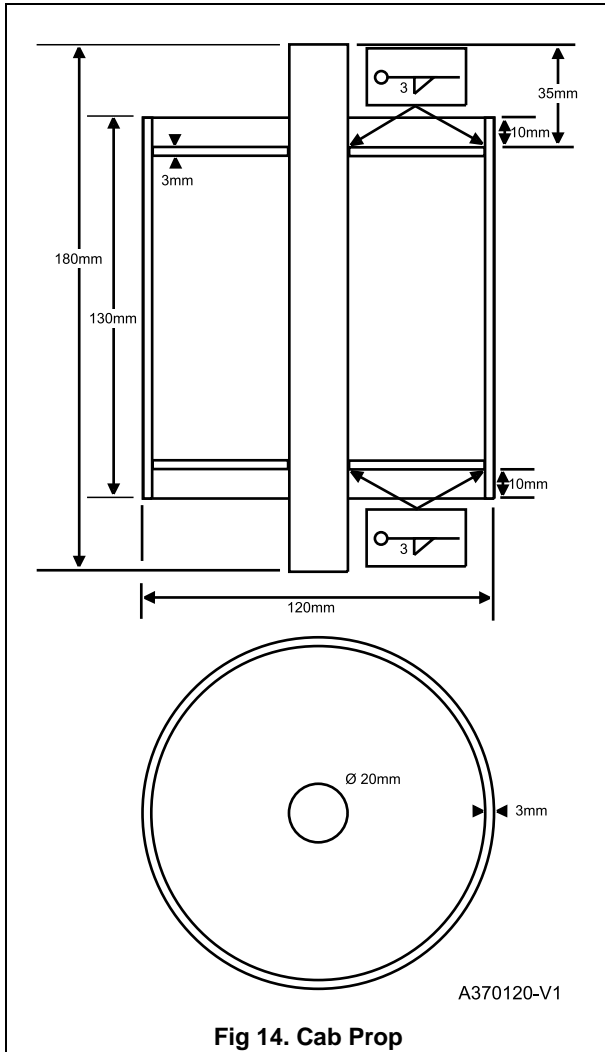

**Fig 14. Cab Prop**

**Note:** - used to support cab in the raised position. A minimum of 2 are required to support the side where work is being carried out. It is recommended that 4 are used to support the cab level. Manufacture from mild steel. Tube wall and plate minimum thickness must be 3 mm.

**Thanks for your reading.**

**Please click here to download complete manual instantly.**

**And can also choose other manuals.**

**Feel free --->write to me with any questions.**

**Our service email:**

**manuals007@hotmail.com**